


# EHS

## Technical Data Book

### EHS Split for Europe

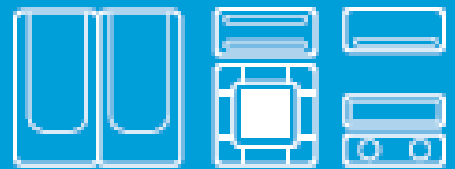

Model : AE\*\*\*JNYD\*H/EU(R410A)  
AE\*\*\*JXED\*H/EU(R410A)  
AE\*\*\*RNYD\*G/EU(R32)  
AE\*\*\*RXED\*G/EU(R32)

## ※ History List

Version	Date	Update Information
1.0	'15.02.27	- 2015 New EHS SPLIT TDB Released. (Modify the Spec Note)
1.1	'15.03.06	- Modify : Note(Spec, Capacity Table) / Electric Diagram / OD Drawing Mixing Valve - Add : Mixing Valve Page / DHW Oper. Rnage
1.2	'15.04.06	- Modify : Sound Pressure - Add : SCOP / ESEER
1.3	'15.06.10	- Modify : Typing Error (Outdoor Power)
1.4	'15.06.15	- Modify : Change the Note for Refrigerant
1.5	'15.06.22	- Modify : Change the Shipping Dimension for Hydro
1.6	'15.08.27	- Add : System capacity for Max & Min
1.7	'16.04.11	- Modify : SCOP / ESEER / COP (A2W35 & A-7W35) / Cooling Nominal Capacity Air Flow Rate (Outdoor Unit) / Heating Capacity Table (Peak & Integrated) Outdoor Unit Drawing
1.8	'16.09.02	- Modify : Capacity & COP (P7, 8, 9, 10) Bottom view (P22) Power Supply (P35)
1.9	'16.10.27	- Add Heat Exchanger type & Installation part
2.0	'16.12.09	- Add tCO2e data (Specifications)
2.1	'18.07.10	- Revised the spec error (P.8)
2.2	'18.10.31	- Revised Compressor Oil type of outdoor unit data and SCOP(35°C) data
3.0	'19.07.05	- Added 2019 new lin up (R32)

# +++++ Contents



## **I. Products**

1. Nomenclature .....	5
2. Line-up .....	7
3. System Specification.....	9

## **II. Outdoor Unit**

1. Specifications .....	15
2. Capacity Tables .....	20
3. Capacity Correction .....	26
4. Dimensional Drawings .....	28
5. Cycle Diagrams .....	31
6. Wiring Diagrams .....	33
7. Electric Specifications .....	39
8. Sound Pressure Level .....	40
9. Operation Range .....	44

## **III. Hydro Unit**

1. Specifications .....	47
2. Dimensional Drawings .....	50
3. Cycle Diagrams .....	51
4. Wiring Diagrams .....	53
5. Electric Specifications .....	57
6. Hydraulic Performance .....	60

## **IV. Application**

Application Examples .....	62
Mixing Valve.....	64
Installation .....	65

# I. Products

1. Nomenclature .....	5
2. Line-up .....	7
3. System Specification.....	9

# 1. Nomenclature

## 1-1. Outdoor Unit

### Model Name (New)

<b>AE</b>	<b>060</b>	<b>J</b>	<b>X</b>	<b>E</b>	<b>D</b>	<b>E</b>	<b>H</b>	<b>/</b>	<b>EU</b>
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)		(Buyer)

<b>(1) Classification</b>		<b>(5) Type</b>	
AE	EHS	E	Single (EHS)
<b>(2) Capacity</b>		<b>(6) Feature 1</b>	
x 1/10 kW (3 digits)		D	DELUXE (Basic)
<b>(3) Version</b>		<b>(7) Rating Voltage</b>	
J	2015	E	1Φ, 220~240V, 50Hz
R	2019	G	3Φ, 380~415V, 50Hz
<b>(4) Product Type</b>		<b>(8) Mode</b>	
N	Indoor	H	R410A
X	Outdoor	G	R32

# 1. Nomenclature

## 1-2. Indoor Unit

### Model Name (New)

<b>AE</b>	<b>090</b>	<b>J</b>	<b>N</b>	<b>Y</b>	<b>D</b>	<b>E</b>	<b>H</b>	<b>/</b>	<b>EU</b>
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)		(Buyer)

(1) Classification I	
AE	EHS

(2) Capacity	
x 1/10 kW (3 digits)	

(3) Version	
J	2015
R	2019

(4) Product Type	
N	Indoor
X	Outdoor

(5) Type	
Y	Hydro Unit (Wall Mounted)
B	Hydro Unit (Floor Standing)
X	Cylinder Unit
W	Water Tank

(6) Feature 1	
D	STANDRAD

(7) Rating Voltage	
E	1Φ, 220~240V, 50Hz
G	3Φ, 380~415V, 50Hz

(8) Mode	
H	R410A
G	R32

## 2. Line-up (R410A)

### 2-1. Outdoor Unit

Split Type	Capacity (kW)					
	4.0	6.0	9.0	12.0	14.0	16.0
Single Phase	●	●	●	●	●	●
3 Phase			●	●	●	●

### 2-2. Indoor Unit

Hydro Unit	Capacity (kW)	
	9.0	16.0
Single Phase	●	●
3 Phase	●	●

### 2-3. Combination Table

Outdoor Unit		Hydro Unit			
Model Name	Type	AE090JNYDEH/**	AE090JNYDGH/**	AE160JNYDEH/**	AE160JNYDGH/**
AE040JXEDEH/EU	Reversible	●			
AE060JXEDEH/EU	Reversible	●			
AE090JXEDEH/EU	Reversible	●			
AE120JXEDEH/EU	Reversible			●	
AE140JXEDEH/EU	Reversible			●	
AE160JXEDEH/EU	Reversible			●	
AE090JXEDGH/EU	Reversible		●		
AE120JXEDGH/EU	Reversible				●
AE140JXEDGH/EU	Reversible				●
AE160JXEDGH/EU	Reversible				●

## 2. Line-up (R32)

### 2-1. Outdoor Unit

Split Type	Capacity (kW)		
	4.0	6.0	9.0
Single Phase	●	●	●
3 Phase			●

### 2-2. Indoor Unit

Hydro Unit	Capacity (kW)	
	9.0	
Single Phase	●	
3 Phase	●	

### 2-3. Combination Table

Outdoor Unit		Hydro Unit	
Model Name	Type	AE090RNYDEG/EU	AE090RNYDGG/EU
AE040RXEDEG/EU	Reversible	●	
AE060RXEDEG/EU	Reversible	●	
AE090RXEDEG/EU	Reversible	●	
AE090RXEDGG/EU	Reversible		●



### 3. System Specification

Model Name		Indoor Unit		AE090JNYDEH/EU	AE090JNYDEH/EU	AE090JNYDEH/EU			
		Outdoor Unit		AE040JXEDEH/EU	AE060JXEDEH/EU	AE090JXEDEH/EU			
System	Mode			-	Heat Pump (A2W)	Heat Pump (A2W)	Heat Pump (A2W)		
	Performance (A7/W35) <sup>*1</sup>	Nominal Capacity	Heating (Min/Std/Max)	kW	1.67 / 4.40 / 4.40	1.67 / 6.00 / 6.00	2.39 / 9.00 / 9.00		
				Btu/h	5,700 / 15,000 / 15,000	5,700 / 20,500 / 20,500	8,200 / 30,700 / 30,700		
			Cooling (Min/Std/Max)	kW	1.63 / 5.00 / 5.00	1.63 / 6.50 / 6.50	1.82 / 8.00 / 8.00		
				Btu/h	5,500 / 17,100 / 17,100	5,500 / 22,200 / 22,200	6,200 / 27,300 / 27,300		
		Power Input (Nominal)	Heating (Min/Std/Max)	kW	0.35 / 0.86 / 0.86			0.35 / 1.25 / 1.25	0.54 / 2.01 / 2.01
					Cooling (Min/Std/Max)	0.44 / 1.26 / 1.26			0.44 / 1.75 / 1.75
		Current Input (Nominal)	Heating (Min/Std/Max)	A		1.6 / 4.1 / 4.1			1.6 / 5.7 / 5.7
					Cooling (Min/Std/Max)	2.0 / 5.7 / 5.7			2.0 / 8.0 / 8.0
		COP (Nominal Heating)					5.10	4.80	4.48
		EER (Nominal Cooling)				3.97	3.71	3.64	
	SCOP(35℃)				4.46	4.45	4.41		
	ESEER				5.37	5.35	4.79		
	Performance (A2/W35) <sup>*2</sup>	Capacity		Heating	W	4,100	5,000	7,700	
		COP				3.73	3.42	3.38	
	Performance (A-7/W35) <sup>*3</sup>	Capacity		Heating	W	4,400	5,100	7,600	
		COP				2.75	2.49	2.45	
	Field Wiring	MCA			A	20	20	22	
		MFA			A	25	25	27.5	
	Water Connections	Water Flow Rate (Heating / Cooling)			LPM	13/15	17/20	26/25	
		Water Pressure (Max)			bar	3	3	3	
		Water Pipe	Inlet	Φ, inch	BSPP male 1 1/4"			BSPP male 1 1/4"	BSPP male 1 1/4"
					Outlet	Φ, inch	BSPP male 1 1/4"		
		Leaving Water Temperature	Heating	°C			25~55		
	Cooling				°C	5~25			5~25
		Refrigerant Connections	Liquid Pipe			Φ, mm	6.35		
	Φ, inch				1/4"			1/4"	1/4"
			Gas Pipe		Φ, mm	15.88			15.88
	Φ, inch					5/8"			5/8"
			Installation Limitation	Max. Length		m	30	30	50
Max. Height		m		20	20	30			
Chargeless Length			m	15	15	15			
Operating Temp. Range	Heating (A2W) <sup>*4</sup>			°C	-25~35	-25~35	-25~35		
	Cooling (A2W)			°C	10~46	10~46	10~46		
	DHW (A2W) <sup>*5</sup>			°C	-25~43	-25~43	-25~43		

\*1) A2W Condition #1 : (Heating) Water In/Out 30℃/35℃, Outdoor Air 7℃DB/6℃WB; (Cooling) Water In/Out 23℃/18℃, Outdoor Air 35℃DB.

\*2) A2W Condition #2 : (Heating) Water In/Out 30℃/35℃, Outdoor Air 2℃DB

\*3) A2W Condition #3 : (Heating) Water In/Out 30℃/35℃, Outdoor Air -7℃DB

\*4) The system is operated in (-25℃ ≤ Outdoor temp < -20℃) condition, but no guarantee of capacity.

\*5) The system is operated by only Booster Heater in special condition( 35℃ < Outdoor temp. ≤ 43℃).

### 3. System Specification

Model Name		Indoor Unit			AE160JNYDEH/EU	AE160JNYDEH/EU	AE160JNYDEH/EU	
		Outdoor Unit			AE120JXEDEH/EU	AE140JXEDEH/EU	AE160JXEDEH/EU	
System	Mode			-	Heat Pump (A2W)	Heat Pump (A2W)	Heat Pump (A2W)	
	Performance (A7/W35) <sup>*1</sup>	Nominal Capacity	Heating (Min/Std/Max)	kW	3.75 / 12.00 / 12.00	3.75 / 14.00 / 14.00	3.75 / 16.00 / 16.00	
				Btu/h	12,800 / 40,900 / 40,900	12,800 / 47,800 / 47,800	12,800 / 54,600 / 54,600	
			Cooling (Min/Std/Max)	kW	3.30 / 12.00 / 12.00	3.30 / 14.00 / 14.00	3.30 / 15.00 / 15.00	
				Btu/h	11,300 / 40,900 / 40,900	11,300 / 47,800 / 47,800	11,300 / 51,200 / 51,200	
		Power Input (Nominal)	Heating (Min/Std/Max)	kW	0.81 / 2.59 / 2.59	0.81 / 3.15 / 3.15	0.81 / 3.76 / 3.76	
					Cooling (Min/Std/Max)	0.85 / 3.10 / 3.10	0.85 / 3.80 / 3.80	0.85 / 4.14 / 4.14
		Current Input (Nominal)	Heating (Min/Std/Max)	A	3.7 / 11.7 / 11.7	3.7 / 14.3 / 14.3	3.7 / 16.9 / 16.9	
					Cooling (Min/Std/Max)	3.9 / 14.0 / 14.0	3.9 / 17.0 / 17.0	3.9 / 18.6 / 18.6
		COP (Nominal Heating)				4.63	4.44	4.26
		EER (Nominal Cooling)				3.87	3.68	3.62
	SCOP(35℃)				4.67	4.59	4.40	
	ESEER				4.93	4.91	4.89	
	Performance (A2/W35) <sup>*2</sup>	Capacity		Heating	W	11,000	12,100	13,700
		COP				3.48	3.40	3.26
	Performance (A-7/W35) <sup>*3</sup>	Capacity		Heating	W	11,300	12,500	13,800
		COP				2.76	2.72	2.53
	Field Wiring	MCA			A	28	30	32
		MFA			A	35	37.5	40
	Water Connections	Water Flow Rate (Heating / Cooling)			LPM	35/35	40/40	46/44
		Water Pressure (Max)			bar	3	3	3
		Water Pipe	Inlet	Φ, inch	BSPP male 1 1/4"	BSPP male 1 1/4"	BSPP male 1 1/4"	
					Outlet	Φ, inch	BSPP male 1 1/4"	BSPP male 1 1/4"
		Leaving Water Temperature	Heating	°C	25~55	25~55	25~55	
	Cooling				°C	5~25	5~25	5~25
	Refrigerant Connections	Liquid Pipe			Φ, mm	9.52	9.52	9.52
					Φ, inch	3/8"	3/8"	3/8"
		Gas Pipe			Φ, mm	15.88	15.88	15.88
					Φ, inch	5/8"	5/8"	5/8"
		Installation Limitation	Max. Length	m	50	50	50	
Max. Height					m	30	30	30
Chargeless Length			m	15	15	15		
Operating Temp. Range	Heating (A2W) <sup>*4</sup>			°C	-25~35	-25~35	-25~35	
	Cooling (A2W)			°C	10~46	10~46	10~46	
	DHW (A2W) <sup>*5</sup>			°C	-25~43	-25~43	-25~43	

\*1) A2W Condition #1 : (Heating) Water In/Out 30℃/35℃, Outdoor Air 7℃DB/6℃WB; (Cooling) Water In/Out 23℃/18℃, Outdoor Air 35℃DB.

\*2) A2W Condition #2 : (Heating) Water In/Out 30℃/35℃, Outdoor Air 2℃DB

\*3) A2W Condition #3 : (Heating) Water In/Out 30℃/35℃, Outdoor Air -7℃DB

\*4) The system is operated in (-25℃ ≤ Outdoor temp < -20℃) condition, but no guarantee of capacity.

\*5) The system is operated by only Booster Heater in special condition(35℃ < Outdoor temp. ≤ 43℃).

### 3. System Specification

Model Name		Indoor Unit		AE090JNYDGH/EU	AE160JNYDGH/EU	AE160JNYDGH/EU		
		Outdoor Unit		AE090JXEDGH/EU	AE120JXEDGH/EU	AE140JXEDGH/EU		
System	Mode			-	Heat Pump (A2W)	Heat Pump (A2W)	Heat Pump (A2W)	
	Performance (A7/W35) <sup>*1</sup>	Nominal Capacity	Heating (Min/Std/Max)	kW	2.48 / 9.00 / 9.00	3.75 / 12.00 / 12.00	3.75 / 14.00 / 14.00	
				Btu/h	8,400 / 30,700 / 30,700	12,800 / 40,900 / 40,900	12,800 / 47,800 / 47,800	
			Cooling (Min/Std/Max)	kW	1.88 / 7.50 / 7.50	3.30 / 12.00 / 12.00	3.30 / 14.00 / 14.00	
				Btu/h	6,400 / 25,600 / 25,600	11,300 / 40,900 / 40,900	11,300 / 47,800 / 47,800	
		Power Input (Nominal)	Heating (Min/Std/Max)	kW	0.55 / 2.01 / 2.01		0.81 / 2.59 / 2.59	
					0.52 / 2.06 / 2.06		0.85 / 3.10 / 3.10	
		Current Input (Nominal)	Heating (Min/Std/Max)	A	0.9 / 3.3 / 3.3		1.3 / 4.1 / 4.1	
					Cooling (Min/Std/Max)	0.9 / 3.4 / 3.4		1.3 / 4.7 / 4.7
		COP (Nominal Heating)					4.48	4.63
		EER (Nominal Cooling)				3.64	3.87	3.68
	SCOP(35°C)				4.54	4.67	4.59	
	ESEER				4.65	4.93	4.91	
	Performance (A2/W35) <sup>*2</sup>	Capacity		Heating	W	7,700	11,000	12,100
		COP				3.38	3.48	3.40
	Performance (A-7/W35) <sup>*3</sup>	Capacity		Heating	W	7,600	11,300	12,500
		COP				2.45	2.76	2.72
	Field Wiring	MCA		A	10	10	11	
		MFA		A	16.1	16.1	16.1	
	Water Connections	Water Flow Rate (Heating / Cooling)		LPM	26/22	35/35	40/40	
		Water Pressure (Max)		bar	3	3	3	
		Water Pipe	Inlet	Φ, inch	BSP male 1 1/4"	BSP male 1 1/4"	BSP male 1 1/4"	
			Outlet	Φ, inch	BSP male 1 1/4"	BSP male 1 1/4"	BSP male 1 1/4"	
		Leaving Water Temperature	Heating	°C	25~55	25~55	25~55	
	Cooling			°C	5~25	5~25	5~25	
	Refrigerant Connections	Liquid Pipe		Φ, mm	6.35	9.52	9.52	
				Φ, inch	1/4"	3/8"	3/8"	
		Gas Pipe		Φ, mm	15.88	15.88	15.88	
				Φ, inch	5/8"	5/8"	5/8"	
		Installation Limitation	Max. Length	m	50	50	50	
Max. Height				m	30	30	30	
	Chargeless Length			m	15	15	15	
Operating Temp. Range	Heating (A2W) <sup>*4</sup>		°C	-25~35	-25~35	-25~35		
	Cooling (A2W)		°C	10~46	10~46	10~46		
	DHW (A2W) <sup>*5</sup>		°C	-25~43	-25~43	-25~43		

\*1) A2W Condition #1 : (Heating) Water In/Out 30°C/35°C, Outdoor Air 7°C DB/6°C WB; (Cooling) Water In/Out 23°C/18°C, Outdoor Air 35°C DB.

\*2) A2W Condition #2 : (Heating) Water In/Out 30°C/35°C, Outdoor Air 2°C DB

\*3) A2W Condition #3 : (Heating) Water In/Out 30°C/35°C, Outdoor Air -7°C DB

\*4) The system is operated in (-25°C ≤ Outdoor temp < -20°C) condition, but no guarantee of capacity.

\*5) The system is operated by only Booster Heater in special condition( 35°C < Outdoor temp. ≤ 43°C).

### 3. System Specification

Model Name		Indoor Unit			AE160JNYDGH/EU	
		Outdoor Unit			AE160JXEDGH/EU	
System	Mode			-	Heat Pump (A2W)	
	Performance (A7/W35) <sup>*1</sup>	Nominal Capacity	Heating (Min/Std/Max)	kW	3.75 / 16.00 / 16.00	
				Btu/h	12,800 / 54,600 / 54,600	
			Cooling (Min/Std/Max)	kW	3.30 / 15.00 / 15.00	
				Btu/h	11,300 / 51,200 / 51,200	
		Power Input (Nominal)	Heating (Min/Std/Max)	kW	0.81 / 3.76 / 3.76	
					Cooling (Min/Std/Max)	0.85 / 4.14 / 4.14
		Current Input (Nominal)	Heating (Min/Std/Max)	A		1.3 / 5.7 / 5.7
					Cooling (Min/Std/Max)	1.3 / 6.2 / 6.2
		COP (Nominal Heating)				
		EER (Nominal Cooling)				3.62
	SCOP(35℃)				4.40	
	ESEER				4.89	
	Performance (A2/W35) <sup>*2</sup>	Capacity	Heating	W	13,700	
		COP			3.26	
	Performance (A-7/W35) <sup>*3</sup>	Capacity	Heating	W	13,800	
		COP			2.53	
	Field Wiring	MCA			A 12	
		MFA			A 16.1	
	Water Connections	Water Flow Rate (Heating / Cooling)			LPM 46/44	
		Water Pressure (Max)			bar 3	
		Water Pipe	Inlet	Φ, inch	BSPP male 1 1/4"	
			Outlet	Φ, inch	BSPP male 1 1/4"	
		Leaving Water Temperature	Heating	°C	25~55	
	Cooling		°C	5~25		
	Refrigerant Connections	Liquid Pipe		Φ, mm	9.52	
				Φ, inch	3/8"	
		Gas Pipe		Φ, mm	15.88	
				Φ, inch	5/8"	
		Installation Limitation	Max. Length	m	50	
	Max. Height		m	30		
	Chargeless Length			m	15	
	Operating Temp. Range	Heating (A2W) <sup>*4</sup>			°C -25~35	
Cooling (A2W)			°C 10~46			
DHW (A2W) <sup>*5</sup>			°C -25~43			

\*1) A2W Condition #1 : (Heating) Water In/Out 30℃/35℃, Outdoor Air 7℃DB/6℃WB; (Cooling) Water In/Out 23℃/18℃, Outdoor Air 35℃DB.

\*2) A2W Condition #2 : (Heating) Water In/Out 30℃/35℃, Outdoor Air 2℃DB

\*3) A2W Condition #3 : (Heating) Water In/Out 30℃/35℃, Outdoor Air -7℃DB

\*4) The system is operated in (-25℃ ≤ Outdoor temp < -20℃) condition, but no guarantee of capacity.

\*5) The system is operated by only Booster Heater in special condition( 35℃ < Outdoor temp. ≤ 43℃).

### 3. System Specification

Model Name	Indoor Unit			AE090RNYDEG/EU	AE090RNYDEG/EU	AE090RNYDEG/EU	AE090RNYDGG/EU	
	Outdoor Unit			AE040RXEDEG/EU	AE060RXEDEG/EU	AE090RXEDEG/EU	AE090RXEDGG/EU	
System	Mode			-	Heat Pump (A2W)	Heat Pump (A2W)	Heat Pump (A2W)	Heat Pump (A2W)
	Performance (A7/W35) <sup>*1</sup>	Nominal Capacity	Heating	kW	4.40	6.00	9.00	9.00
				Btu/h	15,000	20,500	30,700	30,700
			Cooling	kW	5.00	6.50	8.70	8.70
				Btu/h	17,100	22,200	29,700	29,700
		Power Input (Nominal)	Heating	kW	0.85	1.22	1.87	1.87
					Cooling	1.09	1.47	2.11
		Current Input (Nominal)	Heating	A	3.90	5.60	8.60	3.00
					Cooling	4.90	6.70	9.70
		COP (Nominal Heating)			5.20	4.92	4.81	4.81
		EER (Nominal Cooling)			4.59	4.42	4.12	4.12
	SCOP (35°C)			4.58	4.58	4.45	4.45	
	SEER			4.40	4.73	5.09	5.09	
	Performance (A7/W45) <sup>*4</sup>	Capacity	Heating	W	4,200	5,600	8,600	8,600
		COP			3.85	3.71	3.69	3.69
	Performance (A7/W55) <sup>*5</sup>	Capacity	Heating	W	3,900	5,200	8,000	8,000
		COP			2.95	2.87	2.93	2.93
	Performance (A2/W35) <sup>*2</sup>	Capacity	Heating	W	4,200	5,200	7,700	7,700
		COP			3.82	3.51	3.41	3.41
	Performance (A-7/W35) <sup>*3</sup>	Capacity	Heating	W	4,600	5,500	7,900	7,900
		COP			2.97	2.75	2.72	2.72
	Field Wiring	MCA		A	16.0	16.0	22.0	10.0
		MFA		A	20.0	20.0	27.5	16.1
	Water Connections	Water Flow Rate (Heating / Cooling)		LPM	12.7/14.4	17.3/18.8	26/25.1	26/25.1
		Water Pressure (Max)		bar	3	3	3	3
		Water Pipe	Inlet	Φ, inch	BSPP male 1 1/4"	BSPP male 1 1/4"	BSPP male 1 1/4"	BSPP male 1 1/4"
			Outlet	Φ, inch	BSPP male 1 1/4"	BSPP male 1 1/4"	BSPP male 1 1/4"	BSPP male 1 1/4"
		Leaving Water Temperature	Heating	°C	15~65	15~65	15~65	15~65
	Cooling		°C	5~25	5~25	5~25	5~25	
	Refrigerant Connections	Liquid Pipe		Φ, mm	6.35	6.35	6.35	6.35
				Φ, inch	1/4"	1/4"	1/4"	1/4"
		Gas Pipe		Φ, mm	15.88	15.88	15.88	15.88
				Φ, inch	5/8"	5/8"	5/8"	5/8"
		Installation Limitation	Max. Length	m	30	30	35	35
			Max. Height	m	20	20	20	20
	Chargeless Length			m	15	15	15	15
	Operating Temp. Range	Heating (A2W) <sup>*6</sup>		°C	-25~35	-25~35	-25~35	-25~35
		Cooling (A2W)		°C	10~46	10~46	10~46	10~46
		D.Hot Water (A2W) <sup>*7</sup>		°C	-25~43	-25~43	-25~43	-25~43

\*1) A2W Condition #1 : (Heating) Water In/Out 30°C/35°C, Outdoor Air 7°C DB/6°C WB; (Cooling) Water In/Out 23°C/18°C, Outdoor Air 35°C DB.

\*2) A2W Condition #2 : (Heating) Water In/Out 30°C/35°C, Outdoor Air 2°C DB

\*3) A2W Condition #3 : (Heating) Water In/Out 30°C/35°C, Outdoor Air -7°C DB

\*4) A2W Condition #4 : (Heating) Water In/Out 40°C/45°C, Outdoor Air 7°C DB

\*5) A2W Condition #5 : (Heating) Water In/Out 47°C/55°C, Outdoor Air 7°C DB

\*6) The system is operated in (-25°C ≤ Outdoor temp < -20°C) condition, but no guarantee of capacity.

\*7) The system is operated by only Booster Heater in special condition(35°C < Outdoor temp. ≤ 43°C).

## II. Outdoor Unit

1. Specifications .....	15
2. Capacity Tables .....	20
3. Capacity Correction .....	26
4. Dimensional Drawings .....	28
5. Cycle Diagrams .....	31
6. Wiring Diagrams .....	33
7. Electric Specifications .....	39
8. Sound Pressure Level .....	40
9. Operation Range .....	44

# 1. Specifications

## 1-1. Outdoor Unit (R410A 1Φ)

Model Name		Outdoor Unit		AE040JXEDEH/EU	AE060JXEDEH/EU	AE090JXEDEH/EU	
Outdoor Unit	Power Supply		V, Hz, Φ	220~240V, 50Hz, 1Φ	220~240V, 50Hz, 1Φ	220~240V, 50Hz, 1Φ	
	Compressor	Type	-	BLDC Twin Rotary	BLDC Twin Rotary	BLDC Twin Rotary	
		Model	-	UG4TH8200FE4SG	UG4TH8200FE4SG	UG8TH8265FJW	
		Oil Type	-	POE	POE	POE	
	Condenser	Size	-	2RX28S	2RX28S	2RX46S	
	Motor	Type (Model)	-	SIC-67FV-F135-2	SIC-67FV-F135-2	FMDC531SSA	
		Quantity	EA	1	1	1	
		CODE No	-	DB31-00492A	DB31-00492A	DB31-00579A	
	Fan	Air Flow Rate	Cooling	CMM	40	43	66
		Number of Unit		EA	1	1	1
	4-Way Valve	Type (Model)		SHF-7H-34U	SHF-7H-34U	SHF-11H	
	Base Heater	Power Input	W	X	X	150	
	Sound *1	Sound Pressure	Heating	dB(A)	46	47	49
			Cooling	dB(A)	46	47	50
		Sound Power	Heating	dB(A)	61	61	64
			Cooling	dB(A)	63	63	63
	External Dimension	Net Weight		kg	48.5	48.5	68.0
		Shipping Weight		kg	51.5	51.5	78.0
		Net Dimensions (WxHxD)		mm	880 x 638 x 310	880 x 638 x 310	940 x 998 x 330
		Shipping Dimensions (WxHxD)		mm	1,023 x 725 x 413	1,023 x 725 x 413	995 x 1,178 x 426
Refrigerant	Type	-	R410A	R410A	R410A		
	Control Method	-	EEV	EEV	EEV		
	Factory Charging	g / tCO <sub>2</sub> e	1,400 / 2.92	1,400 / 2.92	1,700 / 3.55		

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

2) These products contain R410A(GWP=2,088) which is fluorinated greenhouse gas.

※ Heat Exchanger type : Plate Heat Exchanger(PHE) (STS)

# 1. Specifications

## 1-1. Outdoor Unit (R410A 1Φ)

Model Name	Outdoor Unit			AE120JXEDEH/EU	AE140JXEDEH/EU	AE160JXEDEH/EU	
Outdoor Unit	Power Supply		V, Hz, Φ	220~240V, 50Hz, 1Φ	220~240V, 50Hz, 1Φ	220~240V, 50Hz, 1Φ	
	Compressor	Type	-	BLDC Twin Rotary	BLDC Twin Rotary	BLDC Twin Rotary	
		Model	-	UG5T450FUEJX	UG5T450FUEJX	UG5T450FUEJX	
		Oil Type	-	PVE	PVE	PVE	
	Condenser	Size	-	2RX66S	2RX66S	2RX66S	
	Motor	Type (Model)	-	FMDC531SSA	FMDC531SSA	FMDC531SSA	
		Quantity	EA	2	2	2	
		CODE No	-	DB31-00579A	DB31-00579A	DB31-00579A	
	Fan	Air Flow Rate	Cooling	CMM	99	108	118
		Number of Unit		EA	2	2	2
	4-Way Valve	Type (Model)		SHF-20D-46	SHF-20D-46	SHF-20D-46	
	Base Heater	Power Input	W	150	150	150	
	Sound *1	Sound Pressure	Heating	dB(A)	50	50	52
			Cooling	dB(A)	50	52	54
		Sound Power	Heating	dB(A)	64	64	66
			Cooling	dB(A)	64	66	69
	External Dimension	Net Weight		kg	100.0	100.0	100.0
		Shipping Weight		kg	109.5	109.5	109.5
		Net Dimensions (WxHxD)		mm	940 x 1,420 x 330	940 x 1,420 x 330	940 x 1,420 x 330
		Shipping Dimensions (WxHxD)		mm	995 x 1,598 x 426	995 x 1,598 x 426	995 x 1,598 x 426
Refrigerant	Type	-	R410A	R410A	R410A		
	Control Method	-	EEV	EEV	EEV		
	Factory Charging	g / tCO <sub>2</sub> e	2,980 / 6.22	2,980 / 6.22	2,980 / 6.22		

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

2) These products contain R410A(GWP=2,088) which is fluorinated greenhouse gas.

※ Heat Exchanger type : Plate Heat Exchanger(PHE) (STS)



# 1. Specifications

## 1-2. Outdoor Unit (R410A 3Φ)

Model Name	Outdoor Unit			AE090JXEDGH/EU	AE120JXEDGH/EU	
Outdoor Unit	Power Supply		V, Hz, Φ	380~415V, 50Hz, 3Φ	380~415V, 50Hz, 3Φ	
	Compressor	Type	-	BLDC Twin Rotary	BLDC Twin Rotary	
		Model	-	UG8T300FUCJU	UG5T450FUFJX	
		Oil Type	-	PVE	PVE	
	Condenser	Size	-	2RX46S	2RX66S	
	Motor	Type (Model)	-	FMDC531SSA	FMDC531SSA	
		Quantity	EA	1	2	
		CODE No	-	DB31-00579A	DB31-00579A	
	Fan	Air Flow Rate	Cooling	CMM	66	99
		Number of Unit		EA	1	2
	4-Way Valve	Type (Model)		SHF-11H	SHF-20D-46	
	Base Heater	Power Input	W	150	150	
	Sound *	Sound Pressure	Heating	dB(A)	49	50
			Cooling	dB(A)	50	50
		Sound Power	Heating	dB(A)	64	64
			Cooling	dB(A)	63	64
	External Dimension	Net Weight		kg	76.0	101.5
		Shipping Weight		kg	84.5	111.0
		Net Dimensions (WxHxD)		mm	940 x 998 x 330	940 x 1,420 x 330
		Shipping Dimensions (WxHxD)		mm	995 x 1,178 x 426	995 x 1,598 x 426
Refrigerant	Type	-	R410A	R410A		
	Control Method	-	EEV	EEV		
	Factory Charging	g / tCO <sub>2</sub> e	1,900 / 3.97	2,980 / 6.22		

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

2) These products contain R410A(GWP=2,088) which is fluorinated greenhouse gas.

※ Heat Exchanger type : Plate Heat Exchanger(PHE) (STS)

# 1. Specifications

## 1-2. Outdoor Unit (R410A 3Φ)

Model Name		Outdoor Unit		AE140JXEDGH/EU	AE160JXEDGH/EU	
Outdoor Unit	Power Supply		V, Hz, Φ	380~415V, 50Hz, 3Φ	380~415V, 50Hz, 3Φ	
	Compressor	Type	-	BLDC Twin Rotary	BLDC Twin Rotary	
		Model	-	UG5T450FUFJX	UG5T450FUFJX	
		Oil Type	-	PVE	PVE	
	Condenser	Size	-	2RX66S	2RX66S	
	Motor	Type (Model)	-	FMDC531SSA	FMDC531SSA	
		Quantity	EA	2	2	
		CODE No	-	DB31-00579A	DB31-00579A	
	Fan	Air Flow Rate	Cooling	CMM	108	118
		Number of Unit		EA	2	2
	4-Way Valve	Type (Model)		SHF-20D-46	SHF-20D-46	
	Base Heater	Power Input	W	150	150	
	Sound *1	Sound Pressure	Heating	dB(A)	50	52
			Cooling	dB(A)	52	54
		Sound Power	Heating	dB(A)	64	66
			Cooling	dB(A)	66	69
	External Dimension	Net Weight		kg	101.5	101.5
		Shipping Weight		kg	111.0	111.0
		Net Dimensions (WxHxD)		mm	940 x 1,420 x 330	940 x 1,420 x 330
		Shipping Dimensions (WxHxD)		mm	995 x 1,598 x 426	995 x 1,598 x 426
Refrigerant	Type	-	R410A	R410A		
	Control Method	-	EEV	EEV		
	Factory Charging	g / tCO <sub>2</sub> e	2,980 / 6.22	2,980 / 6.22		

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

2) These products contain R410A(GWP=2,088) which is fluorinated greenhouse gas.

※ Heat Exchanger type : Plate Heat Exchanger(PHE) (STS)

# 1. Specifications

## 1-3. Outdoor Unit (R32)

Model Name	Indoor Unit			AE090RNYDEG/EU	AE090RNYDEG/EU	AE090RNYDEG/EU	AE090RNYDGG/EU	
	Outdoor Unit			AE040RXEDEG/EU	AE060RXEDEG/EU	AE090RXEDEG/EU	AE090RXEDGG/EU	
Outdoor Unit	Power Supply		V, Hz, $\Phi$	220~240V, 50Hz, 1 $\Phi$	220~240V, 50Hz, 1 $\Phi$	220~240V, 50Hz, 1 $\Phi$	380~4150V, 50Hz, 3 $\Phi$	
	Compressor	Type	-	BLDC Twin Rotary	BLDC Twin Rotary	BLDC Twin Rotary	BLDC Twin Rotary	
		Model	-	UB4TN8200FE4SS	UB4TN8200FE4SS	UB8TN8265FJWSG	UB8TN8265FJWSG	
		Oil Type	-	POE	POE	POE	POE	
	Condenser	Size		-	2RX28S	2RX28S	2RX46S	2RX46S
		Motor	Type (Model)		-	YMAP095AE01A1	YMAP095AE01A1	FMDC531SSA
	Quantity		EA	1	1	1	1	
	CODE No		-	DB31-00658D	DB31-00658D	DB31-00579A	DB31-00579A	
	Fan	Air Flow Rate	Cooling	CMM	40	43	66	66
		Number of Unit		EA	1	1	1	1
	4-Way Valve	Type (Model)			SHF-7H-34U	SHF-7H-34U	SHF-11H	SHF-11H
	Base Heater	Power Input		W	N/A	N/A	150	150
	Sound	Sound Pressure	Heating	dB(A)	44	47	49	49
			Cooling	dB(A)	46	47	49	49
			Night Mode	dB(A)	-	35	35	35
		Sound Power	Heating	dB(A)	58	60	64	64
	Cooling		dB(A)	61	62	63	63	
	External Dimension	Net Weight		kg	46.5	46.5	73.0	72.0
		Shipping Weight		kg	49.5	49.5	81.5	80.5
		Net Dimensions (WxHxD)		mm	880 x 638 x 310	880 x 638 x 310	940 x 998 x 330	940 x 998 x 330
Shipping Dimensions (WxHxD)		mm	1,023 x 742 x 413	1,023 x 742 x 413	995 x 1,178 x 426	995 x 1,178 x 426		
Refrigerant	Type		-	R32	R32	R32	R32	
	Control Method		-	EEV	EEV	EEV	EEV	
	Factory Charging		g / tCO <sub>2</sub> e	1,200 / 0.81	1,200 / 0.81	1,40 / 0.95	1,40 / 0.95	

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

2) These products contain R32 (GWP=675) which is fluorinated greenhouse gas.

※ Heat Exchanger type : Plate Heat Exchanger(PHE) (STS)

## 2. Capacity Tables

### 2-1. AE040/060/090/120/140/160JXED\*H/EU

#### 1) Maximum Heating Capacity (Peak Value)

LWT (Leaving Water Temp.), Tamb (Ambient Temp.), HC (Heating Capacity), PI (Power input)

	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
AE040JXEDEH/EU	-20	3.76	1.24	3.65	1.33	3.48	1.49	3.34	1.59	3.21	1.75				
	-15	4.32	1.32	4.20	1.42	4.00	1.59	3.89	1.69	3.77	1.79	3.66	1.88		
	-10	4.97	1.37	4.83	1.47	4.60	1.65	4.46	1.76	4.32	1.88	4.19	1.97	3.89	2.16
	-7	4.95	1.38	4.81	1.48	4.58	1.67	4.49	1.88	4.39	2.10	4.21	2.12	4.04	2.15
	-2	5.22	1.27	5.07	1.37	4.83	1.53	4.65	1.69	4.46	1.84	4.24	2.07	4.02	2.30
	2	5.15	1.06	5.01	1.14	4.77	1.28	4.50	1.35	4.24	1.43	4.03	1.60	3.81	1.78
	7	4.75	0.72	4.62	0.77	4.40	0.86	4.30	1.03	4.20	1.20	4.11	1.31	4.02	1.42
	10	5.19	0.72	5.05	0.77	4.81	0.87	4.71	1.03	4.61	1.19	4.38	1.33	4.15	1.48
	15	5.92	0.73	5.76	0.79	5.48	0.88	5.39	1.01	5.30	1.16	5.03	1.31	4.77	1.45
	20	6.65	0.74	6.47	0.80	6.16	0.90	6.07	1.01	5.98	1.14	5.68	1.28	5.39	1.42
AE060JXEDEH/EU	-20	4.69	1.67	4.56	1.79	4.35	2.01	4.18	2.15	4.01	2.37				
	-15	5.40	1.78	5.25	1.91	5.00	2.15	4.86	2.28	4.72	2.42	4.58	2.54		
	-10	5.89	1.86	5.72	1.99	5.45	2.24	5.29	2.39	5.12	2.54	4.97	2.67	4.61	2.92
	-7	5.74	1.77	5.58	1.90	5.31	2.14	5.20	2.41	5.09	2.68	4.64	2.53	4.19	2.38
	-2	6.20	1.66	6.03	1.77	5.74	1.99	5.52	2.19	5.30	2.39	5.03	2.69	4.77	2.99
	2	6.28	1.41	6.10	1.51	5.81	1.70	5.49	1.80	5.17	1.89	4.91	2.13	4.65	2.37
	7	6.48	1.04	6.30	1.11	6.00	1.25	5.70	1.40	5.40	1.55	5.10	1.70	4.80	1.85
	10	7.08	1.05	6.88	1.12	6.55	1.26	6.30	1.42	6.04	1.57	5.74	1.77	5.43	1.97
	15	8.08	1.06	7.85	1.14	7.48	1.28	7.29	1.42	7.10	1.61	6.74	1.81	6.39	2.02
	20	9.07	1.08	8.82	1.15	8.40	1.30	8.28	1.46	8.16	1.65	7.75	1.86	7.34	2.06
AE090JXED*H/EU	-20	6.90	2.33	6.71	2.50	6.39	2.81	6.14	3.00	5.90	3.31				
	-15	7.94	2.49	7.72	2.67	7.35	3.00	7.14	3.19	6.94	3.38	6.73	3.54		
	-10	10.08	2.81	9.80	3.02	9.33	3.39	9.05	3.47	8.77	3.54	8.51	3.72	7.89	4.08
	-7	8.55	2.68	8.31	2.87	7.92	3.23	7.75	3.64	7.58	4.06	7.28	4.12	6.97	4.17
	-2	9.39	2.54	9.13	2.72	8.69	3.06	8.36	3.36	8.02	3.66	7.62	4.12	7.22	4.57
	2	9.67	2.20	9.40	2.36	8.95	2.65	8.46	2.80	7.96	2.96	7.56	3.33	7.16	3.70
	7	9.72	1.67	9.45	1.79	9.00	2.01	8.80	2.26	8.60	2.50	8.42	2.73	8.23	2.96
	10	10.62	1.68	10.32	1.80	9.83	2.03	9.64	2.28	9.44	2.54	8.97	2.85	8.50	3.17
	15	12.11	1.71	11.78	1.83	11.22	2.06	11.03	2.29	10.84	2.60	10.30	2.92	9.76	3.24
	20	13.61	1.73	13.23	1.86	12.60	2.09	12.42	2.35	12.24	2.65	11.63	2.99	11.02	3.32
AE120JXED*H/EU	-20	9.67	3.19	9.40	3.42	8.95	3.84	8.61	4.10	8.26	4.52				
	-15	11.12	3.40	10.82	3.65	10.30	4.10	10.01	4.36	9.72	4.61	9.43	4.84		
	-10	12.96	3.63	12.60	3.89	12.00	4.37	11.64	4.61	11.28	4.84	10.94	5.09	10.15	5.57
	-7	12.71	3.54	12.36	3.80	11.77	4.27	11.52	4.82	11.27	5.37	10.82	5.44	10.37	5.52
	-2	13.68	3.42	13.30	3.67	12.67	4.13	12.19	4.53	11.70	4.93	11.12	5.55	10.53	6.16
	2	13.81	3.05	13.43	3.27	12.79	3.67	12.08	3.89	11.37	4.10	10.80	4.61	10.23	5.12
	7	12.96	2.15	12.60	2.31	12.00	2.59	11.75	2.91	11.50	3.23	11.26	3.53	11.01	3.83
	10	14.16	2.17	13.76	2.33	13.11	2.61	12.86	2.94	12.61	3.27	11.98	3.68	11.35	4.09
	15	16.15	2.20	15.70	2.36	14.95	2.65	14.71	2.95	14.47	3.35	13.74	3.77	13.02	4.18
	20	18.14	2.23	17.64	2.39	16.80	2.69	16.56	3.02	16.32	3.42	15.50	3.85	14.69	4.28
AE140JXED*H/EU	-20	10.93	3.69	10.62	3.96	10.12	4.45	9.73	4.75	9.34	5.24				
	-15	12.57	3.94	12.22	4.23	11.64	4.75	11.31	5.05	10.98	5.34	10.65	5.61		
	-10	14.58	4.19	14.18	4.49	13.50	5.05	13.10	5.33	12.69	5.61	12.31	5.89	11.42	6.45
	-7	14.06	3.98	13.67	4.26	13.02	4.79	12.74	5.41	12.47	6.02	11.97	6.11	11.47	6.19
	-2	15.10	3.85	14.68	4.13	13.98	4.64	13.44	5.09	12.91	5.54	12.27	6.23	11.62	6.93
	2	15.20	3.44	14.77	3.68	14.07	4.14	13.29	4.38	12.51	4.62	11.88	5.19	11.26	5.77
	7	15.12	2.61	14.70	2.80	14.00	3.15	13.50	3.45	13.00	3.75	12.72	4.10	12.45	4.44
	10	16.52	2.64	16.06	2.83	15.29	3.18	14.84	3.51	14.39	3.84	13.67	4.33	12.95	4.81
	15	18.84	2.68	18.32	2.87	17.45	3.22	17.08	3.56	16.72	4.00	15.88	4.50	15.05	5.00
	20	21.17	2.71	20.58	2.91	19.60	3.27	19.32	3.68	19.04	4.16	18.09	4.68	17.14	5.20
AE160JXED*H/EU	-20	12.58	4.43	12.23	4.75	11.65	5.34	11.20	5.69	10.75	6.28				
	-15	14.47	4.73	14.07	5.07	13.40	5.70	13.02	6.06	12.65	6.41	12.27	6.73		
	-10	16.85	5.06	16.38	5.43	15.60	6.10	15.13	6.42	14.66	6.73	14.22	7.07	13.20	7.74
	-7	15.53	4.71	15.09	5.05	14.38	5.68	14.07	6.41	13.76	7.14	13.21	7.23	12.66	7.33
	-2	16.88	4.55	16.41	4.88	15.63	5.48	15.03	6.02	14.43	6.55	13.71	7.37	12.98	8.19
	2	17.20	4.05	16.73	4.35	15.93	4.88	15.05	5.17	14.16	5.45	13.45	6.13	12.74	6.81
	7	17.28	3.12	16.80	3.35	16.00	3.76	15.65	4.15	15.30	4.54	14.95	4.93	14.60	5.32
	10	18.88	3.15	18.35	3.38	17.48	3.79	17.13	4.22	16.79	4.64	15.95	5.22	15.11	5.80
	15	21.53	3.19	20.94	3.42	19.94	3.85	19.61	4.26	19.28	4.80	18.31	5.40	17.35	6.00
	20	24.19	3.24	23.52	3.47	22.40	3.90	22.08	4.39	21.76	4.97	20.67	5.59	19.58	6.21

1. Heating capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for heated water range  $\Delta t = 3 \sim 8^\circ\text{C}$

2. Cooling capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for chilled water range  $\Delta t = 3 \sim 8^\circ\text{C}$

3. Power input : Power input is according to Eurovent rating standard OM-3-2015.

4. Peak value : Tested without defrost operation in accordance with EN14511

※ The real capacity would be changed according to the install environment.

## 2. Capacity Tables

### 2-1. AE040/060/090/120/140/160JXED\*H/EU

#### 2) Maximum Heating Capacity (Integrated Value)

LWT (Leaving Water Temp.), Tamb (Ambient Temp.), HC (Heating Capacity), PI (Power input)

	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
AE040JXEDH/EU	-20	3.76	1.24	3.65	1.33	3.48	1.49	3.34	1.59	3.21	1.75				
	-15	4.28	1.31	4.16	1.40	3.96	1.57	3.85	1.67	3.74	1.77	3.62	1.86		
	-10	4.87	1.34	4.73	1.44	4.51	1.62	4.37	1.73	4.24	1.84	4.11	1.93	3.81	2.12
	-7	4.75	1.33	4.62	1.42	4.40	1.60	4.31	1.81	4.21	2.01	4.04	2.04	3.87	2.07
	-2	4.59	1.12	4.46	1.20	4.25	1.35	4.09	1.48	3.93	1.62	3.73	1.82	3.54	2.02
	2	4.43	0.91	4.31	0.98	4.10	1.10	3.87	1.16	3.64	1.23	3.46	1.38	3.28	1.53
	7	4.75	0.72	4.62	0.77	4.40	0.86	4.30	1.03	4.20	1.20	4.11	1.31	4.02	1.42
	10	5.19	0.72	5.05	0.77	4.81	0.87	4.71	1.03	4.61	1.19	4.38	1.33	4.15	1.48
	15	5.92	0.73	5.76	0.79	5.48	0.88	5.39	1.01	5.30	1.16	5.03	1.31	4.77	1.45
	20	6.65	0.74	6.47	0.80	6.16	0.90	6.07	1.01	5.98	1.14	5.68	1.28	5.39	1.42
AE060JXEDH/EU	-20	4.69	1.67	4.56	1.79	4.35	2.01	4.18	2.15	4.01	2.37				
	-15	5.35	1.77	5.20	1.89	4.95	2.13	4.81	2.26	4.67	2.39	4.53	2.51		
	-10	5.77	1.82	5.61	1.95	5.34	2.20	5.18	2.34	5.02	2.49	4.87	2.61	4.52	2.86
	-7	5.51	1.70	5.36	1.82	5.10	2.05	4.99	2.31	4.88	2.58	4.45	2.43	4.02	2.28
	-2	5.45	1.46	5.30	1.56	5.05	1.76	4.86	1.93	4.66	2.10	4.43	2.37	4.20	2.63
	2	5.40	1.21	5.25	1.30	5.00	1.46	4.72	1.54	4.44	1.63	4.22	1.83	4.00	2.04
	7	6.48	1.04	6.30	1.11	6.00	1.25	5.70	1.40	5.40	1.55	5.10	1.70	4.80	1.85
	10	7.08	1.05	6.88	1.12	6.55	1.26	6.30	1.42	6.04	1.57	5.74	1.77	5.43	1.97
	15	8.08	1.06	7.85	1.14	7.48	1.28	7.29	1.42	7.10	1.61	6.74	1.81	6.39	2.02
	20	9.07	1.08	8.82	1.15	8.40	1.30	8.28	1.46	8.16	1.65	7.75	1.86	7.34	2.06
AE090JXED*H/EU	-20	6.90	2.33	6.71	2.50	6.39	2.81	6.14	3.00	5.90	3.31				
	-15	7.86	2.47	7.64	2.64	7.28	2.97	7.07	3.16	6.87	3.34	6.66	3.51		
	-10	9.87	2.76	9.60	2.96	9.14	3.32	8.87	3.40	8.59	3.47	8.34	3.65	7.74	3.99
	-7	8.21	2.57	7.98	2.76	7.60	3.10	7.44	3.50	7.28	3.90	6.98	3.95	6.69	4.00
	-2	8.26	2.23	8.03	2.39	7.65	2.69	7.36	2.96	7.06	3.22	6.71	3.62	6.35	4.03
	2	8.32	1.89	8.09	2.03	7.70	2.28	7.27	2.41	6.84	2.54	6.50	2.86	6.16	3.18
	7	9.72	1.67	9.45	1.79	9.00	2.01	8.80	2.26	8.60	2.50	8.42	2.73	8.23	2.96
	10	10.62	1.68	10.32	1.80	9.83	2.03	9.64	2.28	9.44	2.54	8.97	2.85	8.50	3.17
	15	12.11	1.71	11.78	1.83	11.22	2.06	11.03	2.29	10.84	2.60	10.30	2.92	9.76	3.24
	20	13.61	1.73	13.23	1.86	12.60	2.09	12.42	2.35	12.24	2.65	11.63	2.99	11.02	3.32
AE120JXED*H/EU	-20	9.67	3.19	9.40	3.42	8.95	3.84	8.61	4.10	8.26	4.52				
	-15	11.01	3.37	10.71	3.61	10.20	4.06	9.91	4.31	9.62	4.57	9.33	4.79		
	-10	12.70	3.55	12.35	3.81	11.76	4.28	11.41	4.51	11.05	4.75	10.72	4.98	9.95	5.46
	-7	12.20	3.40	11.87	3.65	11.30	4.10	11.06	4.63	10.82	5.15	10.38	5.22	9.95	5.30
	-2	12.04	3.01	11.71	3.23	11.15	3.63	10.72	3.98	10.30	4.34	9.78	4.88	9.27	5.42
	2	11.88	2.62	11.55	2.81	11.00	3.16	10.39	3.34	9.78	3.52	9.29	3.97	8.80	4.41
	7	12.96	2.15	12.60	2.31	12.00	2.59	11.75	2.91	11.50	3.23	11.26	3.53	11.01	3.83
	10	14.16	2.17	13.76	2.33	13.11	2.61	12.86	2.94	12.61	3.27	11.98	3.68	11.35	4.09
	15	16.15	2.20	15.70	2.36	14.95	2.65	14.71	2.95	14.47	3.35	13.74	3.77	13.02	4.18
	20	18.14	2.23	17.64	2.39	16.80	2.69	16.56	3.02	16.32	3.42	15.50	3.85	14.69	4.28
AE140JXED*H/EU	-20	10.93	3.69	10.62	3.96	10.12	4.45	9.73	4.75	9.34	5.24				
	-15	12.45	3.90	12.10	4.19	11.52	4.70	11.20	5.00	10.87	5.29	10.55	5.55		
	-10	14.29	4.11	13.89	4.40	13.23	4.95	12.83	5.22	12.44	5.50	12.06	5.77	11.19	6.32
	-7	13.50	3.82	13.13	4.09	12.50	4.60	12.23	5.19	11.97	5.78	11.49	5.86	11.01	5.94
	-2	13.28	3.39	12.92	3.63	12.30	4.08	11.83	4.48	11.36	4.88	10.79	5.49	10.23	6.10
	2	13.07	2.95	12.71	3.17	12.10	3.56	11.43	3.77	10.76	3.97	10.22	4.47	9.68	4.96
	7	15.12	2.61	14.70	2.80	14.00	3.15	13.50	3.45	13.00	3.75	12.72	4.10	12.45	4.44
	10	16.52	2.64	16.06	2.83	15.29	3.18	14.84	3.51	14.39	3.84	13.67	4.33	12.95	4.81
	15	18.84	2.68	18.32	2.87	17.45	3.22	17.08	3.56	16.72	4.00	15.88	4.50	15.05	5.00
	20	21.17	2.71	20.58	2.91	19.60	3.27	19.32	3.68	19.04	4.16	18.09	4.68	17.14	5.20
AE160JXED*H/EU	-20	12.58	4.43	12.23	4.75	11.65	5.34	11.20	5.69	10.75	6.28				
	-15	14.33	4.68	13.93	5.02	13.27	5.64	12.89	6.00	12.52	6.35	12.14	6.67		
	-10	16.51	4.96	16.05	5.32	15.29	5.98	14.83	6.29	14.37	6.60	13.94	6.93	12.93	7.59
	-7	14.90	4.52	14.49	4.85	13.80	5.45	13.51	6.15	13.21	6.85	12.68	6.95	12.15	7.04
	-2	14.85	4.00	14.44	4.29	13.75	4.83	13.22	5.30	12.70	5.77	12.06	6.49	11.43	7.21
	2	14.80	3.49	14.39	3.74	13.70	4.20	12.94	4.44	12.18	4.68	11.57	5.27	10.96	5.86
	7	17.28	3.12	16.80	3.35	16.00	3.76	15.65	4.15	15.30	4.54	14.95	4.93	14.60	5.32
	10	18.88	3.15	18.35	3.38	17.48	3.79	17.13	4.22	16.79	4.64	15.95	5.22	15.11	5.80
	15	21.53	3.19	20.94	3.42	19.94	3.85	19.61	4.26	19.28	4.80	18.31	5.40	17.35	6.00
	20	24.19	3.24	23.52	3.47	22.40	3.90	22.08	4.39	21.76	4.97	20.67	5.59	19.58	6.21

1. Heating capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for heated water range  $\Delta t = 3 \sim 8^\circ\text{C}$

2. Cooling capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for chilled water range  $\Delta t = 3 \sim 8^\circ\text{C}$

3. Power input : Power input is according to Eurovent rating standard OM-3-2015.

4. Integrated value : Tested with defrost operation in accordance with EN14511

※ The real capacity would be changed according to the install environment.

## 2. Capacity Tables

### 2-1. AE040/060/090/120/140/160JXED\*H/EU

#### 3) Maximum Cooling Capacity

LWT (Leaving Water Temp.), Tamb (Ambient Temp.), CC (Cooling Capacity), PI (Power input)

	LWT (°C)	7		10		13		15		18		25	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
AE040JXEDEH/EU	10	4.42	0.92	4.80	0.94	5.18	0.96	5.43	0.97	5.82	0.98	6.71	1.02
	20	4.09	1.03	4.47	1.05	4.85	1.07	5.11	1.08	5.49	1.09	6.38	1.13
	30	3.76	1.14	4.14	1.16	4.53	1.18	4.78	1.19	5.16	1.20	6.05	1.24
	35	3.60	1.20	3.98	1.22	4.36	1.23	4.62	1.24	5.00	1.26	5.89	1.30
	46	3.24	1.32	3.62	1.34	4.00	1.35	4.26	1.37	4.64	1.38	5.53	1.42
	10	5.76	1.35	6.26	1.35	6.75	1.35	7.07	1.35	7.56	1.35	8.71	1.35
	20	5.34	1.51	5.83	1.51	6.32	1.51	6.65	1.51	7.14	1.51	8.28	1.51
AE060JXEDEH/EU	10	8.41	1.36	9.01	1.37	9.61	1.38	10.01	1.39	10.61	1.41	12.01	1.44
	20	7.37	1.67	7.97	1.69	8.57	1.70	8.97	1.71	9.57	1.72	10.97	1.76
	30	6.32	1.99	6.92	2.00	7.52	2.02	7.92	2.03	8.52	2.04	9.92	2.07
	35	5.80	2.15	6.40	2.16	7.00	2.18	7.40	2.19	8.00	2.20	9.40	2.23
	46	4.65	2.50	5.25	2.51	5.85	2.53	6.25	2.54	6.85	2.55	8.25	2.58
	10	11.95	1.90	12.77	1.90	13.58	1.90	14.13	1.90	14.95	1.90	16.86	1.90
	20	10.77	2.38	11.59	2.38	12.40	2.38	12.95	2.38	13.77	2.38	15.68	2.38
AE090JXED*H/EU	30	9.59	2.86	10.41	2.86	11.23	2.86	11.77	2.86	12.59	2.86	14.50	2.86
	35	9.00	3.10	9.82	3.10	10.64	3.10	11.18	3.10	12.00	3.10	13.91	3.10
	46	7.70	3.63	8.52	3.63	9.34	3.63	9.89	3.63	10.70	3.63	12.61	3.63
	10	14.09	2.39	15.04	2.40	15.99	2.42	16.63	2.43	17.59	2.44	19.81	2.47
	20	12.65	2.93	13.61	2.95	14.56	2.96	15.20	2.97	16.15	2.98	18.38	3.02
	30	11.22	3.48	12.17	3.49	13.13	3.51	13.76	3.51	14.72	3.53	16.94	3.56
	35	10.50	3.75	11.45	3.76	12.41	3.78	13.05	3.79	14.00	3.80	16.23	3.83
AE120JXED*H/EU	46	8.92	4.35	9.88	4.36	10.83	4.38	11.47	4.38	12.42	4.40	14.65	4.43
	10	14.74	2.73	15.77	2.77	16.81	2.81	17.50	2.84	18.54	2.87	20.96	2.96
	20	13.32	3.24	14.36	3.28	15.39	3.32	16.09	3.34	17.12	3.38	19.54	3.47
	30	11.91	3.75	12.94	3.79	13.98	3.82	14.67	3.85	15.71	3.89	18.13	3.98
	35	11.20	4.00	12.24	4.04	13.27	4.08	13.96	4.10	15.00	4.14	17.42	4.23
	46	9.64	4.56	10.68	4.59	11.72	4.63	12.41	4.66	13.44	4.70	15.86	4.79
	10	17.50	2.84	18.54	2.87	19.58	2.90	20.62	2.93	21.66	2.96	23.68	3.06
AE140JXED*H/EU	20	16.09	3.34	17.12	3.38	18.15	3.41	19.18	3.44	20.21	3.47	22.21	3.57
	30	14.67	3.85	15.71	3.89	16.74	3.92	17.77	3.95	18.80	3.98	20.24	4.07
	35	13.96	4.10	15.00	4.14	16.03	4.17	17.06	4.20	18.09	4.23	19.12	4.30
	46	12.41	4.66	13.44	4.70	14.47	4.73	15.50	4.76	16.53	4.79	17.59	4.86
	10	17.50	2.84	18.54	2.87	19.58	2.90	20.62	2.93	21.66	2.96	23.68	3.06
	20	16.09	3.34	17.12	3.38	18.15	3.41	19.18	3.44	20.21	3.47	22.21	3.57
	30	14.67	3.85	15.71	3.89	16.74	3.92	17.77	3.95	18.80	3.98	20.24	4.07
AE160JXED*H/EU	35	13.96	4.10	15.00	4.14	16.03	4.17	17.06	4.20	18.09	4.23	19.12	4.30
	46	12.41	4.66	13.44	4.70	14.47	4.73	15.50	4.76	16.53	4.79	17.59	4.86

1. Heating capacity is according to Eurovent rating standard OM-3-2015 and valid for heated water range  $\Delta t = 3 \sim 8^\circ\text{C}$

2. Cooling capacity is according to Eurovent rating standard OM-3-2015 and valid for chilled water range  $\Delta t = 3 \sim 8^\circ\text{C}$

3. Power input is total of indoor and outdoor unit, according to Eurovent rating standard OM-3-2015.

\* The real capacity would be changed according to the install environment.

## 2. Capacity Tables

### 2-2. AE040/060/090RXED\*G/EU

#### 1) Maximum Heating Capacity (Peak Value)

LWT (Leaving Water Temp.), Tamb (Ambient Temp.), HC (Heating Capacity), PI (Power input)

	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
AE040RXEDEG	-20	3.76	1.21	3.65	1.30	3.48	1.46	3.34	1.56	3.21	1.72				
	-15	4.32	1.29	4.20	1.39	4.00	1.56	3.89	1.66	3.77	1.76	3.66	1.84		
	-10	4.97	1.34	4.83	1.44	4.60	1.62	4.46	1.73	4.32	1.84	4.19	1.93	3.89	2.12
	-7	5.18	1.34	5.03	1.44	4.79	1.61	4.69	1.82	4.59	2.03	4.40	2.06	4.22	2.09
	-2	5.40	1.25	5.25	1.34	5.00	1.51	4.81	1.65	4.62	1.80	4.39	2.03	4.16	2.26
	2	5.27	1.06	5.13	1.14	4.88	1.28	4.61	1.35	4.34	1.43	4.12	1.60	3.91	1.78
	7	4.75	0.70	4.62	0.75	4.40	0.85	4.30	0.97	4.20	1.09	4.05	1.21	3.90	1.32
	10	5.19	0.71	5.05	0.76	4.81	0.85	4.71	0.97	4.61	1.10	4.38	1.23	4.15	1.37
	15	5.92	0.72	5.76	0.77	5.48	0.87	5.39	0.97	5.30	1.11	5.03	1.25	4.77	1.38
	20	6.65	0.73	6.47	0.78	6.16	0.88	6.07	0.99	5.98	1.12	5.68	1.26	5.39	1.40
AE060RXEDEG	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
	-20	4.69	1.63	4.56	1.75	4.35	1.97	4.18	2.10	4.01	2.32				
	-15	5.40	1.74	5.25	1.87	5.00	2.10	4.86	2.23	4.72	2.36	4.58	2.48		
	-10	5.89	1.82	5.72	1.95	5.45	2.19	5.29	2.34	5.12	2.48	4.97	2.60	4.61	2.85
	-7	6.19	1.73	6.02	1.85	5.73	2.08	5.61	2.35	5.49	2.62	5.27	2.65	5.05	2.69
	-2	6.57	1.64	6.38	1.76	6.08	1.98	5.85	2.17	5.62	2.37	5.34	2.66	5.06	2.96
	2	6.53	1.43	6.35	1.53	6.05	1.72	5.71	1.82	5.37	1.92	5.11	2.16	4.84	2.40
	7	6.48	1.01	6.30	1.09	6.00	1.22	5.70	1.37	5.40	1.51	5.10	1.66	4.80	1.81
	10	7.08	1.02	6.88	1.10	6.55	1.23	6.30	1.38	6.04	1.53	5.74	1.73	5.43	1.92
15	8.08	1.04	7.85	1.11	7.48	1.25	7.29	1.39	7.10	1.57	6.74	1.77	6.39	1.97	
20	9.07	1.05	8.82	1.13	8.40	1.27	8.28	1.42	8.16	1.61	7.75	1.81	7.34	2.01	
AE090RXED*G	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
	-20	6.90	2.28	6.71	2.44	6.39	2.74	6.14	2.93	5.90	3.23				
	-15	7.94	2.43	7.72	2.61	7.35	2.93	7.14	3.11	6.94	3.30	6.73	3.46		
	-10	10.08	2.75	9.80	2.95	9.33	3.31	9.05	3.39	8.77	3.46	8.51	3.63	7.89	3.98
	-7	8.89	2.51	8.64	2.69	8.23	3.02	8.05	3.41	7.88	3.80	7.56	3.85	7.25	3.90
	-2	9.57	2.43	9.31	2.61	8.86	2.93	8.53	3.22	8.19	3.50	7.78	3.94	7.37	4.38
	2	9.67	2.18	9.40	2.34	8.95	2.63	8.46	2.78	7.96	2.93	7.56	3.30	7.16	3.66
	7	9.72	1.55	9.45	1.66	9.00	1.87	8.80	2.10	8.60	2.33	8.30	2.53	8.00	2.73
	10	10.62	1.57	10.32	1.68	9.83	1.89	9.64	2.12	9.44	2.36	8.97	2.66	8.50	2.95
15	12.11	1.59	11.78	1.70	11.22	1.91	11.03	2.13	10.84	2.42	10.30	2.72	9.76	3.02	
20	13.61	1.61	13.23	1.73	12.60	1.94	12.42	2.18	12.24	2.47	11.63	2.78	11.02	3.09	

1. Heating capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for heated water range  $\Delta t = 3\sim 8^{\circ}\text{C}$
  2. Cooling capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for chilled water range  $\Delta t = 3\sim 8^{\circ}\text{C}$
  3. Power input : Power input is according to Eurovent rating standard OM-3-2015.
  4. Peak value : Tested without defrost operation in accordance with EN14511
- ※ The real capacity would be changed according to the install environment.

## 2. Capacity Tables

### 2-2. AE040/060/090RXED\*G/EU

#### 2) Maximum Heating Capacity (Integrated Value)

LWT (Leaving Water Temp.), Tamb (Ambient Temp.), HC (Heating Capacity), PI (Power input)

	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
AE040RXEDEG	-20	3.76	1.21	3.65	1.30	3.48	1.46	3.34	1.56	3.21	1.72				
	-15	4.28	1.28	4.16	1.37	3.96	1.54	3.85	1.64	3.74	1.74	3.62	1.82		
	-10	4.87	1.32	4.73	1.41	4.51	1.59	4.37	1.70	4.24	1.81	4.11	1.90	3.81	2.08
	-7	4.97	1.29	4.83	1.38	4.60	1.55	4.50	1.75	4.40	1.95	4.23	1.98	4.05	2.00
	-2	4.75	1.10	4.62	1.18	4.40	1.33	4.23	1.46	4.07	1.59	3.87	1.79	3.66	1.98
	2	4.54	0.91	4.41	0.98	4.20	1.10	3.97	1.16	3.73	1.23	3.55	1.38	3.36	1.53
	7	4.75	0.70	4.62	0.75	4.40	0.85	4.30	0.97	4.20	1.09	4.05	1.21	3.90	1.32
	10	5.19	0.71	5.05	0.76	4.81	0.85	4.71	0.97	4.61	1.10	4.38	1.23	4.15	1.37
	15	5.92	0.72	5.76	0.77	5.48	0.87	5.39	0.97	5.30	1.11	5.03	1.25	4.77	1.38
	20	6.65	0.73	6.47	0.78	6.16	0.88	6.07	0.99	5.98	1.12	5.68	1.26	5.39	1.40
AE060RXEDEG	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
	-20	4.69	1.63	4.56	1.75	4.35	1.97	4.18	2.10	4.01	2.32				
	-15	5.35	1.73	5.20	1.85	4.95	2.08	4.81	2.21	4.67	2.34	4.53	2.46		
	-10	5.77	1.78	5.61	1.91	5.34	2.15	5.18	2.29	5.02	2.43	4.87	2.55	4.52	2.80
	-7	5.94	1.66	5.78	1.78	5.50	2.00	5.38	2.26	5.27	2.51	5.05	2.55	4.84	2.58
	-2	5.78	1.44	5.62	1.55	5.35	1.74	5.15	1.91	4.94	2.08	4.70	2.34	4.45	2.60
	2	5.62	1.23	5.46	1.32	5.20	1.48	4.91	1.57	4.62	1.65	4.39	1.86	4.16	2.06
	7	6.48	1.01	6.30	1.09	6.00	1.22	5.70	1.37	5.40	1.51	5.10	1.66	4.80	1.81
	10	7.08	1.02	6.88	1.10	6.55	1.23	6.30	1.38	6.04	1.53	5.74	1.73	5.43	1.92
15	8.08	1.04	7.85	1.11	7.48	1.25	7.29	1.39	7.10	1.57	6.74	1.77	6.39	1.97	
20	9.07	1.05	8.82	1.13	8.40	1.27	8.28	1.42	8.16	1.61	7.75	1.81	7.34	2.01	
AE090RXED*G	LWT (°C)	25		30		35		40		45		50		55	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
	-20	6.90	2.28	6.71	2.44	6.39	2.74	6.14	2.93	5.90	3.23				
	-15	7.86	2.41	7.64	2.58	7.28	2.90	7.07	3.08	6.87	3.26	6.66	3.43		
	-10	9.87	2.69	9.60	2.89	9.14	3.24	8.87	3.32	8.59	3.39	8.34	3.56	7.74	3.90
	-7	8.53	2.41	8.30	2.58	7.90	2.90	7.73	3.27	7.56	3.65	7.26	3.70	6.96	3.75
	-2	8.42	2.14	8.19	2.30	7.80	2.58	7.50	2.83	7.20	3.08	6.84	3.47	6.48	3.85
	2	8.32	1.88	8.09	2.01	7.70	2.26	7.27	2.39	6.84	2.52	6.50	2.84	6.16	3.15
	7	9.72	1.55	9.45	1.66	9.00	1.87	8.80	2.10	8.60	2.33	8.30	2.53	8.00	2.73
	10	10.62	1.57	10.32	1.68	9.83	1.89	9.64	2.12	9.44	2.36	8.97	2.66	8.50	2.95
15	12.11	1.59	11.78	1.70	11.22	1.91	11.03	2.13	10.84	2.42	10.30	2.72	9.76	3.02	
20	13.61	1.61	13.23	1.73	12.60	1.94	12.42	2.18	12.24	2.47	11.63	2.78	11.02	3.09	

1. Heating capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for heated water range  $\Delta t = 3\sim 8^{\circ}\text{C}$
  2. Cooling capacity : Capacity is according to Eurovent rating standard OM-3-2015 and valid for chilled water range  $\Delta t = 3\sim 8^{\circ}\text{C}$
  3. Power input : Power input is according to Eurovent rating standard OM-3-2015.
  4. Integrated value : Tested with defrost operation in accordance with EN14511
- ※ The real capacity would be changed according to the install environment.



## 2. Capacity Tables

### 2-2. AE040/060/090RXED\*G/EU

#### 3) Maximum Cooling Capacity

LWT (Leaving Water Temp.), Tamb (Ambient Temp.), CC (Cooling Capacity), PI (Power input)


	LWT(°C)	7		10		13		15		18		25	
	Tamb (°C)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)	HC(kW)	PI(kW)
AE040RXEDEG	10	3.99	0.83	4.37	0.82	4.76	0.82	5.15	0.82	5.54	0.81	6.09	0.83
	20	3.83	0.94	4.21	0.93	4.58	0.93	4.95	0.93	5.33	0.92	5.86	0.94
	30	3.68	1.05	4.04	1.04	4.39	1.04	4.75	1.03	5.11	1.03	5.62	1.05
	35	3.60	1.11	3.95	1.11	4.30	1.10	4.65	1.10	5.00	1.09	5.50	1.11
	46	3.43	1.23	3.76	1.22	4.10	1.22	4.43	1.21	4.77	1.20	5.24	1.23
AE060RXEDEG	10	5.20	1.07	5.70	1.08	6.20	1.08	6.70	1.09	7.20	1.10	7.92	1.12
	20	5.01	1.22	5.48	1.22	5.96	1.23	6.44	1.24	6.92	1.24	7.61	1.27
	30	4.80	1.36	5.26	1.37	5.72	1.37	6.18	1.38	6.64	1.39	7.31	1.42
	35	4.70	1.44	5.15	1.45	5.60	1.46	6.05	1.46	6.50	1.47	7.15	1.50
	46	4.48	1.59	4.91	1.60	5.34	1.61	5.77	1.62	6.19	1.62	6.81	1.66
AE090RXED*G	10	7.20	1.45	7.80	1.48	8.41	1.51	9.02	1.54	9.63	1.57	10.59	1.60
	20	6.92	1.65	7.51	1.68	8.09	1.72	8.68	1.75	9.27	1.78	10.19	1.82
	30	6.64	1.84	7.21	1.88	7.77	1.92	8.33	1.96	8.89	1.99	9.78	2.03
	35	6.50	1.95	7.05	1.99	7.60	2.03	8.15	2.07	8.70	2.11	9.57	2.15
	46	6.19	2.15	6.72	2.20	7.24	2.24	7.77	2.29	8.29	2.33	9.12	2.38

1. Heating capacity is according to Eurovent rating standard OM-3-2015 and valid for heated water range  $\Delta t = 3\sim 8^{\circ}\text{C}$
  2. Cooling capacity is according to Eurovent rating standard OM-3-2015 and valid for chilled water range  $\Delta t = 3\sim 8^{\circ}\text{C}$
  3. Power input is total of indoor and outdoor unit, according to Eurovent rating standard OM-3-2015.
- ※ The real capacity would be changed according to the install environment.


### 3. Capacity Correction

#### 3-1. AE040/060JXEDEH/EU

##### 1) Heating

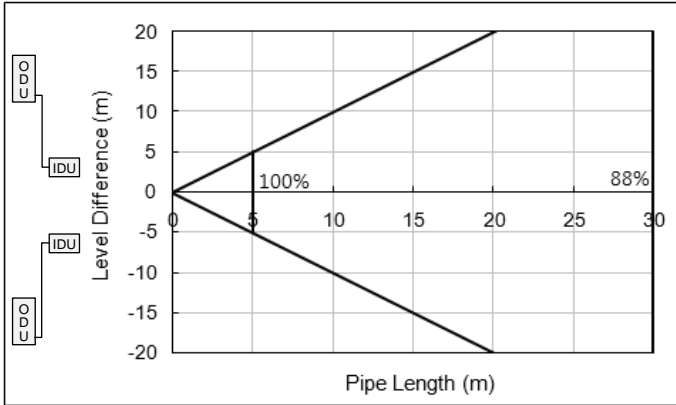


##### 2) Cooling

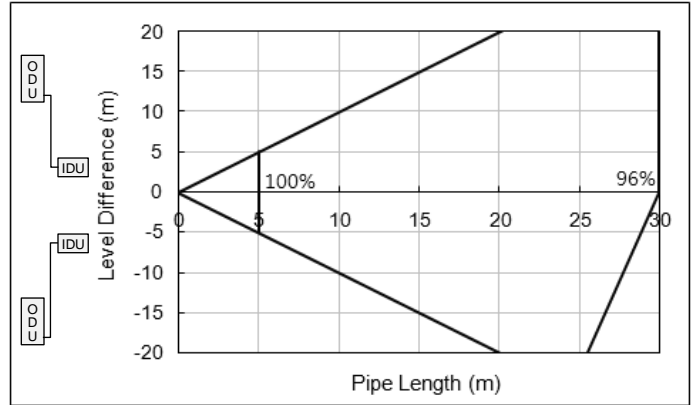


#### 3-2. AE090/120/140/160JXED\*H/EU

##### 1) Heating

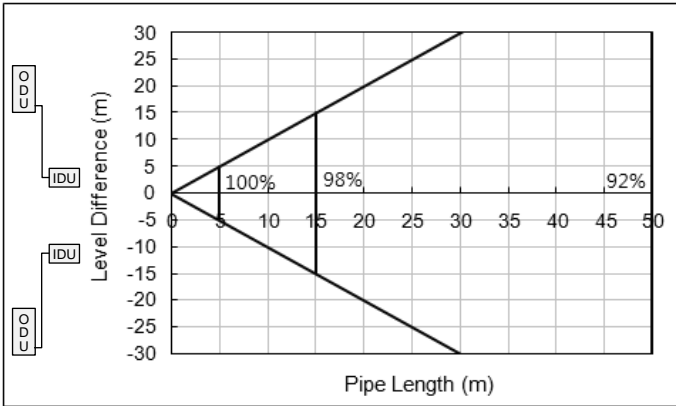


##### 2) Cooling

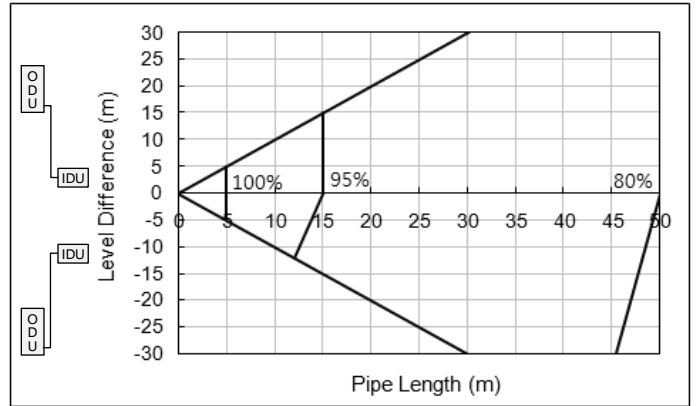


### 3. Capacity Correction

#### 3-3. AE040/060RXEDEG/EU

##### 1) Heating

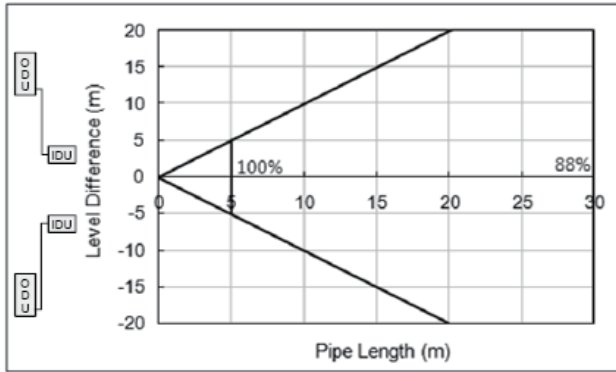


##### 2) Cooling

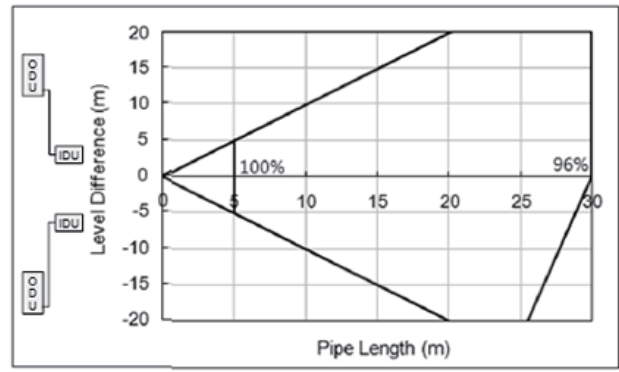


#### 3-4. AE090RXED\*G/EU

##### 1) Heating

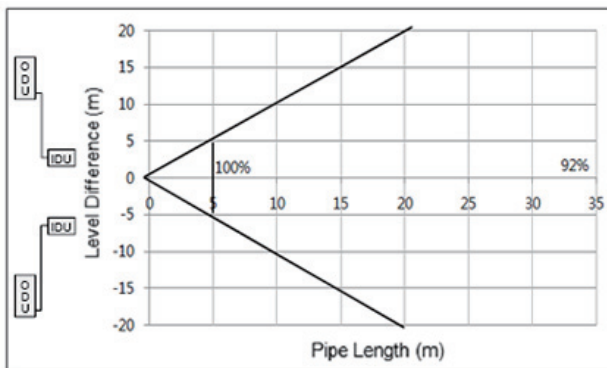

##### 2) Cooling

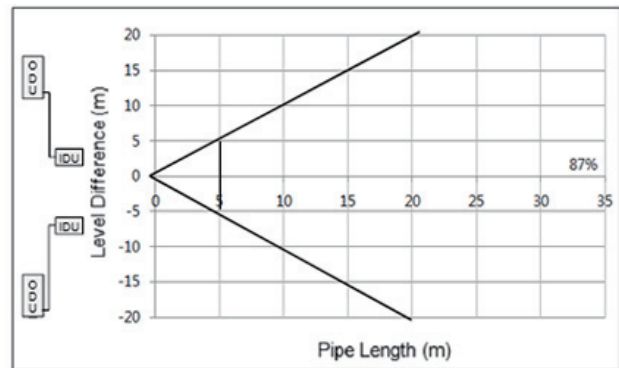


## 4. Dimensional Drawings

### 4-1. Outdoor Unit

#### 1) AE040/060JXEDEH/EU, AE040/060RXEDEG/EU

(Unit : mm)

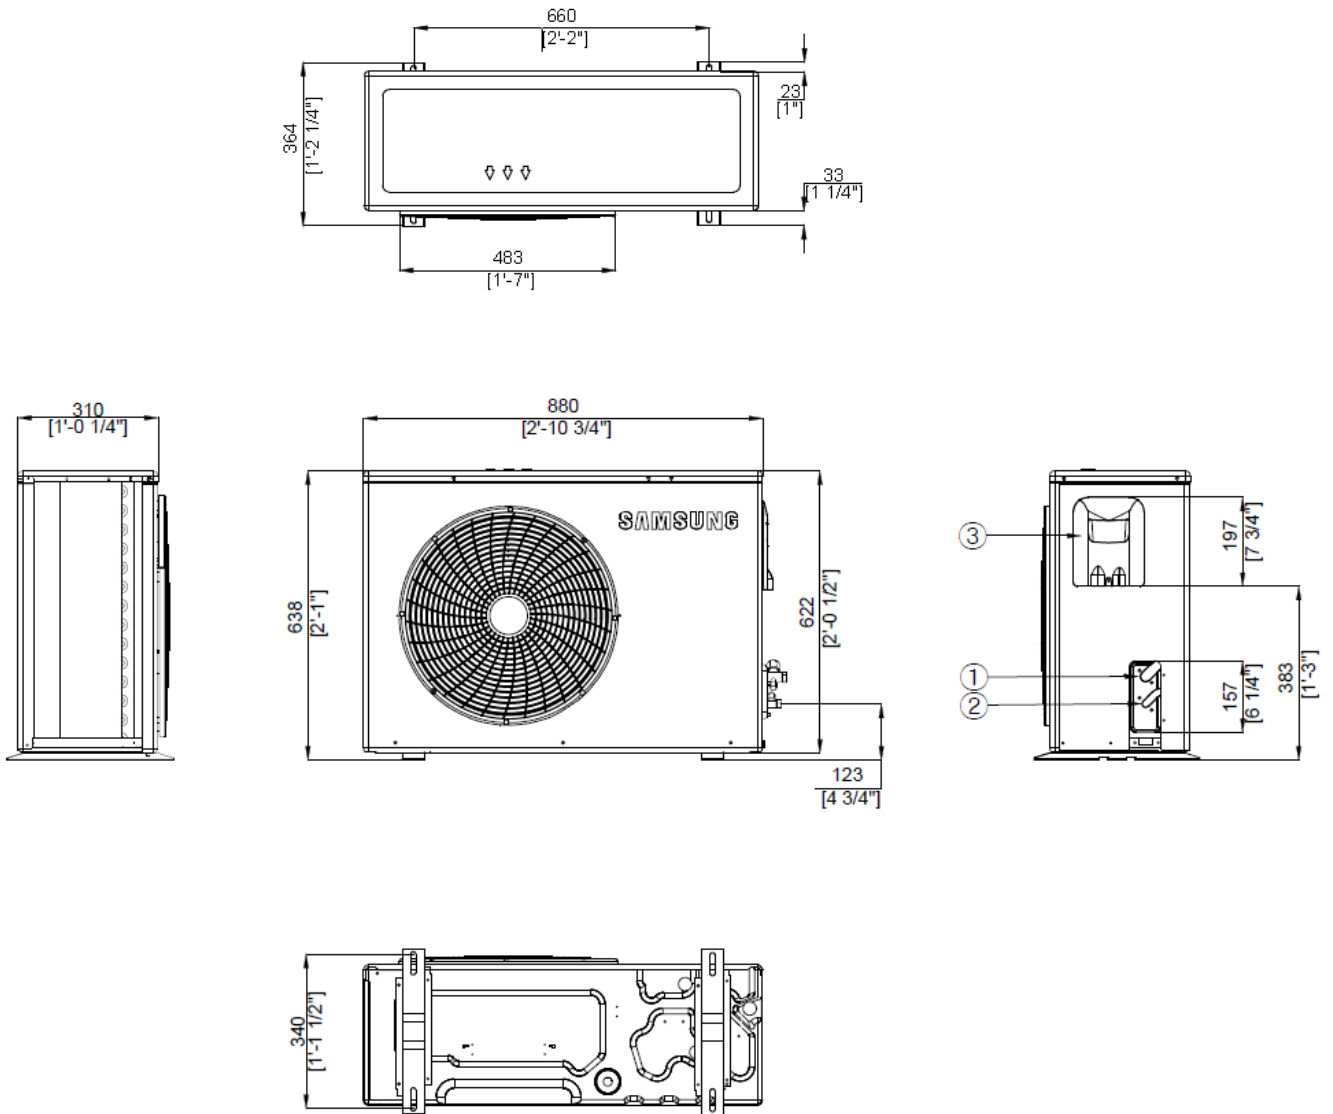


No.	Table of Descriptions
①	Gas Ref. Pipe
②	Liquid Ref. Pipe
③	Power & Communication Wiring Conduits

### 4. Dimensional Drawings

#### 4-1. Outdoor Unit

##### 2) AE090JXED\*H/EU, AE090RXED\*G/EU

(Unit : mm)

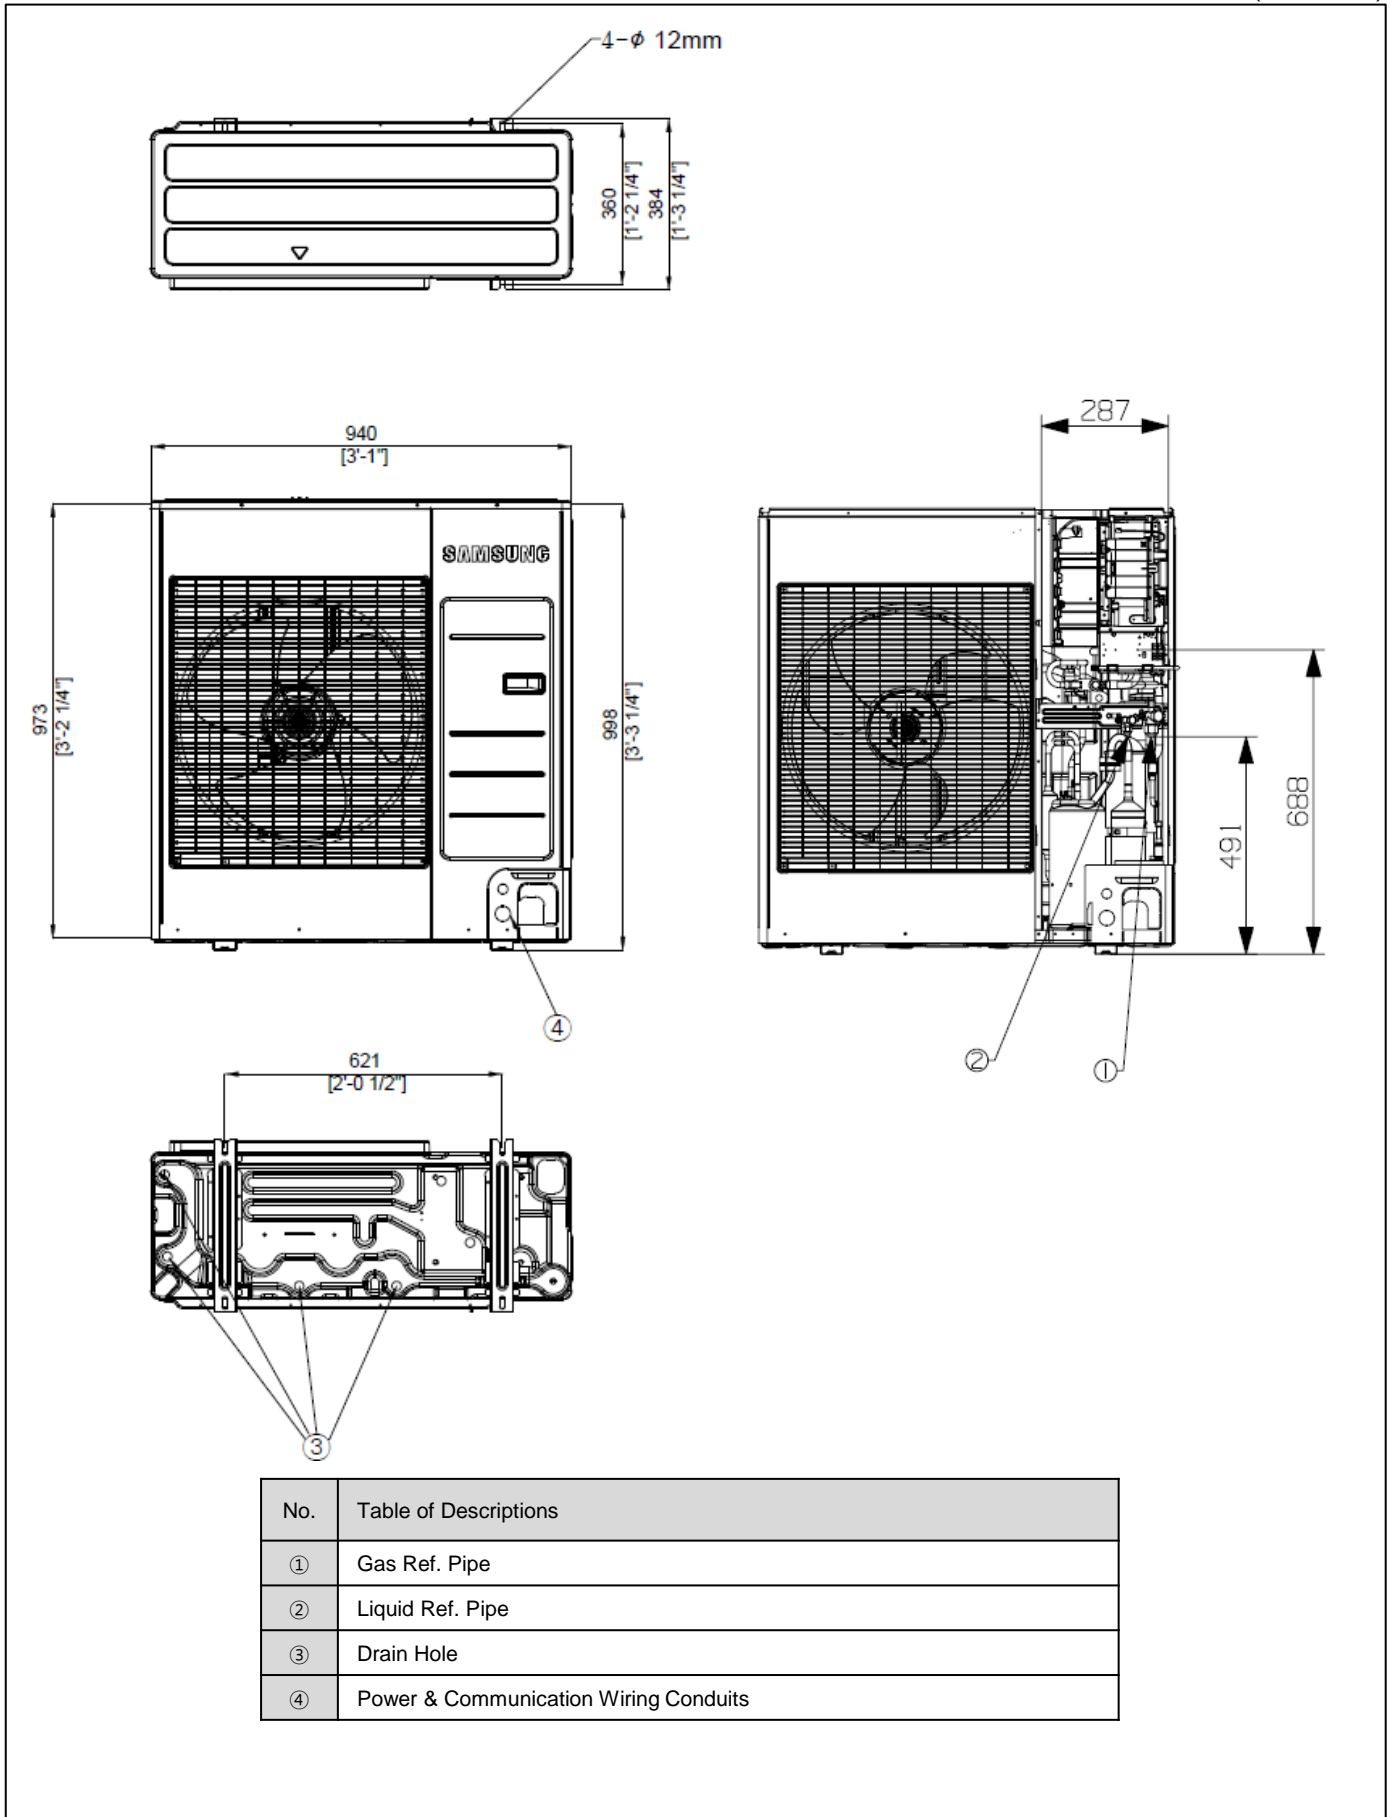


No.	Table of Descriptions
①	Gas Ref. Pipe
②	Liquid Ref. Pipe
③	Drain Hole
④	Power & Communication Wiring Conduits

## 4. Dimensional Drawings

### 4-1. Outdoor Unit

#### 3) AE120/140/160JXED\*H/EU

(Unit : mm)

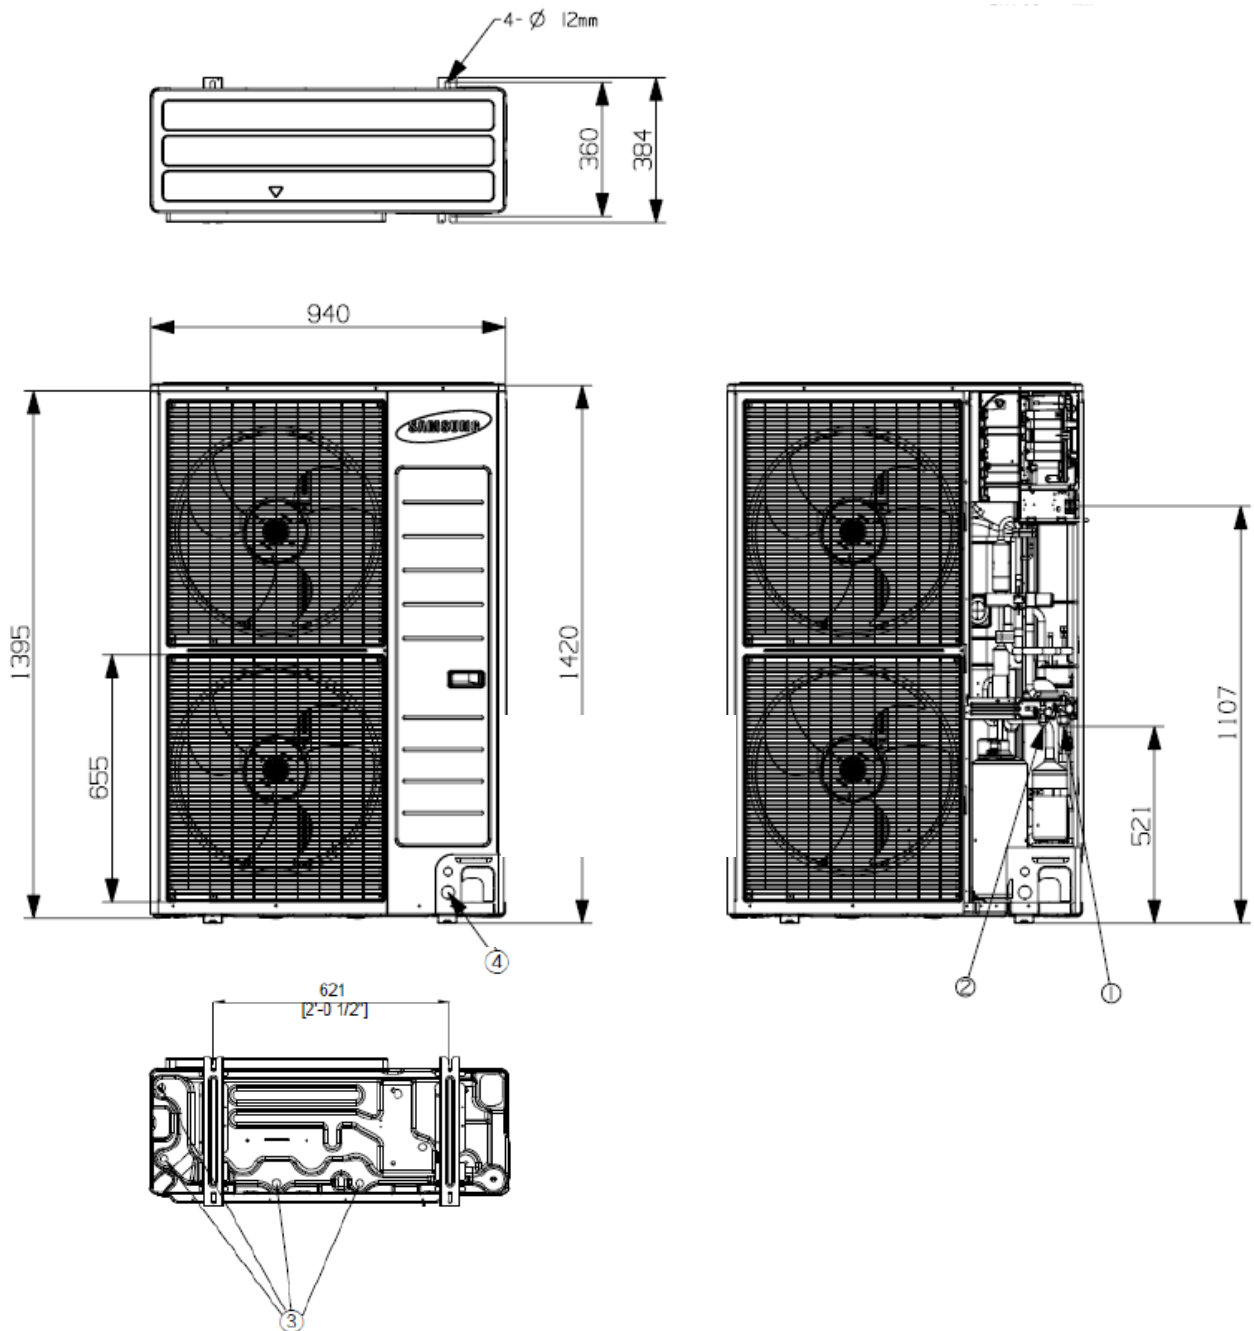


No.	Table of Descriptions
①	Gas Ref. Pipe
②	Liquid Ref. Pipe
③	Drain Hole
④	Power & Communication Wiring Conduits


## 5. Cycle Diagrams

### 5-1. Outdoor Unit

#### 1) AE040/060JXEDEH/EU, AE040/060RXEDEG/EU

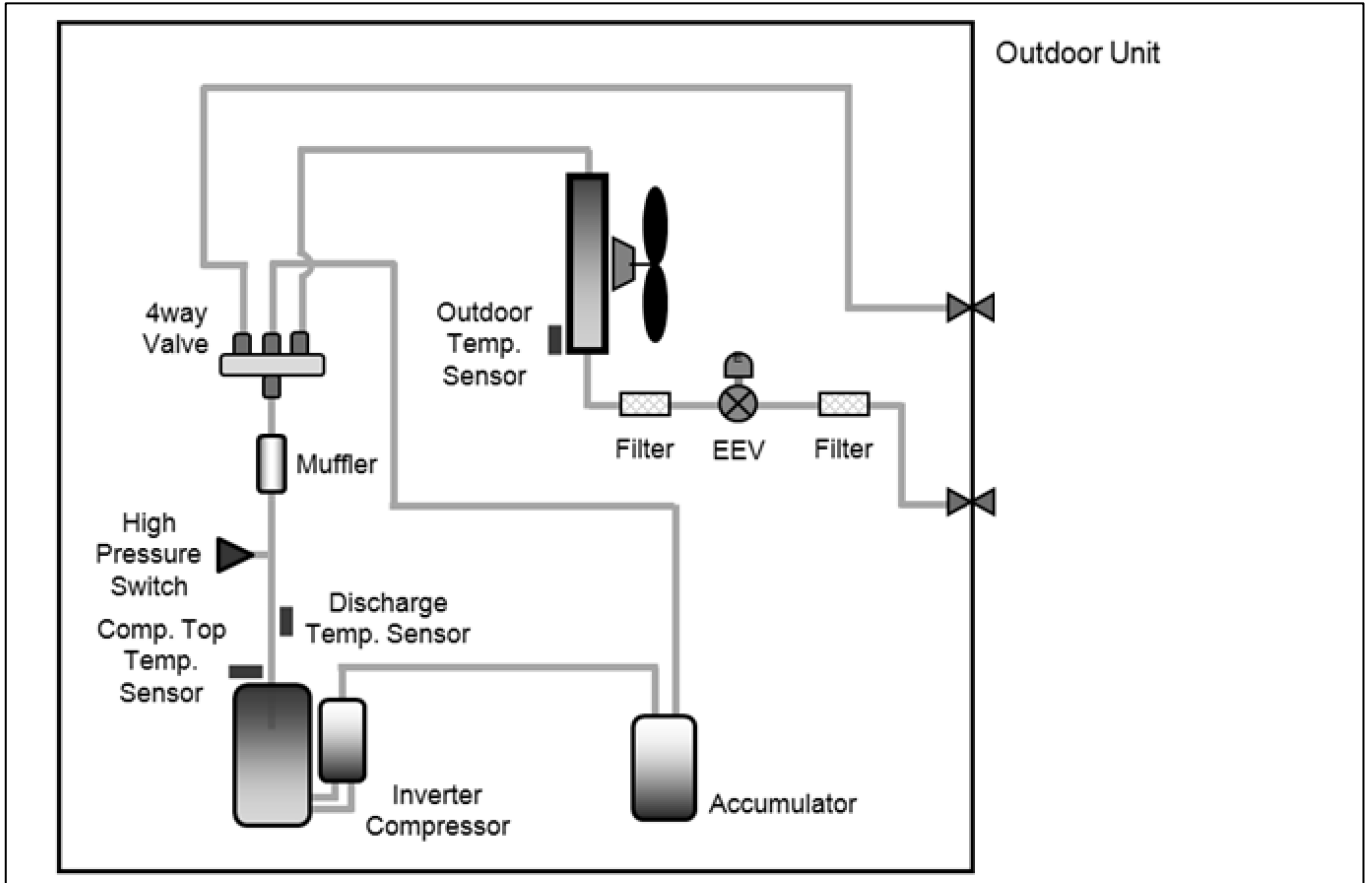


#### 2) AE090JXED\*H/EU, AE090RXED\*G/EU

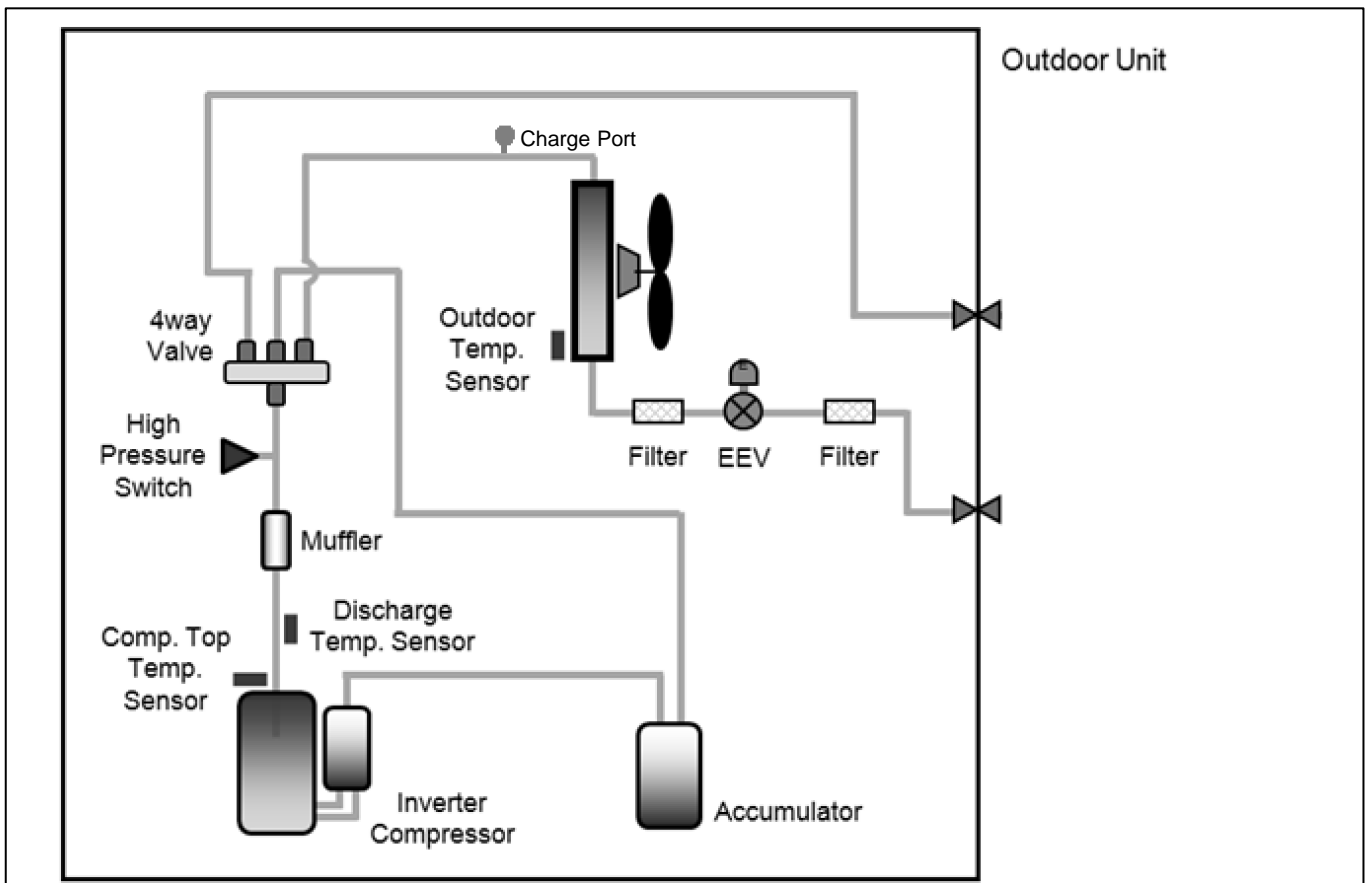

## 5. Cycle Diagrams

### 5-1. Outdoor Unit

#### 3) AE120/140/160JXED\*H/EU

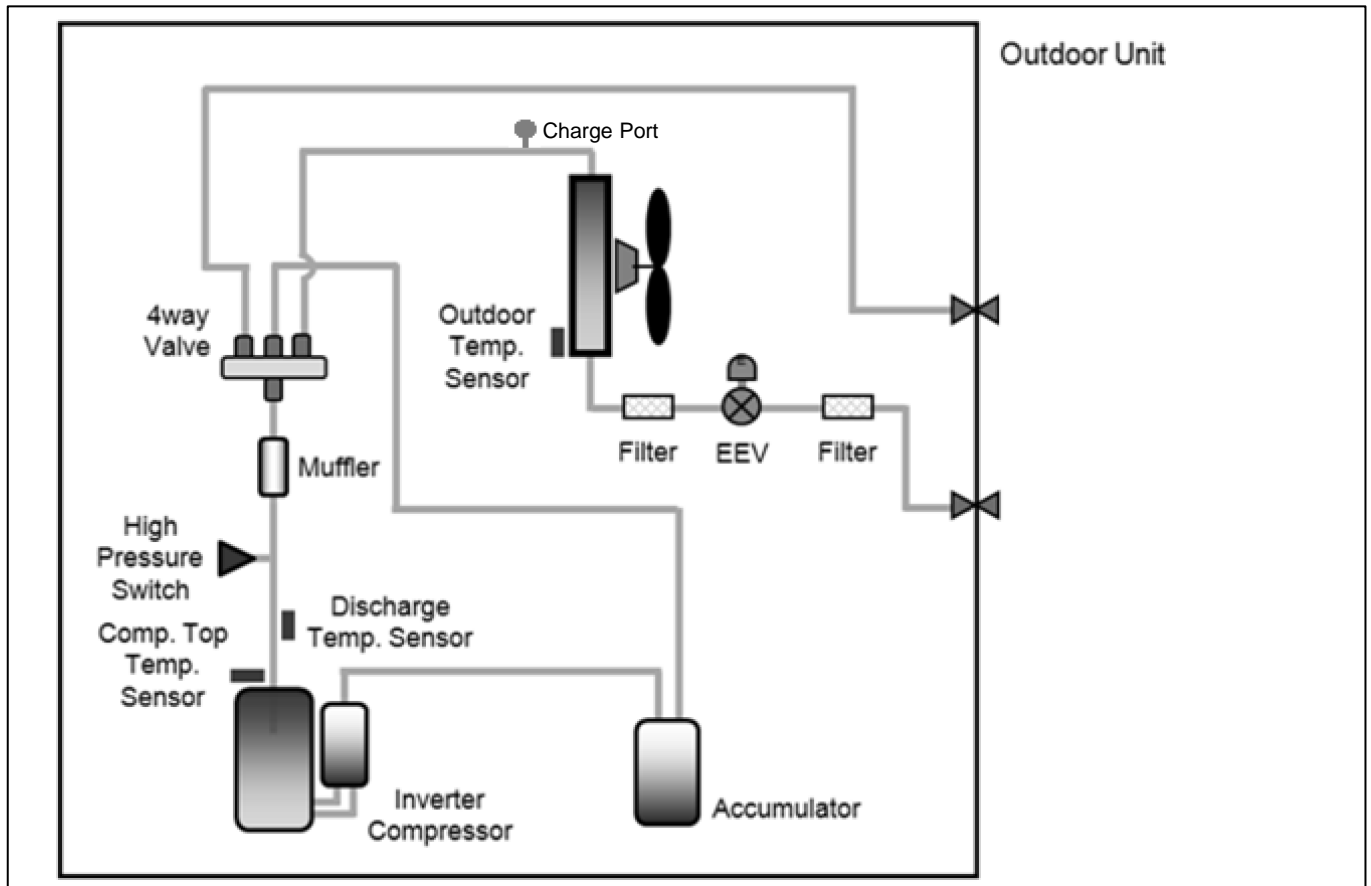




### 6. Wiring Diagrams

#### 6-1. Outdoor Unit


##### 1) AE040/060JXEDEH/EU

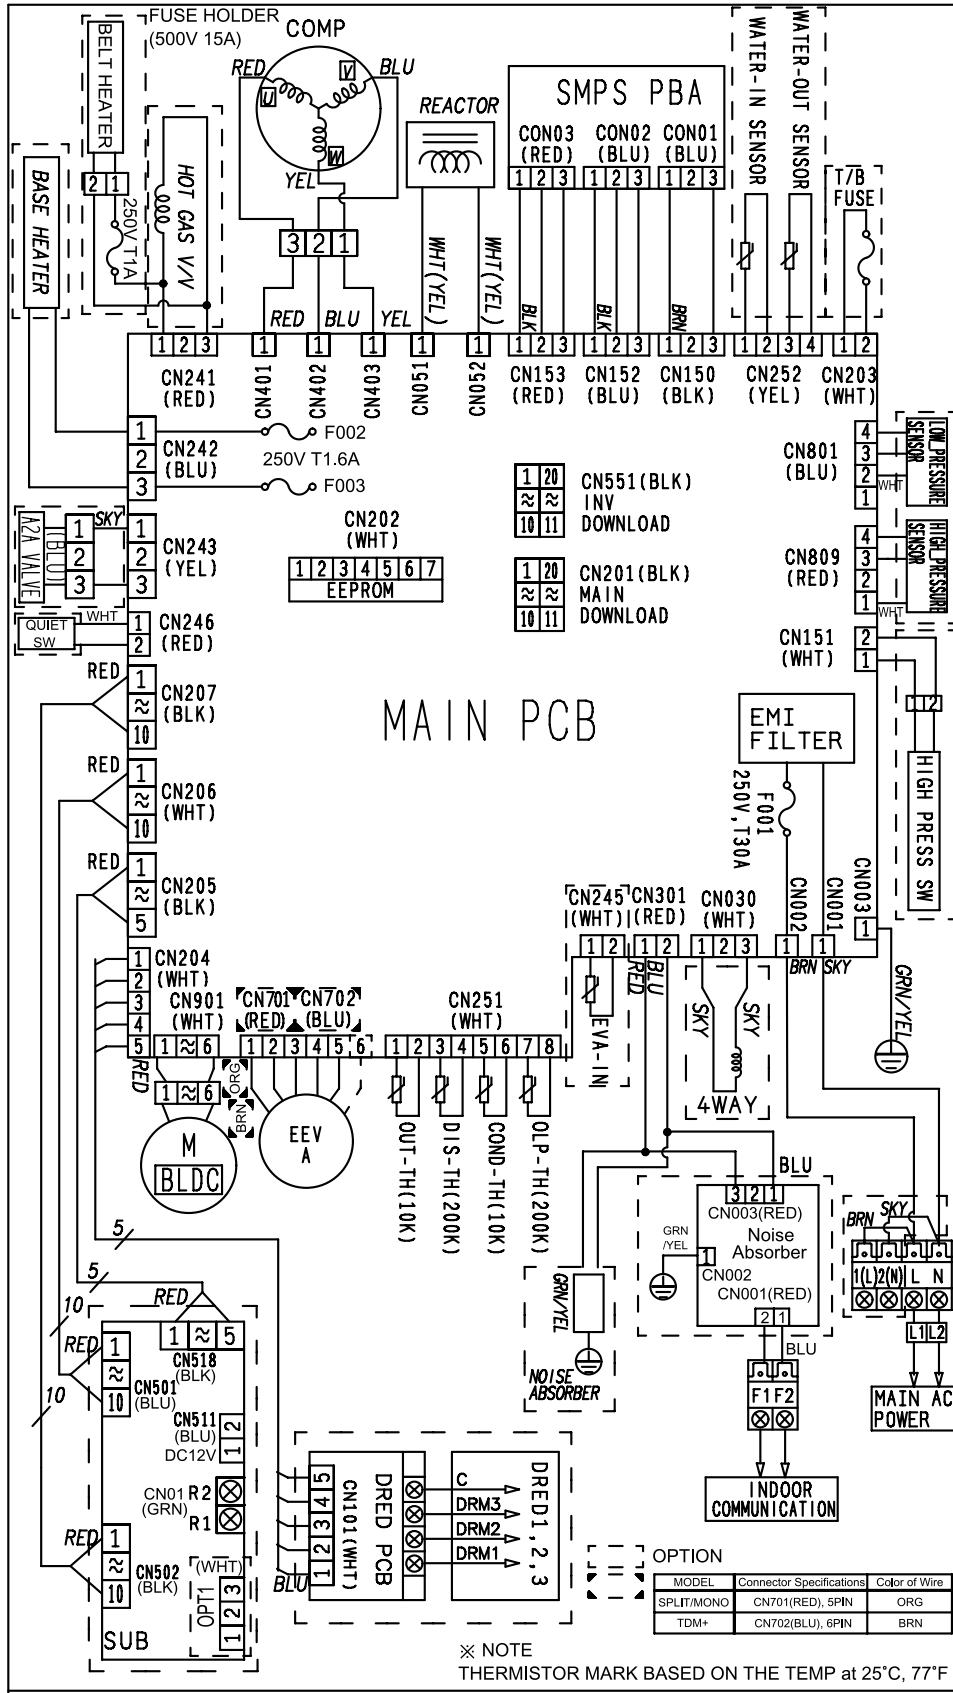

## 6. Wiring Diagrams

### 6-1. Outdoor Unit

#### 2) AE040/060RXEDEG/EU

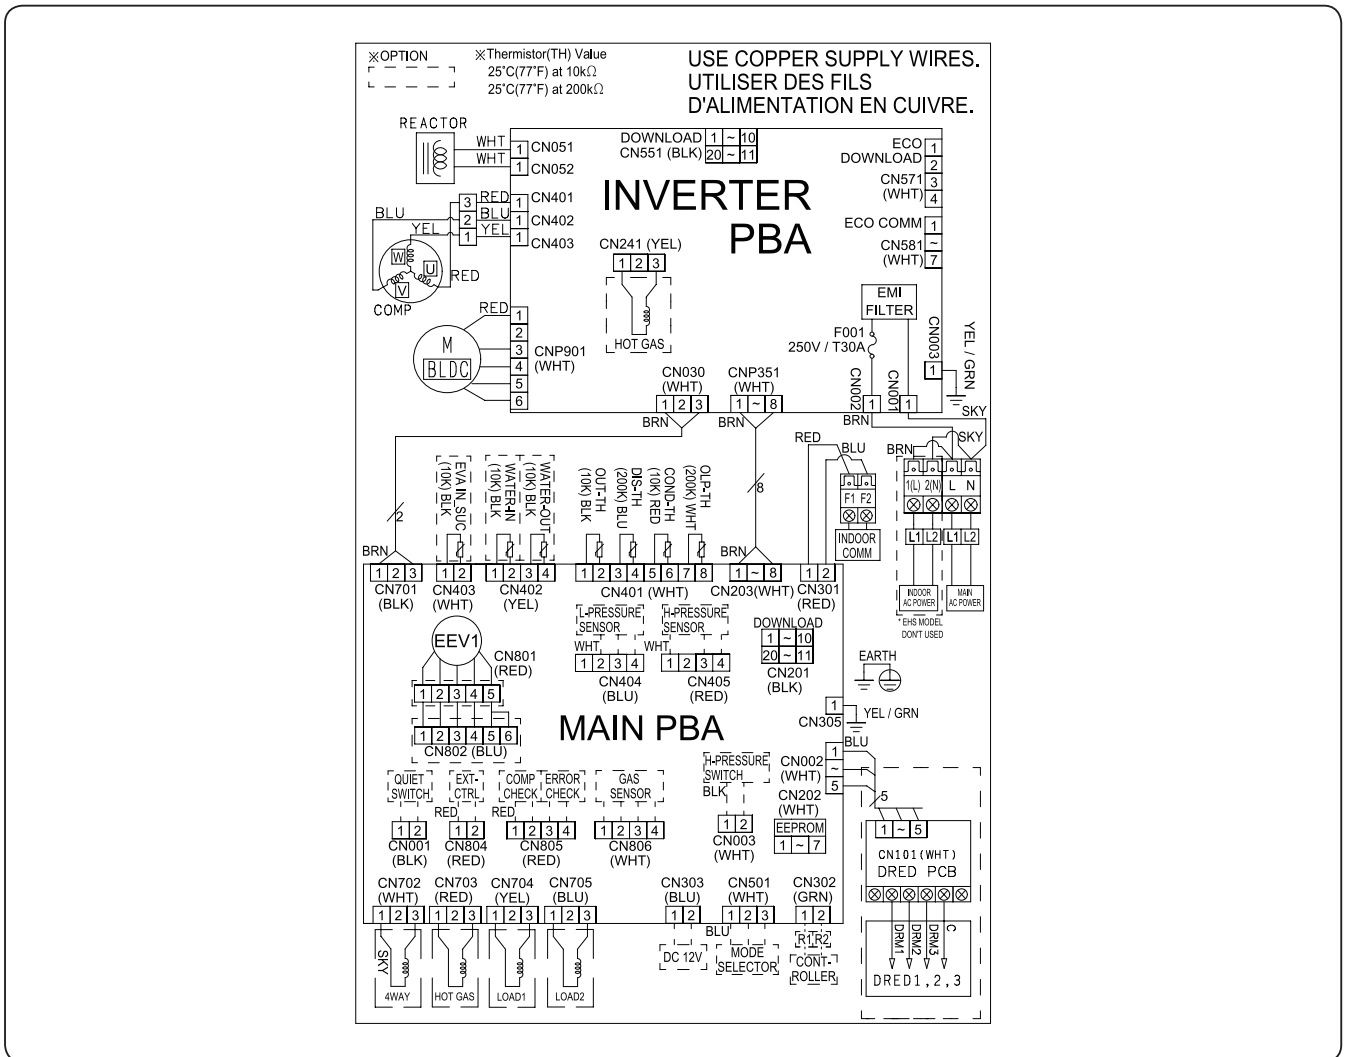

M BLDC	BLDC FAN MOTOR	COMP	COMPRESSOR
OUT-TH	Thermistor OUT(10K)	DIS-TH	Thermistor DISCHARGE(200K)
COND-TH	Thermistor COND(10K)	OLP-TH	Thermistor OLP(200K)

**NOTE**

1. This wiring diagram applies only to the Outdoor unit.
2. Symbols show as follow :  
 blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue, grn: green
3. or connection wiring indoor-outdoor transmission F1-F2, indoor-wired remote controller transmission F3-F4.
4. ⚡ Protective earth(SCREW)






## 6. Wiring Diagrams

### 6-1. Outdoor Unit

#### 5) AE090RXEDGG/EU

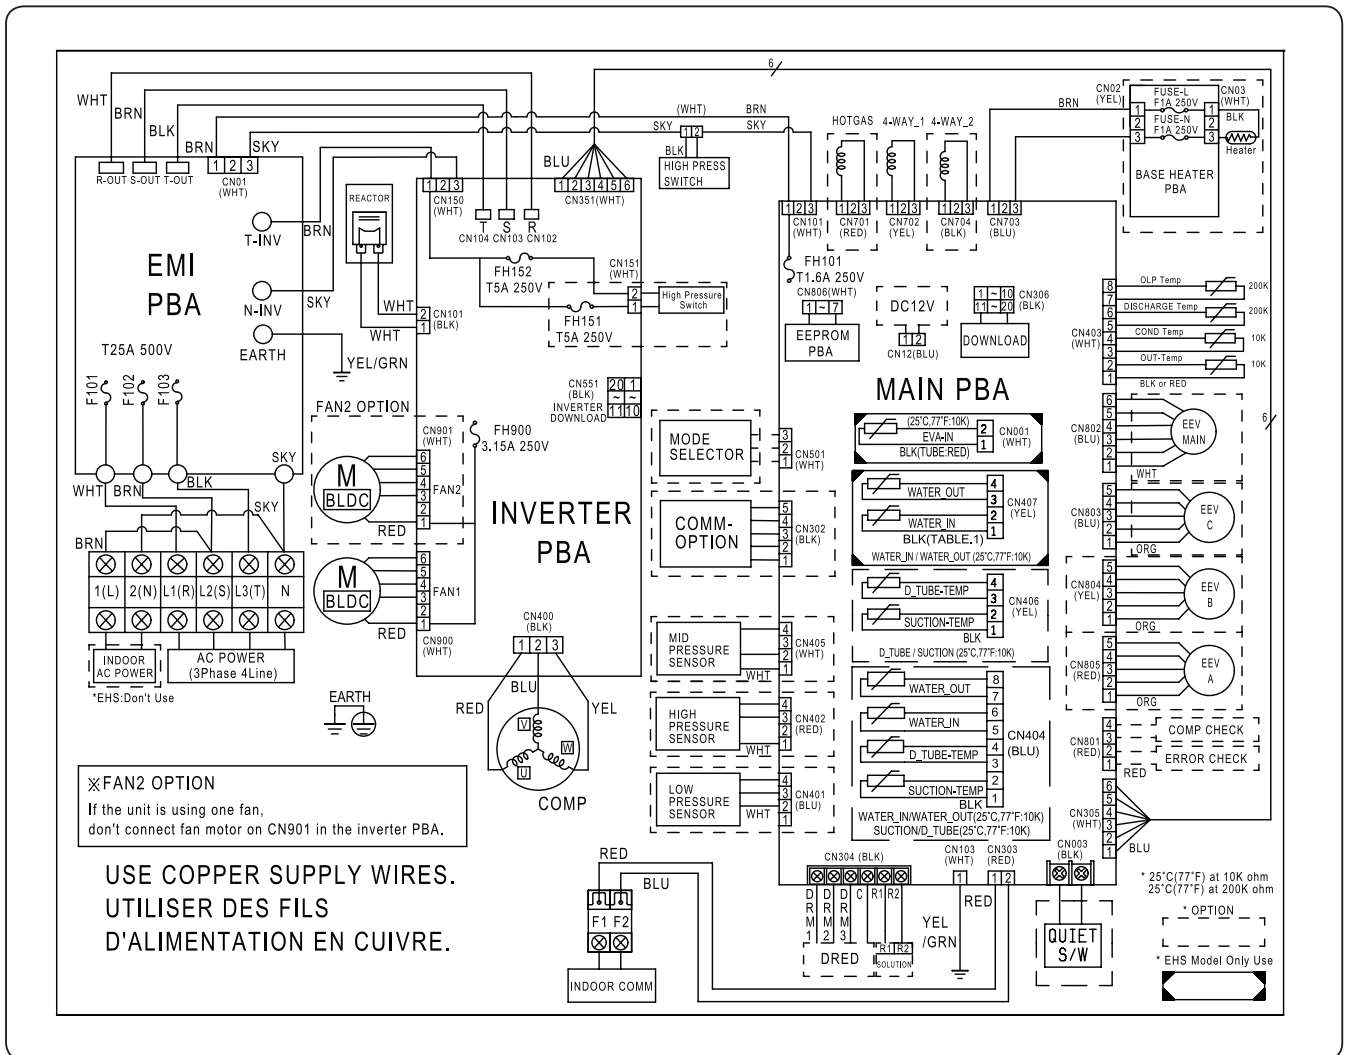

M BLDC	BLDC FAN MOTOR	COMP	COMPRESSOR
Comm	Communication	OUT-Temp	Thermistor OUT(10K)
COND-Temp	Thermistor COND(10K)	DISCHARGE-Temp	Thermistor DISCHARGE(200K)
OLP-Temp	Thermistor OLP(200K)	SUCTION-Temp	Thermistor SUCTION(10K)


**NOTE**

1. This wiring diagram applies only to the Outdoor unit.
2. Symbols show as follow :  
blk: black, red: red, blu: blue, wht: white, yel: yellow, brn: brown, sky: skyblue, grn: green
3. or connection wiring indoor-outdoor transmission F1-F2, indoor-wired remote controller transmission F3-F4.
4. Protective earth(SCREW)

# 6. Wiring Diagrams

## 6-1. Outdoor Unit

### 6) AE090/120/140/160JXEDGH/EU

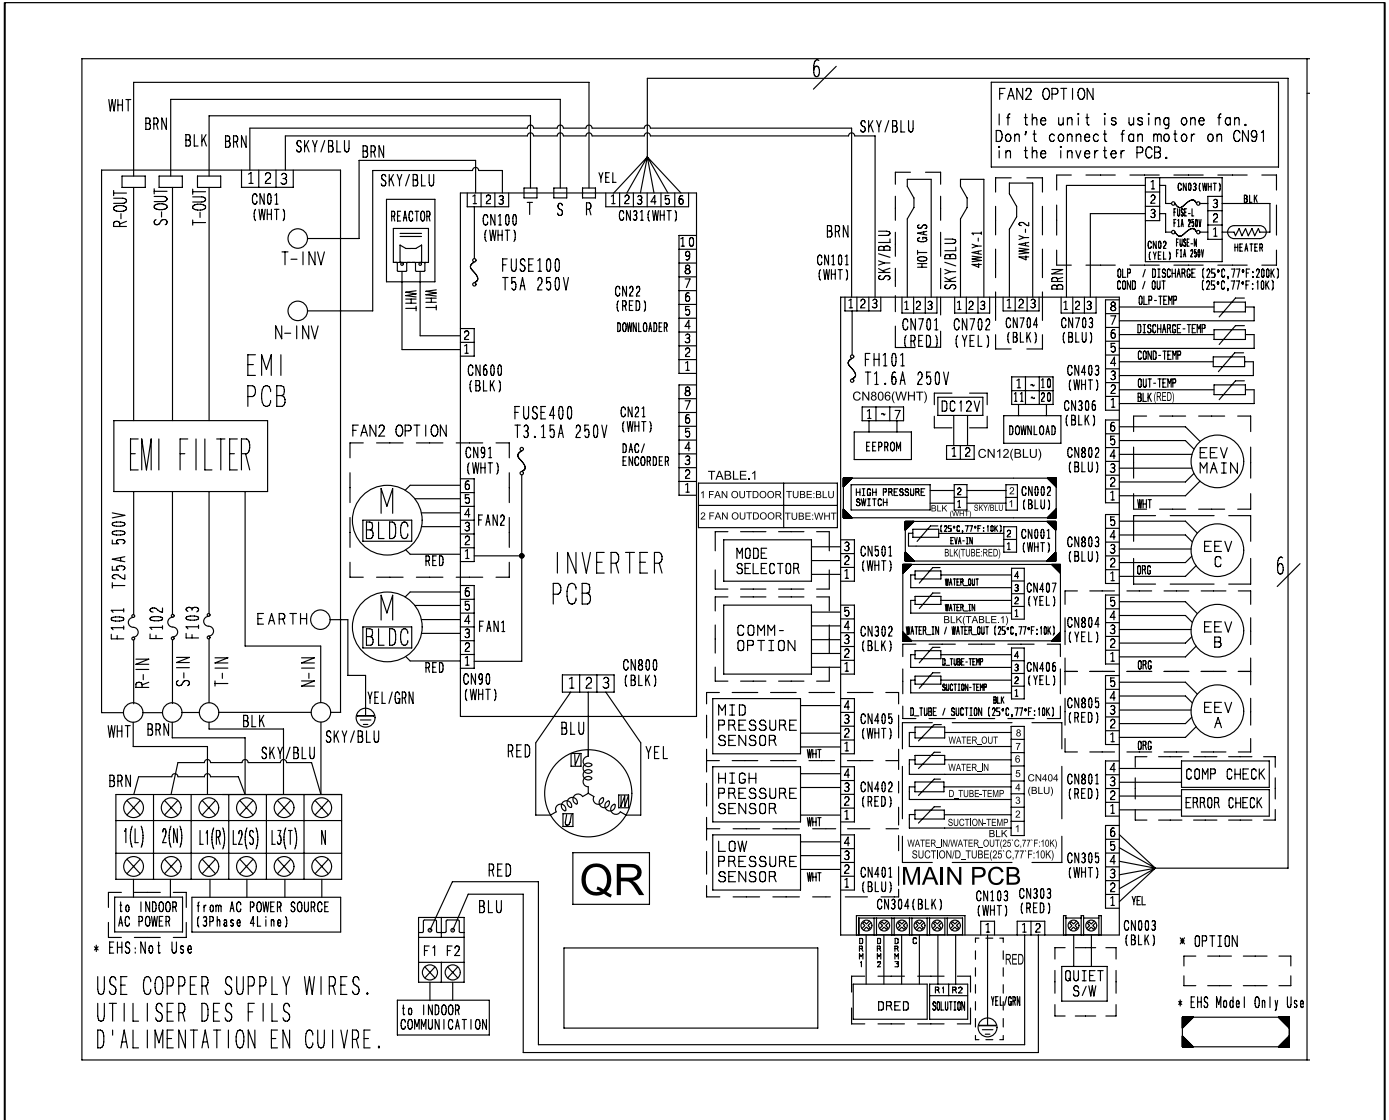

## 7. Electric Specifications

### 7-1. Outdoor Unit

#### 1) Power Supply (Single Phase)

Outdoor Unit	Rated		Voltage Range		MCA (A)	MFA (A)
	Hz	Volts	Min.	Max.		
AE040JXEDEH/EU	50	220-240	198	264	20	25.0
AE060JXEDEH/EU	50	220-240	198	264	20	25.0
AE090JXEDEH/EU	50	220-240	198	264	22	27.5
AE120JXEDEH/EU	50	220-240	198	264	28	35.0
AE140JXEDEH/EU	50	220-240	198	264	30	37.5
AE160JXEDEH/EU	50	220-240	198	264	32	40.0
AE040RXEDEG/EU	50	220-240	198	264	16	20.0
AE060RXEDEG/EU	50	220-240	198	264	16	20.0
AE090RXEDEG/EU	50	220-240	198	264	22	27.5

#### 2) Power Supply (3 Phase)

Outdoor Unit	Rated		Voltage Range		MCA	MFA
	Hz	Volts	Min.	Max.		
AE090JXEDGH/EU	50	380-415	342	457	10	16.1
AE120JXEDGH/EU	50	380-415	342	457	10	16.1
AE140JXEDGH/EU	50	380-415	342	457	11	16.1
AE160JXEDGH/EU	50	380-415	342	457	12	16.1
AE090RXEDGG/EU	50	380-415	342	457	10	16.1

#### Note


- ◆ Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord.  
(Code designation IEC : 60245 IEC 66 / CENELEC:H07RN-F)
- ◆ Select power supply cord based on MCA.
- ◆ MFA is used to select the circuit breaker and the ground fault circuit interrupter (earth leakage circuit breaker).
- ◆ MCA represents maximum input current.
- ◆ MFA represents capacity which may accept MCA.
- ◆ Communication cable specification : 0.75~1.5mm<sup>2</sup>, 2wires

#### ※ Abbreviations

- MCA : Minimum Circuit Amps.(A)
- MFA : Maximum Fuse Amps.(A)

## 8. Sound Pressure Level

### 8-1. Operation Sound Level

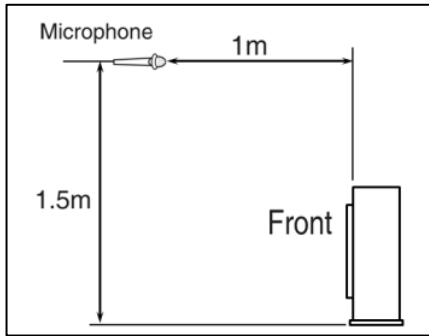


Model	Unit (dB(A))	
	Heating	Cooling
AE040JXEDEH/EU	46	46
AE060JXEDEH/EU	47	47

**Note**


- These operation sound value were obtained in an anechoic room. Sound pressure level will vary depending on a range of factors such as the construction of the particular room where the equipment is installed.
- Operation sound level may differ depending on operation and ambient conditions.

### 8-2. NC Curve

1) AE040JXEDEH/EU

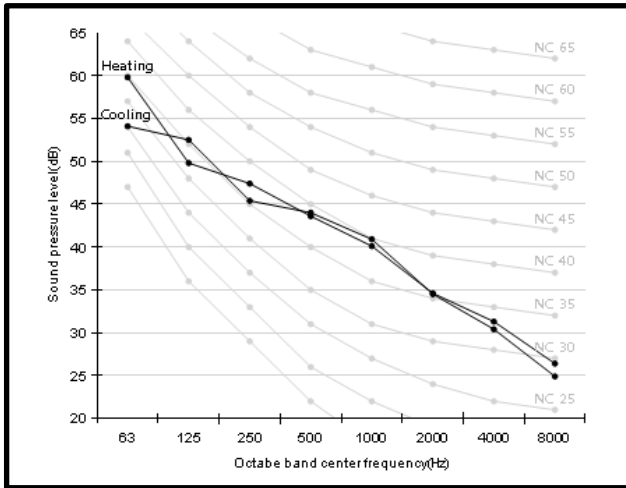


2) AE060JXEDEH/EU

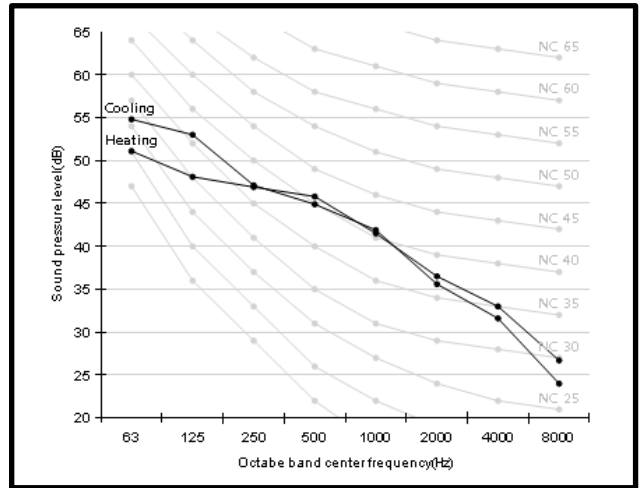



## 8. Sound Pressure Level

### 8-3. Operation Sound Level

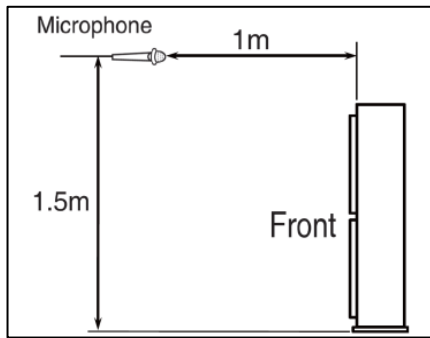


Model	Unit (dB(A))	
	Heating	Cooling
AE090JXEDEH/EU	49	50
AE120JXEDEH/EU	50	50
AE140JXEDEH/EU	50	52
AE160JXEDEH/EU	52	54

**Note**


- These operation sound value were obtained in an anechoic room. Sound pressure level will vary depending on a range of factors such as the construction of the particular room where the equipment is installed.
- Operation sound level may differ depending on operation and ambient conditions.

### 8-4. NC Curve


1) AE090JXEDEH/EU

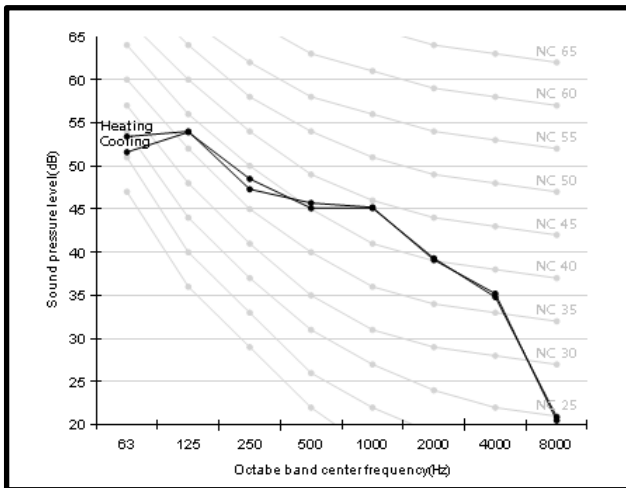


2) AE120JXEDEH/EU

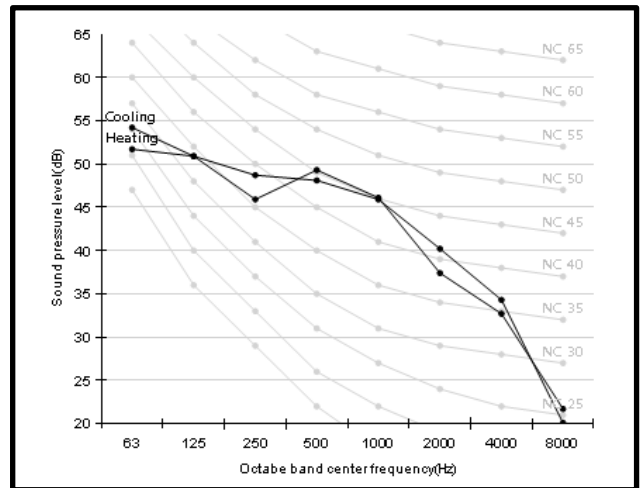

3) AE140JXEDEH/EU

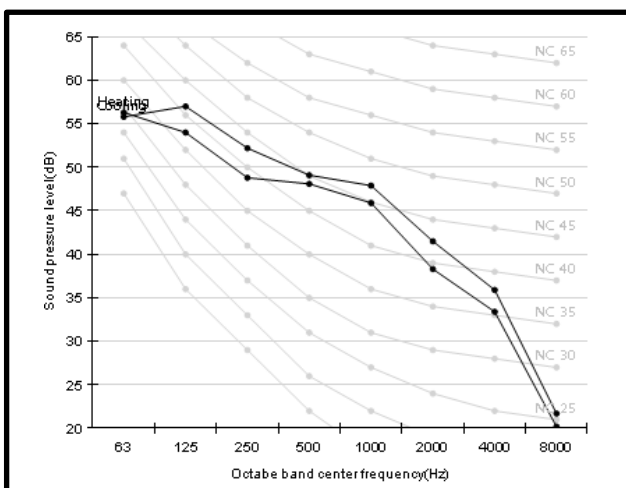


4) AE160JXEDEH/EU

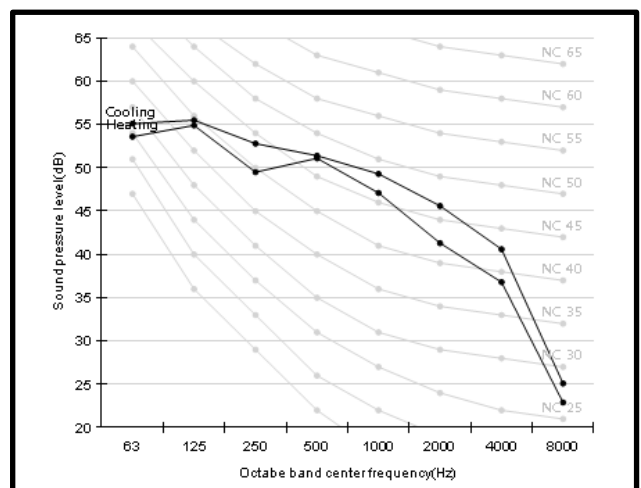

## 8. Sound Pressure Level

### 8-5. Operation Sound Level

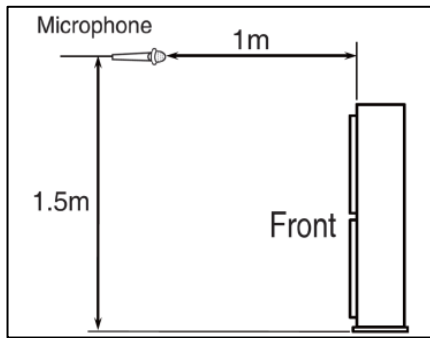


Model	Unit (dB(A))	
	Heating	Cooling
AE090JXEDGH/EU	49	50
AE120JXEDGH/EU	50	50
AE140JXEDGH/EU	50	52
AE160JXEDGH/EU	52	54

**Note**


- These operation sound value were obtained in an anechoic room. Sound pressure level will vary depending on a range of factors such as the construction of the particular room where the equipment is installed.
- Operation sound level may differ depending on operation and ambient conditions.

### 8-6. NC Curve


1) AE090JXEDGH/EU

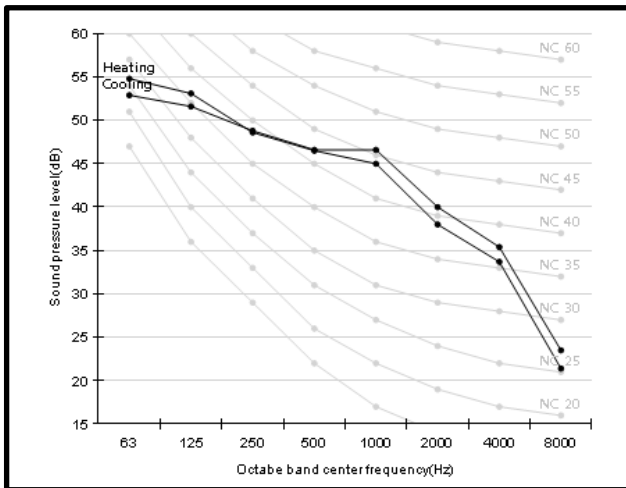


2) AE120JXEDGH/EU

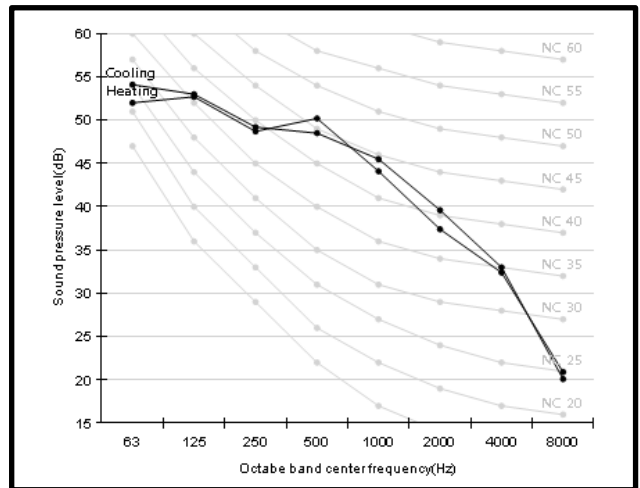

3) AE140JXEDGH/EU

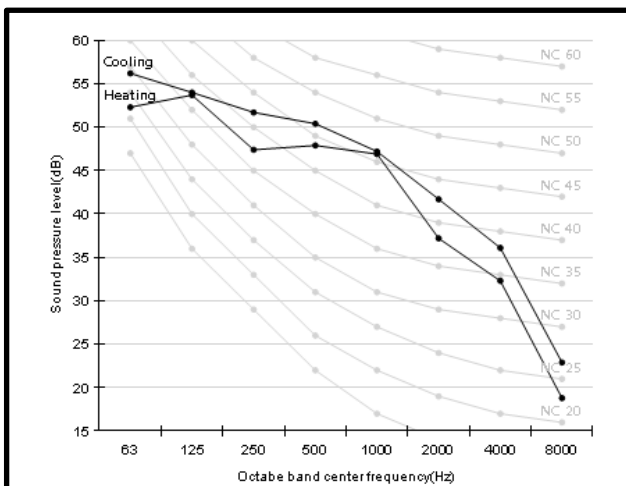


4) AE160JXEDGH/EU

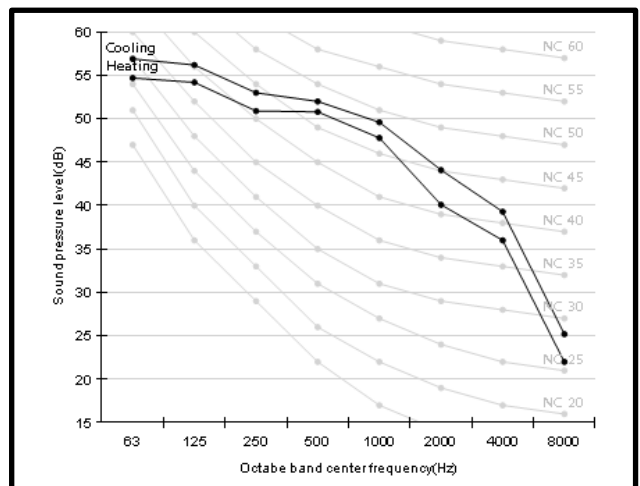

## 8. Sound Pressure Level

### 8-5. Operation Sound Level

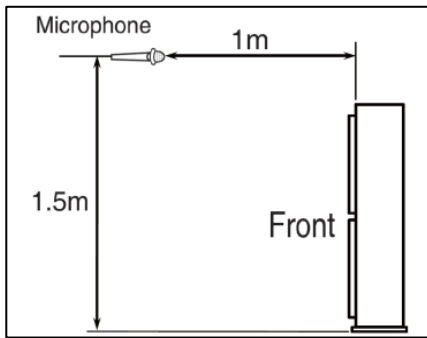


Model	Unit (dB(A))	
	Heating	Cooling
AE040RXEDEG/EU	44	46
AE060RXEDEG/EU	47	47
AE090RXEDEG/EU	49	49
AE090RXEDGG/EU	49	49

**Note**


- These operation sound value were obtained in an anechoic room. Sound pressure level will vary depending on a range of factors such as the construction of the particular room where the equipment is installed.
- Operation sound level may differ depending on operation and ambient conditions.

### 8-6. NR Curve


1) AE040RXEDEG/EU

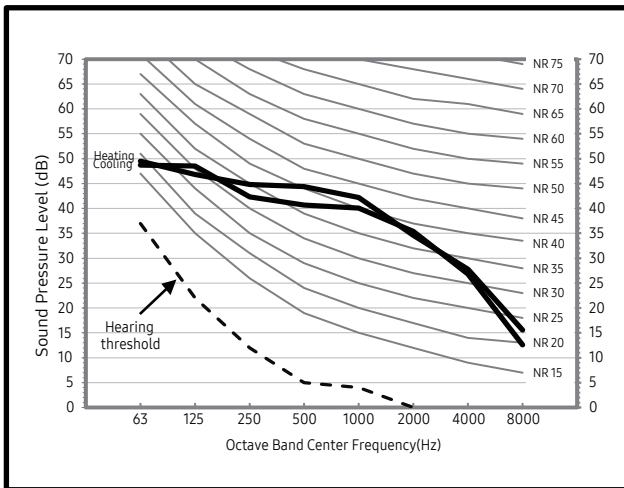


2) AE060RXEDEG/EU

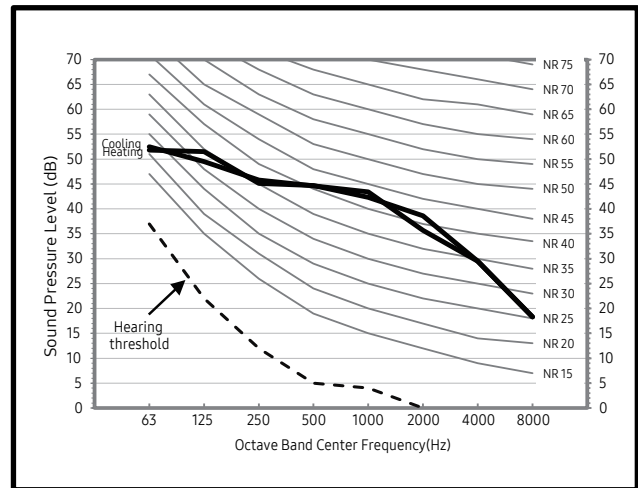

3) AE090RXEDEG/EU

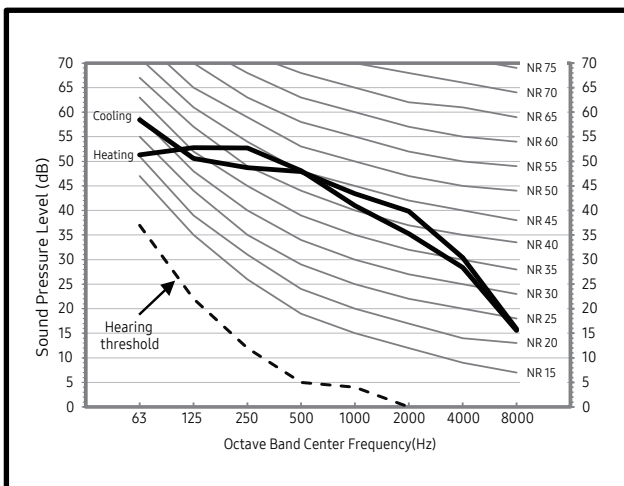


4) AE090RXEDGG/EU

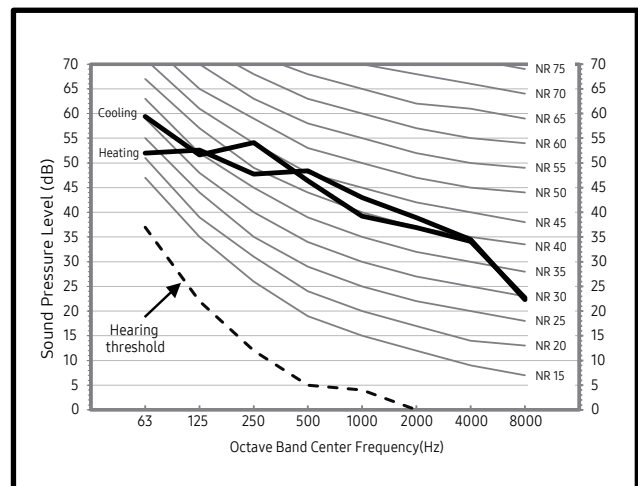


## 9. Operation Range

### 9-1. Outdoor Unit (AE040/060/090/120/140/160JXED\*H)

#### 1) Cooling

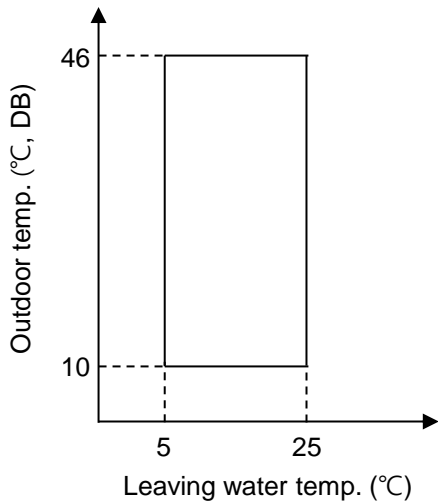

#### 2) Heating

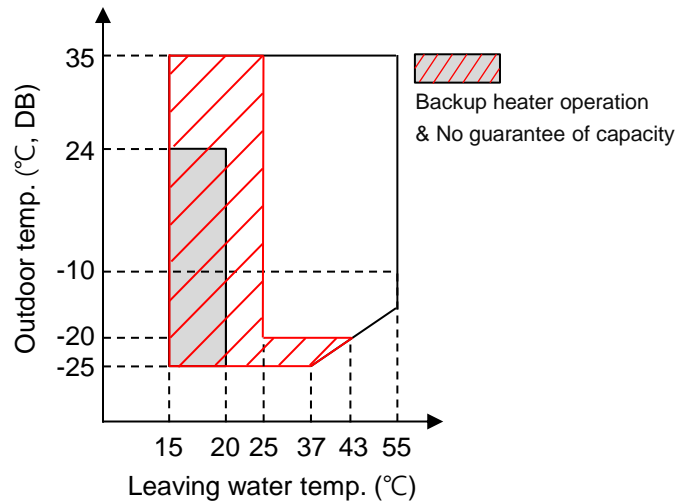

MONO Outdoor Unit		Water Temp. (°C)			Water Flow Rates (LPM)			Air Temp. (°C, DB/WB)		
		Min	Std	Max	Min	Std	Max	Min	Std	Max
Controller	Cooling	5	-	25						
	Heating	15	-	55						
Cooling	Inlet	-	23 (12 <sup>*2</sup> )	30	12 (7 <sup>*1</sup> )	Δ 5°C	58 (48 <sup>*1</sup> )	10/-	35/24	46/28
	Outlet	5	18 (7 <sup>*2</sup> )	25				-25/-	7/6 (-7/-8 <sup>*3</sup> )	35/24
Heating	Inlet	5	30 (40 <sup>*2</sup> )	-						
	Outlet	25 (15 <sup>*4</sup> )	35 (45 <sup>*2</sup> )	55						

\*1) Model : AE040JXEDEH/AE090JNYDEH  
 AE060JXEDEH/AE090JNYDEH  
 AE090JXEDEH/AE090JNYDEH  
 AE090JXEDGH/AE090JNYDEH


\*2) Eurovent Test Condition #2

\*3) NF PAC Low Temp. Heating Condition.

\*4) Back up heater operation.

※ Operation of outdoor unit possible, but no guarantee of capacity in this condition. ( -25°C ≤ Outdoor temp < -20°C)

### 3) DHW (Domestic Hot Water Tank)

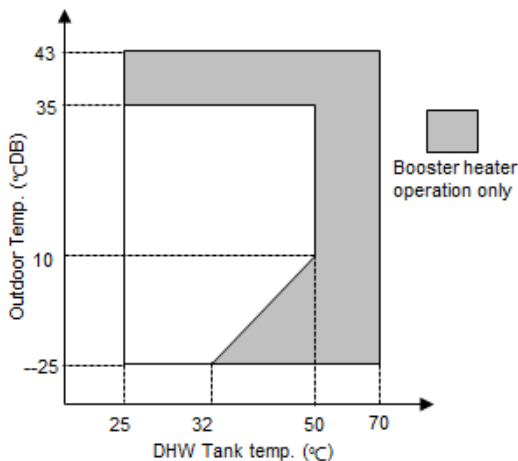


※ Special condition( 35°C < Outdoor temp. ≤ 43°C ) is operated by only Booster Heater.  
 SAMSUNG doesn't supply DHW for EHS Split.  
 Since it is a reference data, you have to check DHW operation range for yours.


## 9. Operation Range

### 9-2. Outdoor Unit (AE040/060/090RXED\*G)

#### 1) Cooling

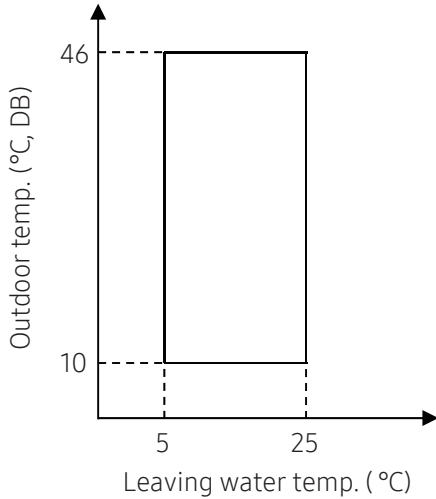

#### 2) Heating

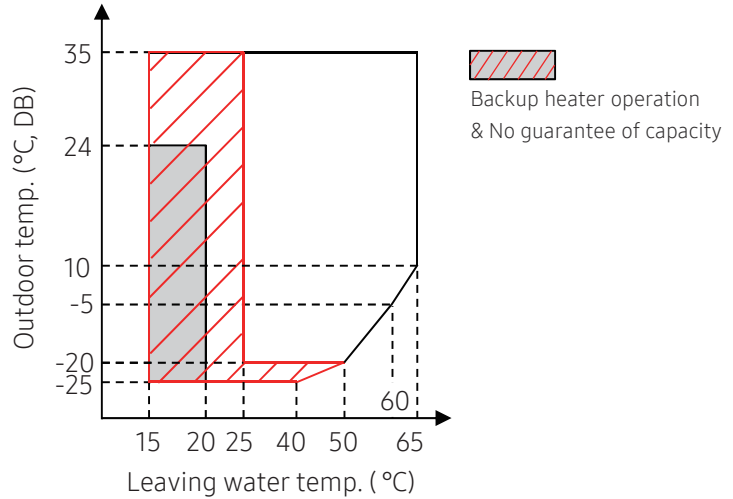

MONO Outdoor Unit		Water Temp. (°C)			Water Flow Rates (LPM)			Air Temp. (°C, DB/WB)		
		Min	Std	Max	Min	Std	Max	Min	Std	Max
Controller	Cooling	5	-	25						
	Heating	15	-	65						
Cooling	Inlet	-	23 (12 <sup>2</sup> )	30	12 (7 <sup>1</sup> )	Δ 5°C	58 (48 <sup>1</sup> )	10/-	35/24	46/28
	Outlet	5	18 (7 <sup>2</sup> )	25				-25/-	7/6	35/24
Heating	Inlet	5	30 (40 <sup>2</sup> )	-						
	Outlet	25 (15 <sup>3</sup> )	35 (45 <sup>2</sup> )	65						


\*1) Model : AE040RXEDEG  
 AE060RXEDEG  
 AE090RXEDEG  
 AE090RXEDGG

\*2) Eurovent Test Condition #2

\*3) Back up heater operation.

※ Operation of outdoor unit possible, but no guarantee of capacity in this condition.  
 (Backup heater operation = Outdoor temp < -20°C)

#### 3) DHW (Domestic Hot Water Tank)

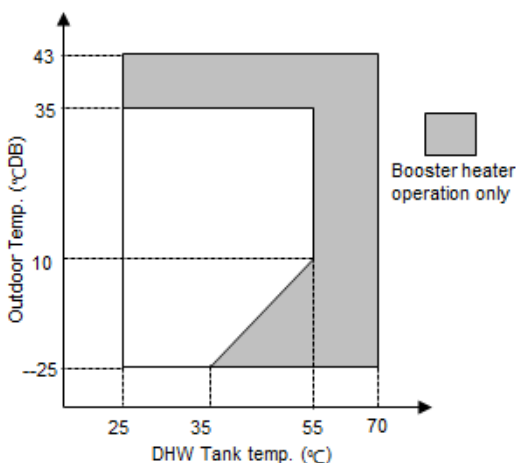

※ Special condition (35°C < Outdoor temp. ≤ 43°C) is operated by only Booster Heater.  
 SAMSUNG doesn't supply DHW for EHS Split.  
 Since it is a reference data, you have to check DHW operation range for yours.

# III. Hydro Unit

1. Specifications .....	47
2. Dimensional Drawings .....	50
3. Cycle Diagrams .....	51
4. Wiring Diagrams .....	53
5. Electric Specifications .....	57
6. Hydraulic Performance .....	60

# 1. Specifications

## 1-1. Hydro Unit (R410A 1Φ)

Model Name	Indoor Unit			AE090JNYDEH/EU	AE160JNYDEH/EU	
Hydro Unit	Power Supply		Φ, #, V, Hz	220~240V, 50Hz, 1Φ	220~240V, 50Hz, 1Φ	
	Water Pump	Type (Model Name)	-	Centrifurugal (UPM3 25-7.5)	Centrifurugal (Stratos 25 1-9)	
		Motor Input	W	60	90	
		Number of Unit	EA	1	1	
	Flow Switch	Type (Model Name)	-	Magnetic, Decreasing	Magnetic, Decreasing	
		Min. flow rates	LPM	7 ± 1.5	12 ± 1.5	
	Electric Heater		W	4,000	6,000	
	Expansion Vessel		Liter	8	8	
	Pressure Relief Valve		bar	2.9	2.9	
	Air Purge Valve		Φ, inch	BSPP male 3/8"	BSPP male 3/8"	
	Service Valve		Φ, inch	BSPP male 1 1/4"	BSPP male 1 1/4"	
	Sound *1	Sound Pressure	Heating Std	dB(A)	26	33
			Cooling Std	dB(A)	26	33
		Sound Power	Heating Std	dB(A)	40	47
	External Dimension	Net Weight		kg	45.0	45.0
		Shipping Weight		kg	55.0	55.0
		Net Dimensions (WxHxD)		mm	510 x 850 x 315	510 x 850 x 315
		Shipping Dimensions (WxHxD)		mm	564 x 1,024 x 426	564 x 1,024 x 426
	External Control	Back up Boiler		-	230VAC 0.5A(DO)	230VAC 0.5A(DO)
		Room Thermostat		-	230VAC 10mA(DI)	230VAC 10mA(DI)
Solar Pump		-	230VAC 10mA(DI)	230VAC 10mA(DI)		
Valves, 2 or 3way		-	230VAC 0.5A(DO)	230VAC 0.5A(DO)		

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

# 1. Specifications

## 1-2. Hydro Unit (R410A 3Φ)

Model Name	Indoor Unit			AE090JNYDGH/EU	AE160JNYDGH/EU	
Hydro Unit	Power Supply		V, Hz, Φ	380~415V, 50Hz, 3Φ	380~415V, 50Hz, 3Φ	
	Water Pump	Type (Model Name)	-	Centrifurugal (UPM3 25-7.5)	Centrifurugal (Stratos 25 1-9)	
		Motor Input	W	60	90	
		Number of Unit	EA	1	1	
	Flow Switch	Type (Model Name)	-	Magnetic, Decreasing	Magnetic, Decreasing	
		Min. flow rates	LPM	7 ± 1.5	12 ± 1.5	
	Electric Heater		W	6,000	6,000	
	Expansion Vessel		Liter	8	8	
	Pressure Relief Valve		bar	2.9	2.9	
	Air Purge Valve		Φ, inch	BSPP male 3/8"	BSPP male 3/8"	
	Service Valve		Φ, inch	BSPP male 1 1/4"	BSPP male 1 1/4"	
	Sound *1	Sound Pressure	Heating Std	dB(A)	26	33
			Cooling Std	dB(A)	26	33
		Sound Power	Heating Std	dB(A)	40	47
	External Dimension	Net Weight		kg	46.5	46.5
		Shipping Weight		kg	56.0	56.0
		Net Dimensions (WxHxD)		mm	510 x 850 x 315	510 x 850 x 315
		Shipping Dimensions (WxHxD)		mm	564 x 1,024 x 426	564 x 1,024 x 426
	External Control	Back up Boiler		-	230VAC 0.5A(DO)	230VAC 0.5A(DO)
		Room Thermostat		-	230VAC 10mA(DI)	230VAC 10mA(DI)
Solar Pump		-	230VAC 10mA(DI)	230VAC 10mA(DI)		
Valves, 2 or 3way		-	230VAC 0.5A(DO)	230VAC 0.5A(DO)		

\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.



# 1. Specifications

## 1-3. Hydro Unit (R32)

Model Name	Indoor Unit			AE090RNYDEG/EU	AE090RNYDGG/EU	
Hydro Unit	Power Supply		V, Hz, $\Phi$	220~240V, 50Hz, 1 $\Phi$	380~415V, 50Hz, 3 $\Phi$	
	Water Pump	Type (Model Name)		-	Centrifurugal (UPM3 25-7.5)	Centrifurugal (UPM3 25-7.5)
		Motor Input		W	60	60
		Number of Unit		EA	1	1
	Flow SENSOR	Type (Model Name)		-	FLOW SENSOR	FLOW SENSOR
		Min. flow rates		LPM	7 $\pm$ 1.5	7 $\pm$ 1.5
	Electric Heater		W	4,000	6,000	
	Expansion Vessel		Liter	8	8	
	Pressure Relief Valve		bar	2.9	2.9	
	Air Purge Valve		$\Phi$ , inch	BSPP male 3/8"	BSPP male 3/8"	
	Service Valve		$\Phi$ , inch	BSPP male 1 1/4"	BSPP male 1 1/4"	
	Sound *3	Sound Pressure	Heating Std	dB(A)	26	26
			Cooling Std	dB(A)	26	26
		Sound Power	Heating Std	dB(A)	40	40
	External Dimension	Net Weight		kg	45.0	46.5
		Shipping Weight		kg	55.0	56.0
		Net Dimensions (WxHxD)		mm	510 x 850 x 315	510 x 850 x 315
		Shipping Dimensions (WxHxD)		mm	564 x 1,024 x 412	564 x 1,024 x 412
	External Control	Back up Boiler		-	AC 230V (Max 10mA)	AC 230V (Max 10mA)
		Room Thermostat		-	AC 230V (Max 22mA)	AC 230V (Max 22mA)
Solar Pump		-	AC 230V (Max 10mA)	AC 230V (Max 10mA)		
Valves, 2 or 3way		-	AC 230V (Max 22mA)	AC 230V (Max 22mA)		


\*1) Sound level was acquired in an anechoic room. Thus actual noise level may be different depending on the installation conditions.

## 2. Dimensional Drawings

### 2-1. Hydro Unit

1) AE090/160JNYD\*H/EU, AE090RNYD\*G/EU

(Unit : mm)

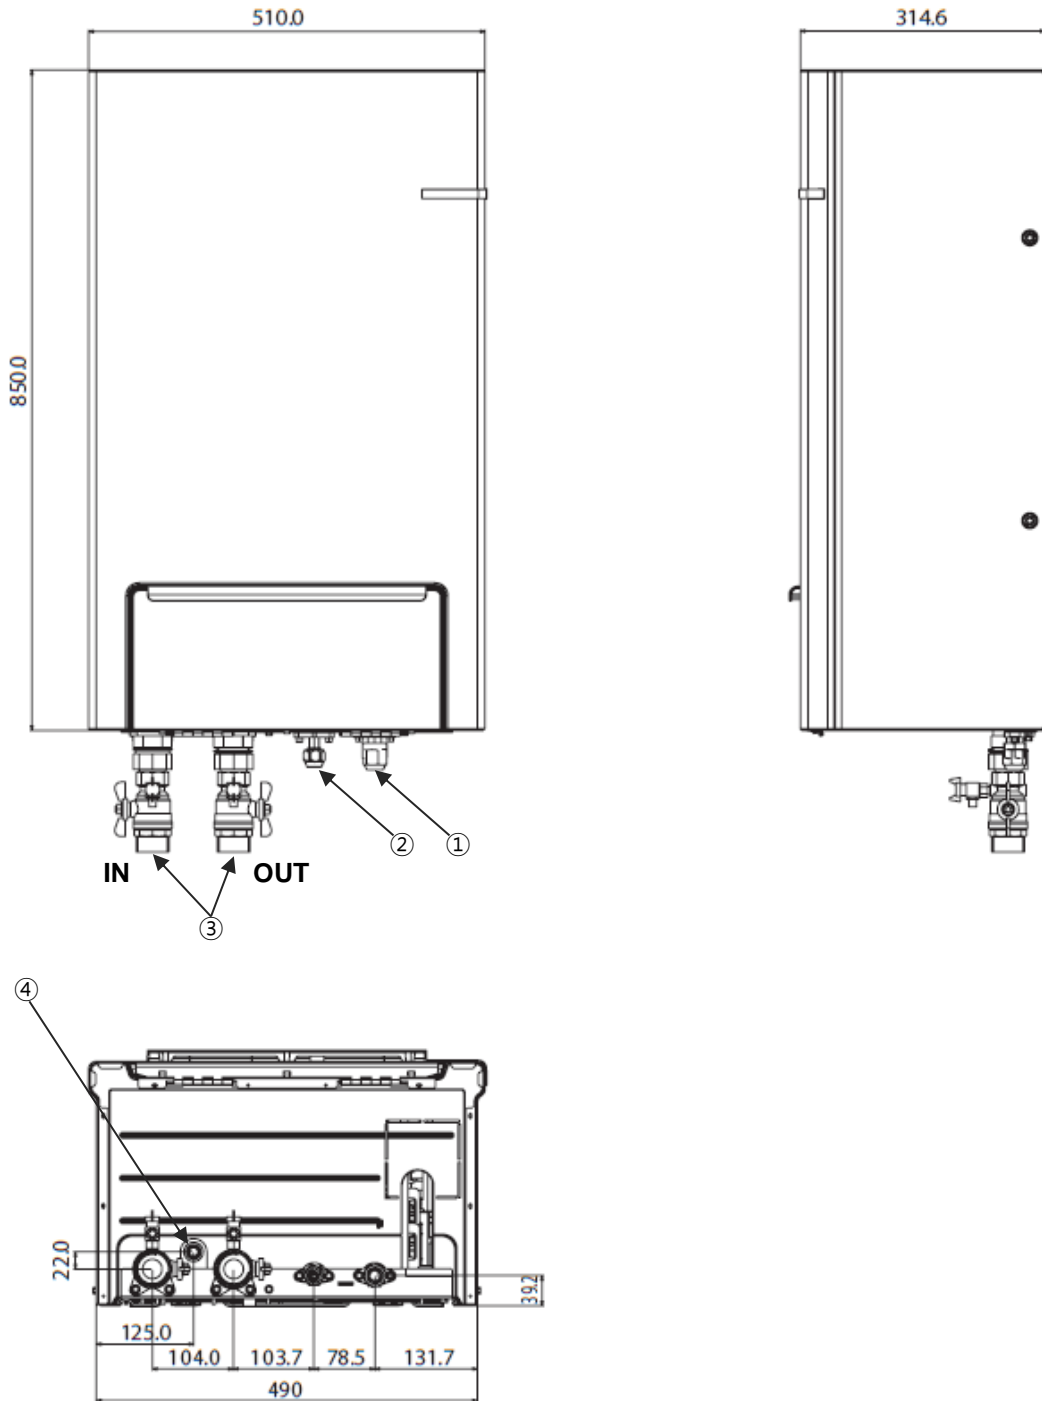


No.	Table of Descriptions
①	Gas Ref. Pipe
②	Liquid Ref. Pipe
③	Water Pipe (Inlet/Outlet)
④	Drain Hose Connector

### 3. Cycle Diagrams

#### 3-1. Hydro Unit

##### 1) AE090/160JNYD\*H/EU

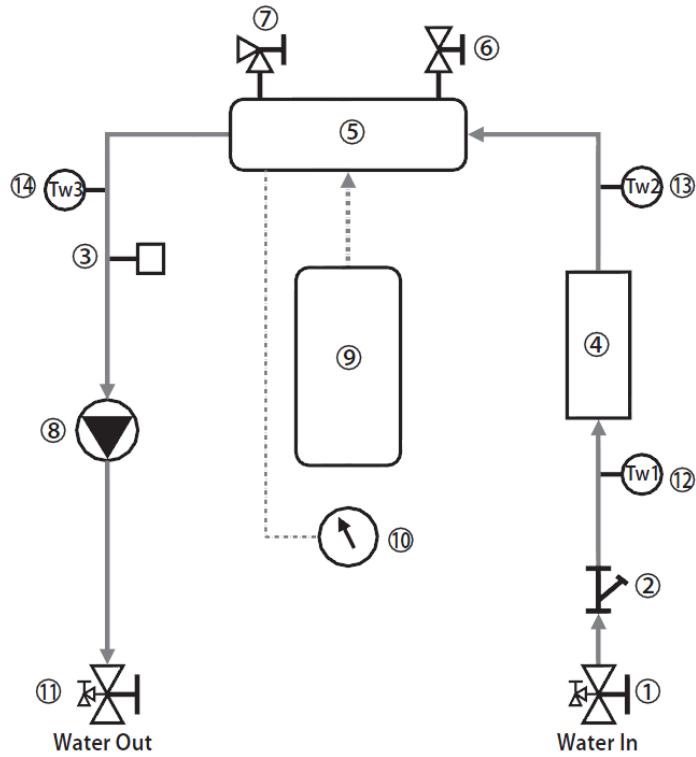


No.	Description
①	Water Pipe Service Valve (R)
②	Strainer
③	R410A : Flow Switch , R32 : Flow Sensor
④	Heat Changer
⑤	Backup Heater
⑥	Pressure Relief Valve
⑦	Air-vent
⑧	Variable Speed water pump
⑨	Expansion Tank
⑩	Manometer

No.	Description
⑪	Water Pipe Service Valve (L)
⑫	Water Temp. Sensor 1
⑬	Water Temp. Sensor 2
⑭	Water Temp. Sensor 3

### 3. Cycle Diagrams

#### 3-1. Hydro Unit

##### 2) AE090RNYD\*G/EU

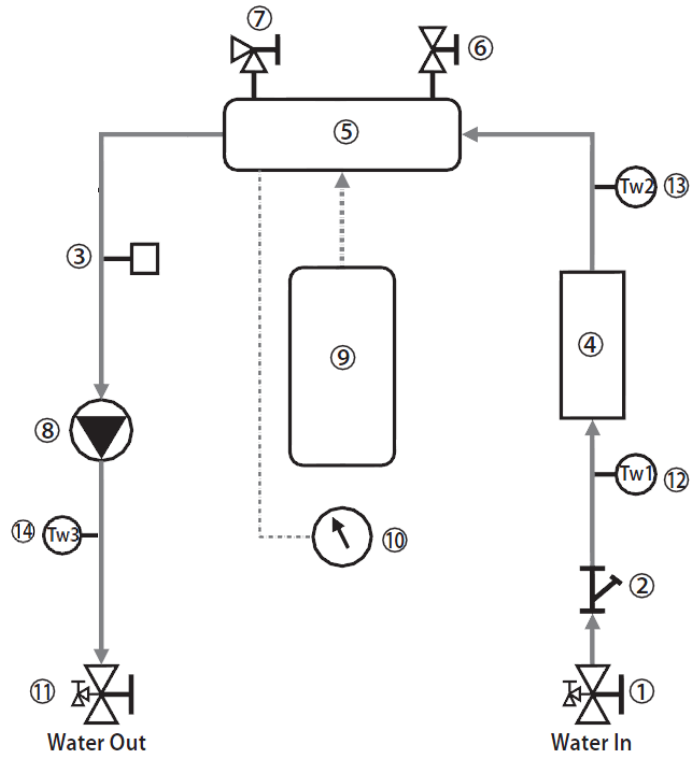

No.	Description
①	Water Pipe Service Valve (R)
②	Strainer
③	R410A : Flow Switch , R32 : Flow Sensor
④	Heat Changer
⑤	Backup Heater
⑥	Pressure Relief Valve
⑦	Air-vent
⑧	Variable Speed water pump
⑨	Expansion Tank
⑩	Manometer


No.	Description
⑪	Water Pipe Service Valve (L)
⑫	Water Temp. Sensor 1
⑬	Water Temp. Sensor 2
⑭	Water Temp. Sensor 3



# 4. Wiring Diagrams

## 4-1. Hydro Unit

### 2) AE090/160JNYDGH/EU

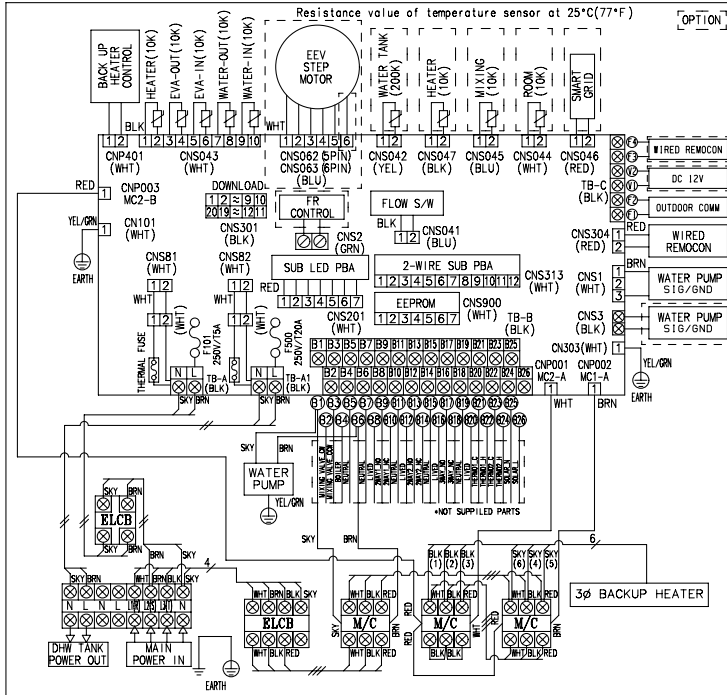

ERROR CODE	DISCRIPTION
E101	INDOOR UNIT COMMUNICATION ERROR (INDOOR UNIT CAN'T RECEIVE ANY DATA FROM OUTDOOR UNIT)
E108	INDOOR UNIT ADDRESS SETTING ERROR (WHEN 2 OR MORE INDOOR UNIT HAS SAME ADDRESS WITHIN THE NETWORK)
E109	INDOOR UNIT COMMUNICATION ERROR(INCOMPLETE ADDRESS SETTINGS)
E121	ROOM TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E122	EVA-IN TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E123	EVA-OUT TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E162	EEPROM H/W ERROR
E163	EEPROM OPTION SETTING ERROR
E198	THERMAL FUSE ERROR(TEMPERATURE INCREASE OF THER TERMINAL BLOCK)
E901	PHE INLET TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E902	PHE OUTLET TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E904	WATER TANK TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E911	FLOW SWITCH OPEN ERROR
E912	FLOW SWITCH CLOSE ERROR
E914	THERMOSTAT WRONG CONNECTION ERROR
E916	MIXING TEMPERATURE SENSOR ERROR(SHORT/OPEN)

SUB LED DISPLAY	DISCRIPTION
●	EEPROM ERROR(H/W OR OPTION SETTING)

\* Look up the manual according to install OPTION parts in detail. ● : FLICKERING


Bar code(39size)

CODE : DB68-05354A

# 4. Wiring Diagrams

## 4-1. Hydro Unit

### 3) AE090RNYDEG/EU

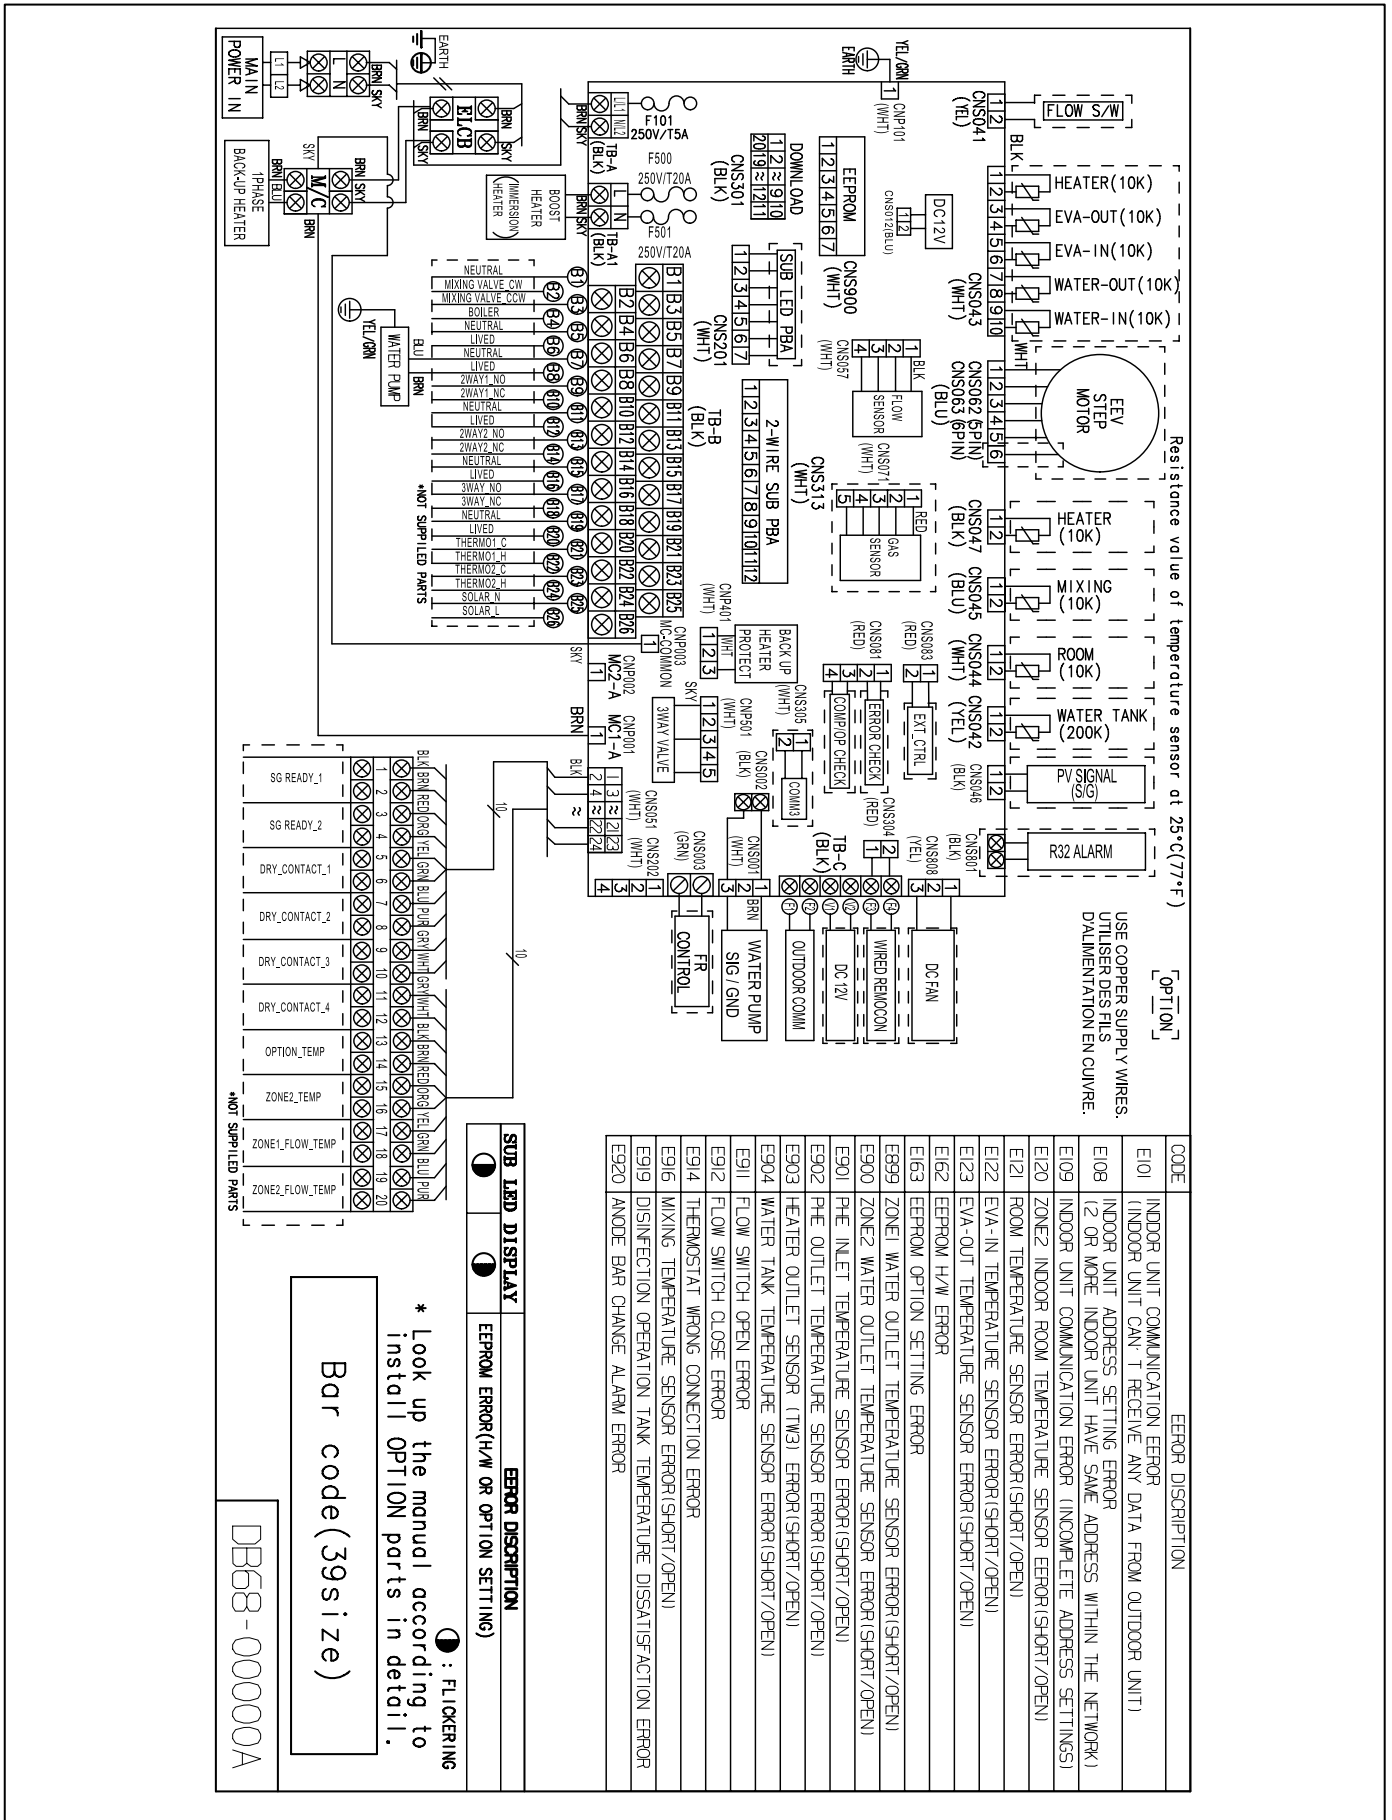

Resistance value of temperature sensor at 25°C(77°F)

[OPTION]

USE COPPER SUPPLY WIRES.  
UTILISER DES FILS  
DALIMENTATION EN CUIVRE.

CODE	ERROR DESCRIPTION
E101	INDOOR UNIT COMMUNICATION ERROR (INDOOR UNIT CAN'T RECEIVE ANY DATA FROM OUTDOOR UNIT)
E108	INDOOR UNIT ADDRESS SETTING ERROR (2 OR MORE INDOOR UNIT HAVE SAME ADDRESS WITHIN THE NETWORK)
E109	INDOOR UNIT COMMUNICATION ERROR (INCOMPLETE ADDRESS SETTINGS)
E120	ZONE2 INDOOR ROOM TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E121	ROOM TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E122	EVA-IN TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E123	EVA-OUT TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E162	EERPM H/W ERROR
E163	EERPM OPTION SETTING ERROR
E899	ZONE1 WATER OUTLET TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E900	ZONE2 WATER OUTLET TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E901	PHE INLET TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E902	PHE OUTLET TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E903	HEATER OUTLET SENSOR (TW3) ERROR(SHORT/OPEN)
E904	WATER TANK TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E911	FLOW SWITCH OPEN ERROR
E912	FLOW SWITCH CLOSE ERROR
E914	THERMOSTAT WRONG CONNECTION ERROR
E916	MIXING TEMPERATURE SENSOR ERROR(SHORT/OPEN)
E919	DISINFECTION OPERATION TANK TEMPERATURE DISSATISFACTION ERROR
E920	ANODE BAR CHANGE ALARM ERROR

● : FLOKERING

\* Look up the manual according to install OPTION parts in detail.


Bar code (39size)

DB68-00000A

# 4. Wiring Diagrams

## 4-1. Hydro Unit

### 4) AE090RNYDGG/EU

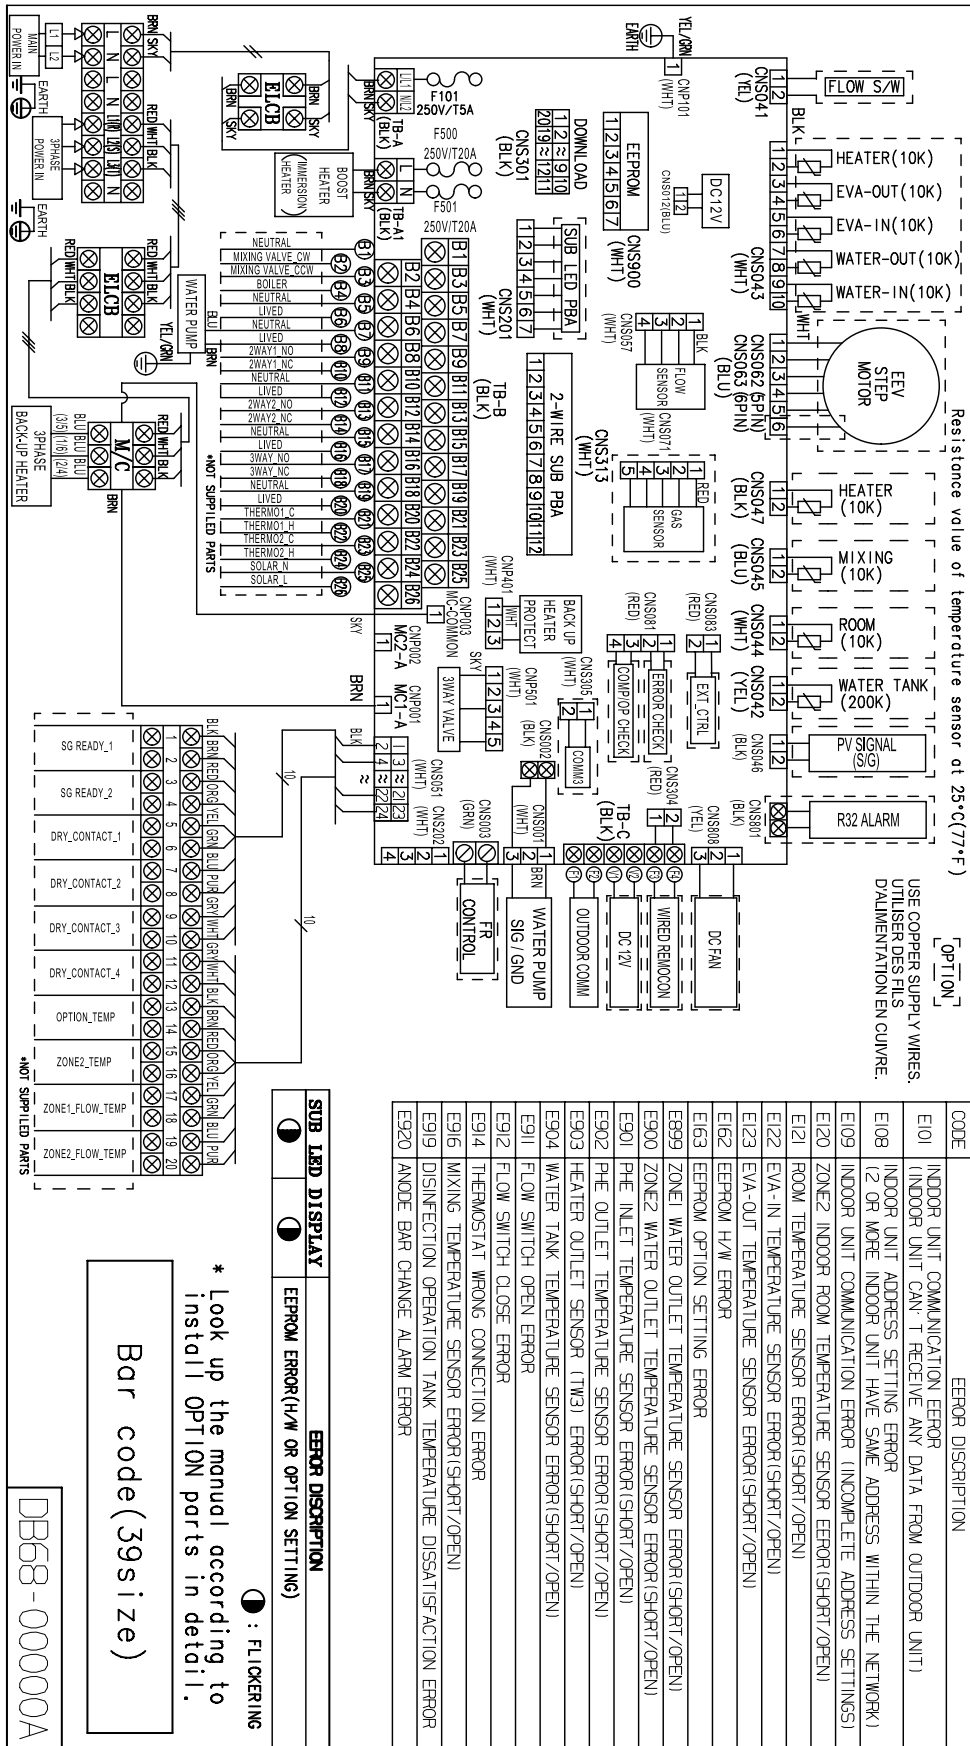

\* Look up the manual according to install OPTION parts in detail.

Bar code (39size)

DB68-00000A




## 5. Electric Specifications

### 5-1. Hydro Unit

#### 1) Power supply & Communication


Description	No. of wires	Max. A	Thickness	Supply Scope
Main power	2+ground	32A	4.0mm <sup>2</sup> H05RN-F or H07RN-F	Field supply (230V~, Input)
Communication	2	6A	0.75mm <sup>2</sup> H05RN-F or H07RN-F	7Vdc data

#### Communication cable connection

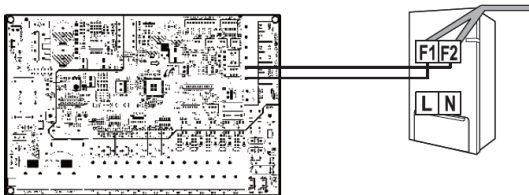


#### Power wire connection

##### 1 phase

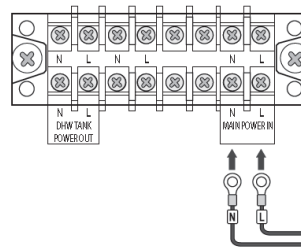

##### 3 phase

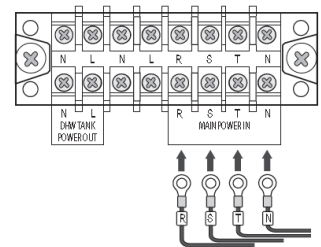

#### 2) Back-up Heater Power supply

Model	Heater capacity (kW)	ELCB capacity (A)
AE160JNYDGH/AE090JNYDGH	6	20
AE160JNYDEH	6	40
AE090JNYDEH	4	30


\* Circuit Breaker(ELCB, ELB, MCCB etc.)s written above are already included in the hydro unit.

ELCB : Earth leakage circuit breaker


ELB : Earth leakage breaker

MCCB : Molded case circuit breaker


##### 1 phase

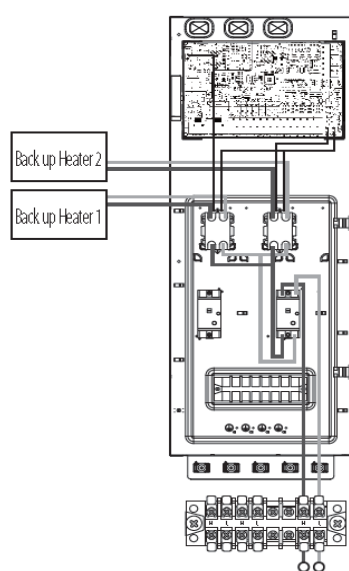

##### 3 phase

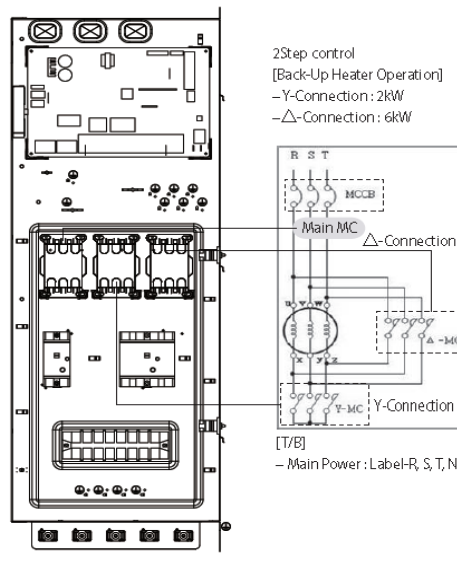

##### Booster heater (DHW)

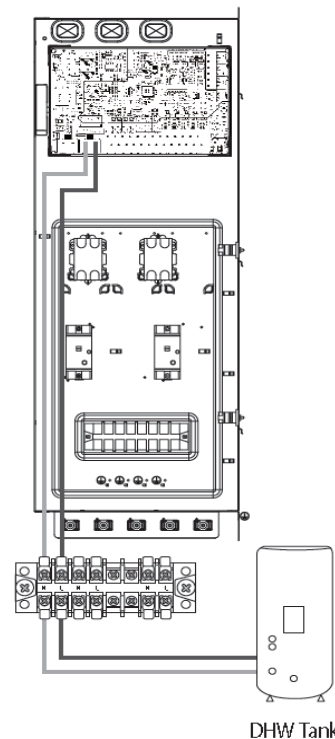


DHW Tank

## 5. Electric Specifications

### 5-1. Hydro Unit

#### 3) Thermostat


Description	No. of wires	Max. A	Thickness	Supply Scope
Room Thermostat for weather control	4	22 mA	> 0.75 mm <sup>2</sup> , H05RN-F or H07RH-F	Field supply (230 V~, Input)

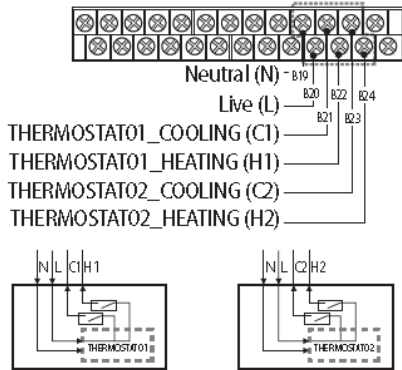


1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure what type is you use.
  - Contact signal must be "L". When you install two thermostats, thermostat2 is prior to thermostat1.

#### 4) 2way Valve


Description	No. of wires	Max. A	Thickness	Supply Scope
Motorized 2-way valve to shut off UFH loops during cooling.	2+ground	22 mA	> 0.75 mm <sup>2</sup> , H05RN-F or H07RH-F	Field supply (230 V~, Output)

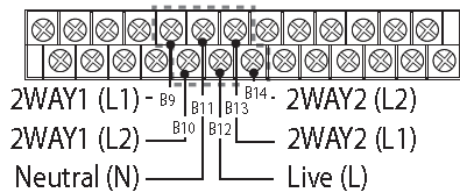


\* Connection of 2 wires 2-way valve

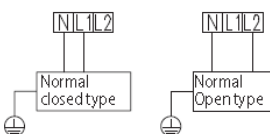

In case of normal closed type

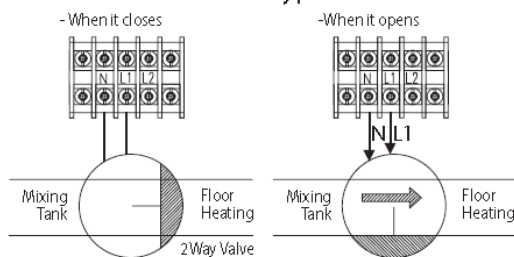

In case of normal open type

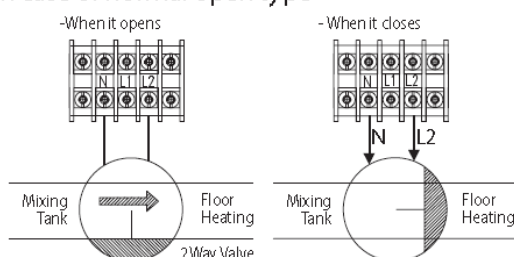

2-way motorized valve

- ▶ When outlet water temperature reach to lower than 16 °C in cooling mode, UFH loops will be closed.
- ▶ 230V AC
- ▶ 2 wires(Normal Open or Normal Close)

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure what type is you use.
  - Normal OPEN or Normal CLOSED.


**CAUTION** ⚠ There are 2 types of 2-way valve, normal open type and normal closed type. Make sure to connect terminals to right positions of terminal block. As detailed on the wiring diagram and illustrations above.

## 5. Electric Specifications


### 5-1. Hydro Unit

#### 5) 3way Valve

Description	No. of wires	Max. A	Thickness	Supply Scope
Diverting type 3way valve	4	22 mA	> 0.75 mm <sup>2</sup> , H05RN-F or H07RN-F	Field supply (230 V~, Input)

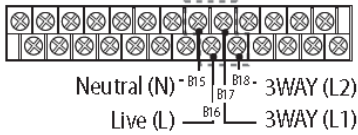

Status	L1	L2
A (Initial)	OFF	ON
B	ON	OFF

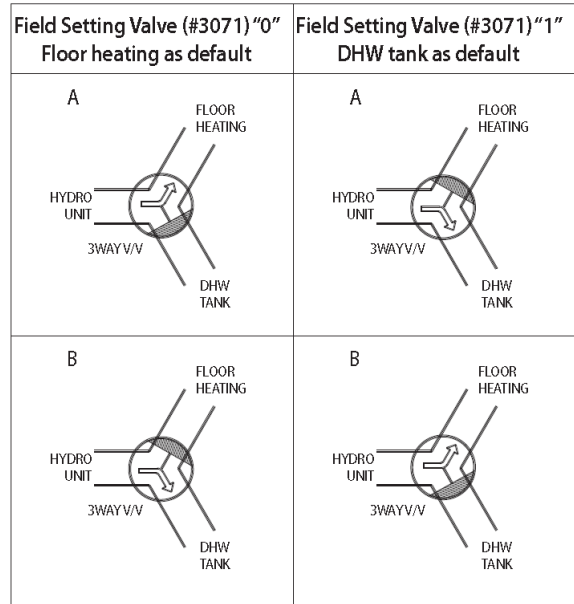


3-way diverting valve for water tank


- ▶ Diverting type cooling mode, UFH loops will be closed.
  - ▶ 230V AC
1. Before the installation, hydro unit should be turned off.
  2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
  3. Make sure what type of 3 way V/V you use.

#### 5) Back-up Boiler

Description	No. of wires	Max. A	Thickness	Supply Scope
Back-up Boiler	2+ground	10 mA	0.75mm <sup>2</sup> H05RN-F or H07RN-F	Field supply (230 V~, Input)

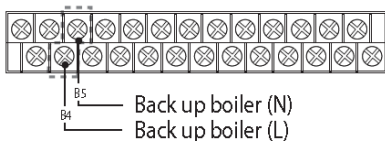


When it set back up boiler on the hydro unit (relay off)      When it order to back up boiler operates (relay on)

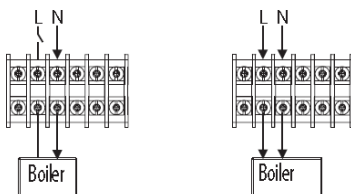

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure EXT-CTRL signal of back up boiler must be 230Vac.
  - Do not connect supply power of back up boiler directly.

#### 6) Mixing Valve

Description	No. of wires	Max. A	Thickness	Supply Scope
Mixing valve	4	22 mA	> 0.75 mm <sup>2</sup> , H05RN-F or H07RH-F	Field supply (230 V~, Input)

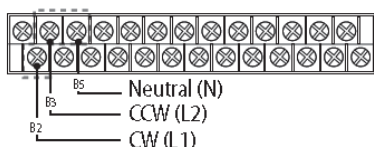


1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.

## 6. Hydraulic Performance

### 6-1. Water Pump


#### 1) ESP(External Static Pressure) Diagram

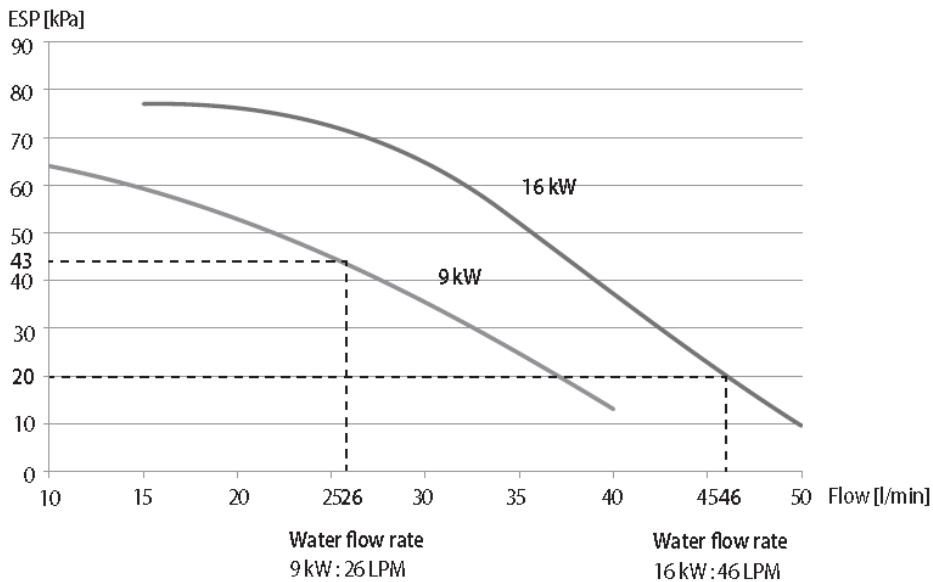

The illustration below shows the external static pressure of the unit depending on the water flow and the pump setting. If the pressure loss of total system is over 43(9 kW) or 20(16 kW)kPa, additional water pump should be installed in series. Otherwise, the flow rate might decreased, causing insufficient heating or cooling. When ESP is not enough, additional pump should be installed. In this case, install the PWM control external type pump additionally.

### 6-2. Expansion Vessel

#### 1) Setting the pre-pressure of the expansion vessel

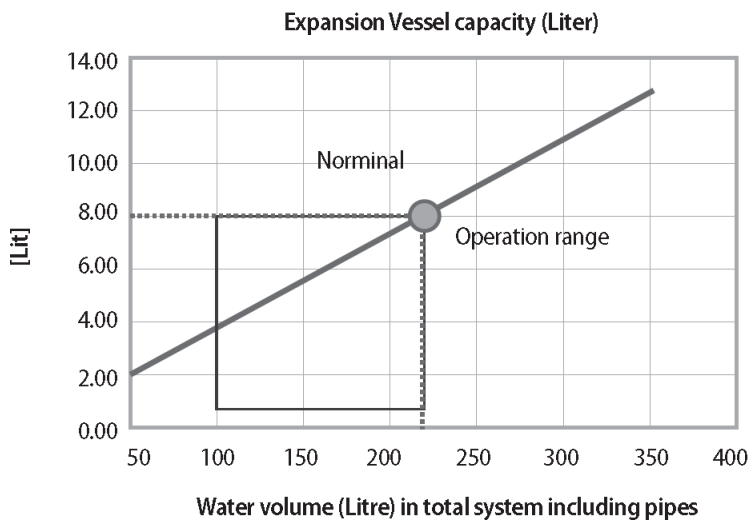

**When it is required to change the default pre-pressure of the expansion vessel(1 bar), keep in mind the following guidelines**

- ◆ Use only dry nitrogen to set the expansion vessel pre-pressure.
- ◆ Inappropriate setting of the expansion vessel pre-pressure will lead to malfunction of the system. Therefore, the pre-pressure should only be adjusted by a licensed installer.




• Water volume of total system for reliable performance is minimum 50 liters.

# III. Application


1. Application Examples .....	62
2. Mixing Valve .....	64
3. Installation .....	65

# 1. Application Examples

## 1-1. Space Heating

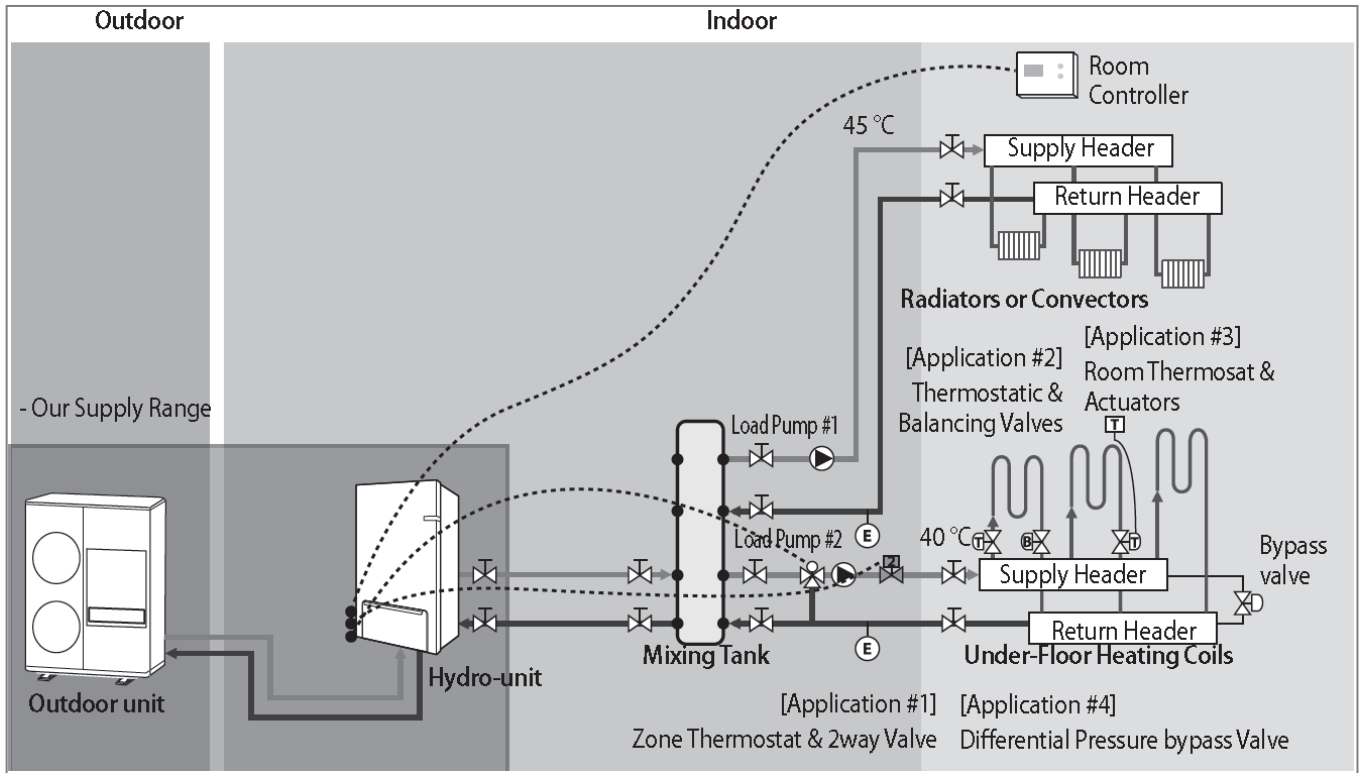


## 1-2. Space Heating + Water Heating

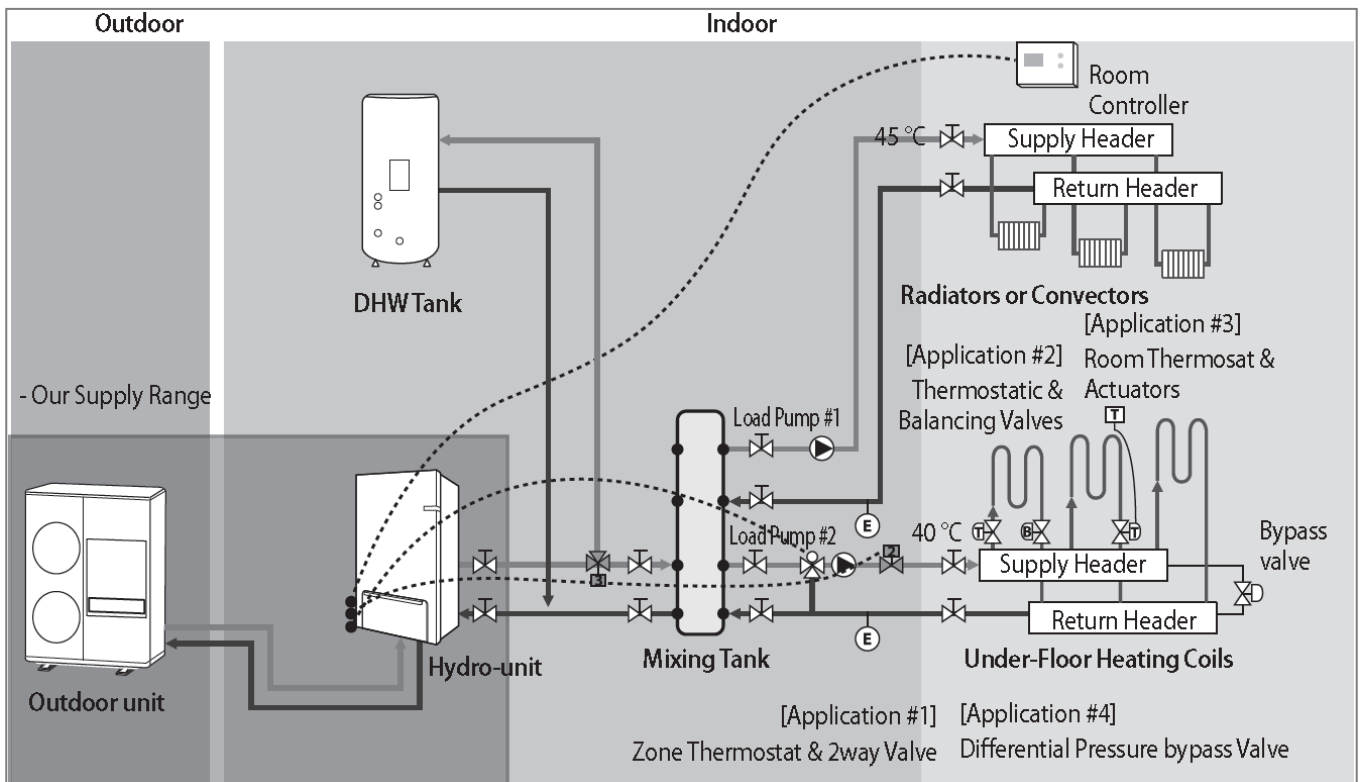


# 1. Application Examples

## 1-3. Hybrid Application (Back-up Boiler & Solar Panel connected)

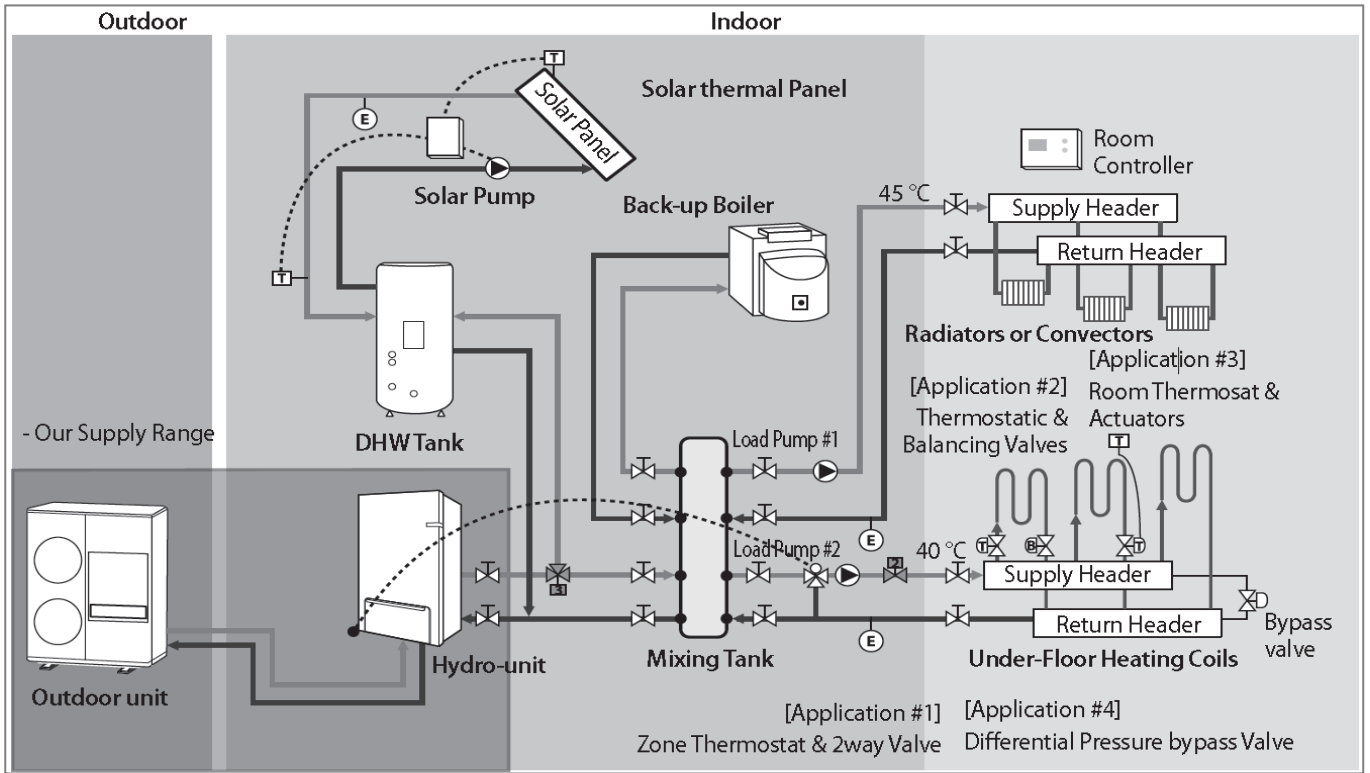


## 2. Mixing Valve


### 1-1. Mixing Valve Installation

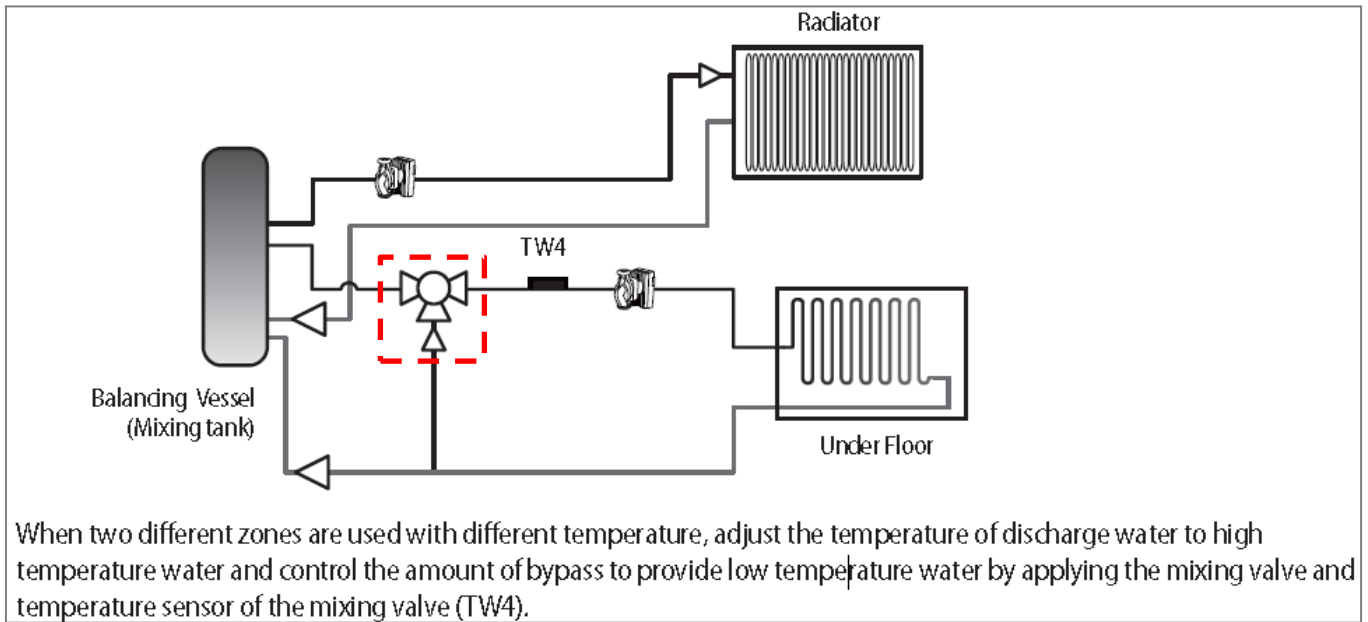

### 1-2. Connection Of Mixing Valve

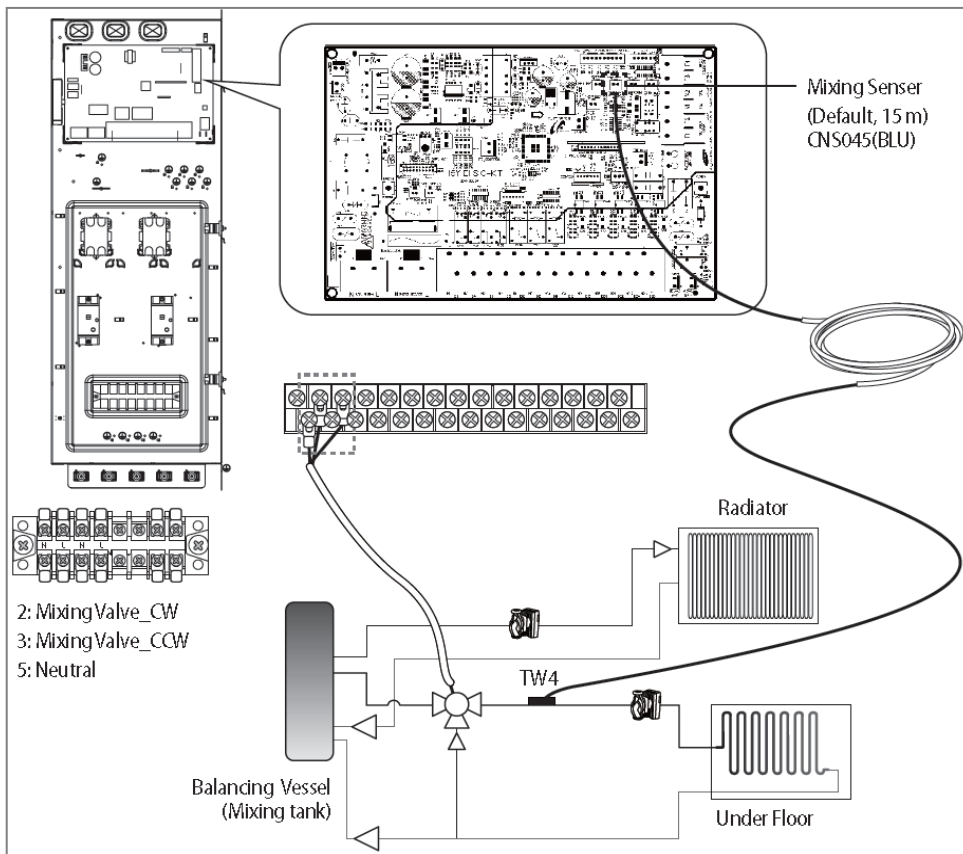

Description	No. of wires	Max. A	Thickness	Supply Scope
Mixing valve	4	22 mA	> 0.75 mm <sup>2</sup> , H05RN-F or H07RH-F	Field supply (230 V~, Input)

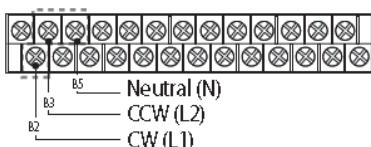

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.




### 3. Installation

#### Installing the unit


##### Space requirements for outdoor unit

##### When installing 1 outdoor unit


(Unit : mm)

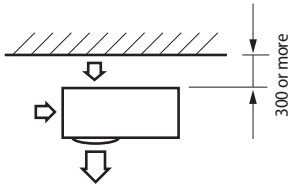


\* When the air outlet is opposite the wall

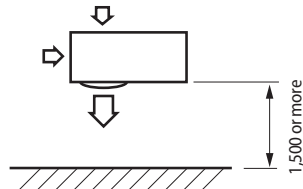


\* When the air outlet is towards the wall

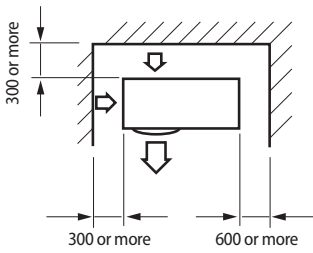


\* When 3 sides of the outdoor unit are blocked by the wall

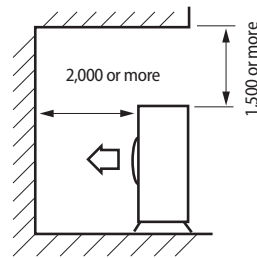

\* The upper part of the outdoor unit and the air outlet is towards the wall

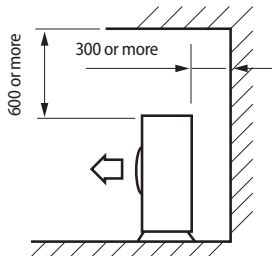


\* The upper part of the outdoor unit and the air outlet is opposite the wall

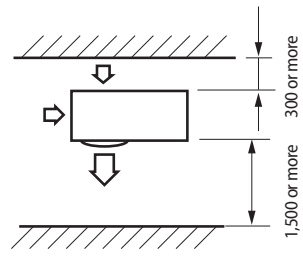


\* When front and rear side of the outdoor unit is towards the wall

### 3. Installation


(Unit : mm)

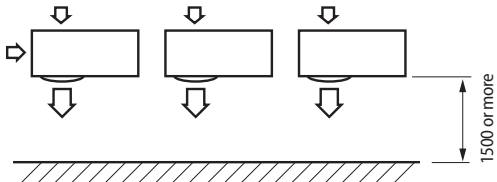


\* When the air outlet is towards the wall

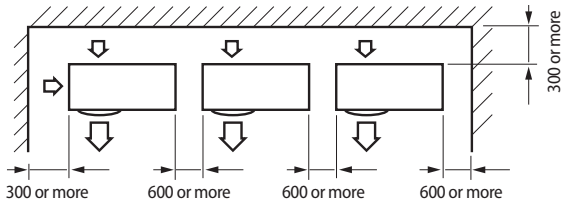


\* When 3 sides of the outdoor unit are blocked by the wall

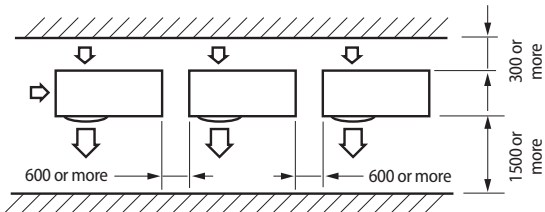

\* When front and rear side of the outdoor unit is towards the wall

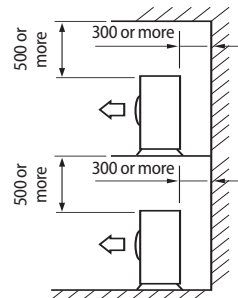

\* The upper part of the outdoor unit and the air outlet is opposite the wall

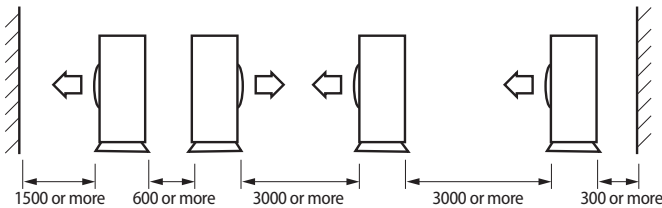

\* When front and rear side of the outdoor unit is towards the wall



The units must be installed according to distances declared, in order to permit accessibility from each side, either to guarantee correct operation of maintenance or repairing products. The unit's parts must be reachable and removable completely under safety condition (for people or things).

#### Outdoor unit installation

The outdoor unit must be installed on a rigid and stable base to avoid any increase in the noise level and vibration, particularly if the outdoor unit is to be installed in a location exposed to strong winds or at a height, the unit must be fixed to an appropriate support (wall or ground).


← Fix the outdoor unit with anchor bolts.



The anchor bolt must be 20mm or higher from the base surface. Anchor bolt hole




- When tightening the anchor bolt, tighten the rubber washer to prevent the outdoor unit bolt connection part from corroding.
- Make a drain outlet around the base for outdoor unit drainage.
- If the outdoor unit is installed on the roof, you have to check the ceiling strength and waterproof the unit.

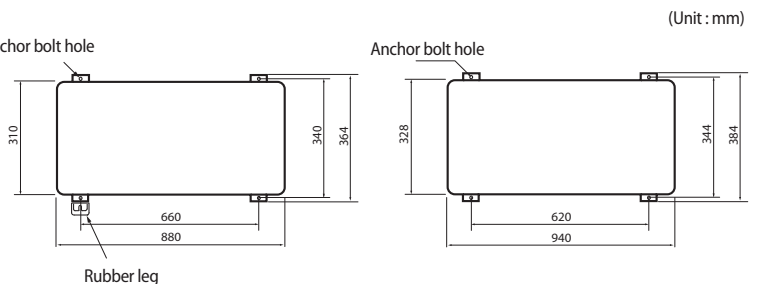

(Unit : mm)

### 3. Installation

#### Outdoor unit support

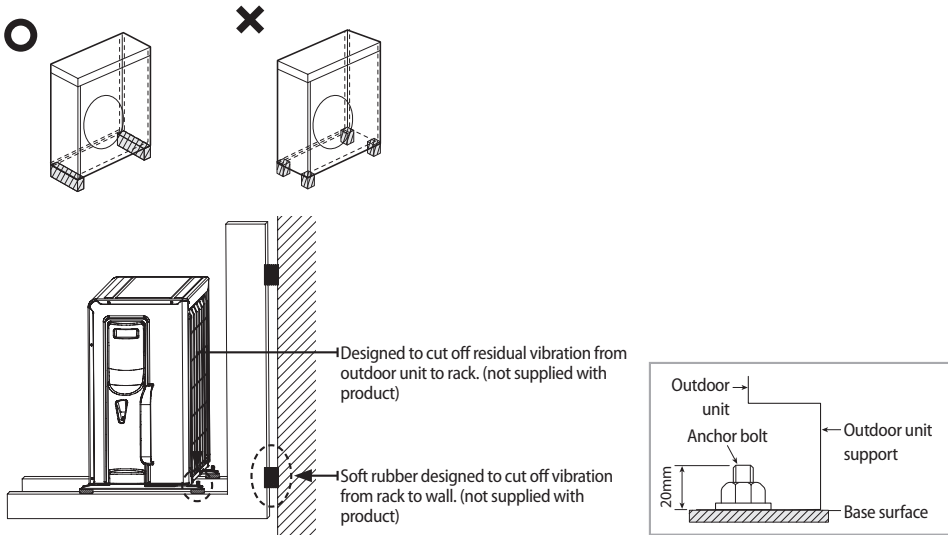

←←Outdoor unit installed on the wall by rack

- Ensure the wall will be able to suspend the weight of rack and outdoor unit ;
- Install the rack close to the column as much as possible ;
- Install proper grommet in order to reduce noise and residual vibration transferred by outdoor unit towards wall.



#### When installing air guide duct


- Check and make sure that screws do not damage the copper pipe.
- Secure air guide duct on guard fan.

### 3. Installation (R410A)

## Electrical connections


### Overall system configuration

#### Connection of the power cable (1 phase 2 wires)

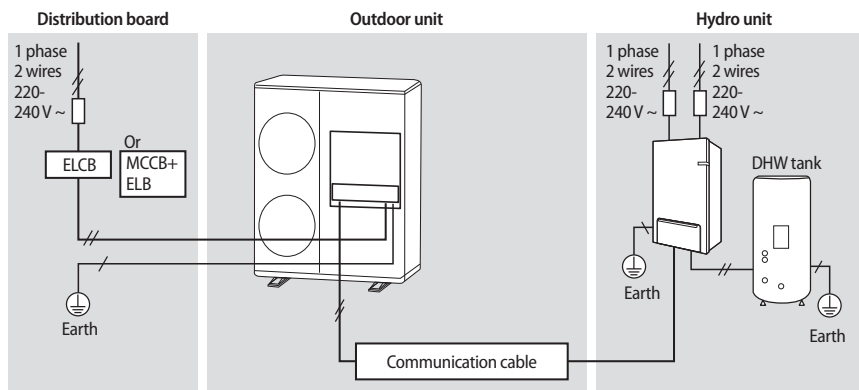

- CAUTION**
- Install cabinet panel near the outdoor unit for the convenience of service and emergency operation off.
  - Make sure to install the circuit breaker with the over-current and electric leakage protection.

#### Connection of the power cable (3 phase 4 wires)

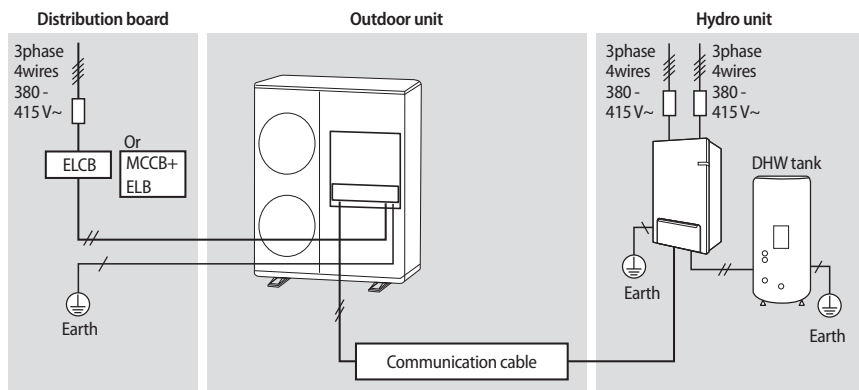

- CAUTION**
- Install cabinet panel near the outdoor unit for the convenience of service and emergency operation off.
  - Make sure to install the circuit breaker with the over-current and electric leakage protection.

### Power cable specifications

#### 1 phase

Outdoor unit	Rated		Voltage Range		MCA	MFA
	Hz	Volts	Min	Max	Min. Circuit Amps.	Max. Fuse Amps.
AE040JXEDEH	50	220-240	198	264	20 A	25 A
AE060JXEDEH					22 A	27.5 A
AE090JXEDEH					28 A	35 A
AE120JXEDEH					30 A	37.5 A
AE140JXEDEH					32 A	40 A
AE160JXEDEH						

←The power cable is not supplied with air to water heat pump.

←Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 57 / CENELEC:H05RN-F)

←This Equipment complies with IEC 61000-3-12.

### 3. Installation (R410A)

#### 3 Phase


Outdoor unit	Rated		Voltage Range		MCA	MFA
	Hz	Volts	Min	Max	Min. Circuit Amps.	Max. Fuse Amps.
AE090JXEDGH	50	380-415	342	457	10 A	16.1 A
AE120JXEDGH	50	380-415	342	457	10 A	16.1 A
AE140JXEDGH	50	380-415	342	457	11 A	16.1 A
AE160JXEDGH	50	380-415	342	457	12 A	16.1 A

- ← The power cable is not supplied with Air to Water Heat pump.
- ← Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 66 / CENELEC:H07RN-F)
- ← This equipment complies with IEC 61000-3-12 provided that the short-circuit power  $S_{sc}$  is greater than or equal to 3.3[MVA] at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power  $S_{sc}$  greater than or equal to 3.3[MVA].

#### Specification of connection cables (common in use)

Power supply	Max/Min(V)	Commuation cable
1Φ, 220-240 V, 50 Hz	±10 %	0.75~1.5 mm <sup>2</sup> , 2 wires
3Φ, 380-415 V, 50 Hz		


← For Power Cable, use the grade H07RN-F or H05RN-F materials.




When installing the indoor unit, outdoor unit use the double shielded (Tape aluminum / polyester braid + copper) cable of FROHH2R type.

#### 1-phase terminal block spec

AC power : M5 screw

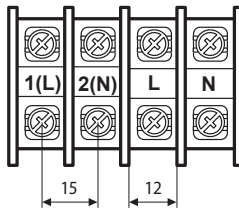


Communication : M4 screw

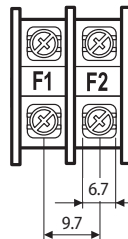


#### 3-phase terminal block spec

AC power : M4 screw

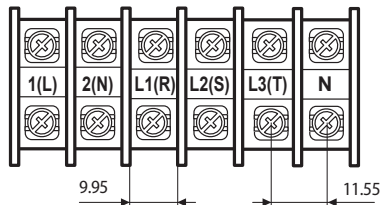


Communication : M4 screw

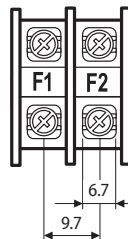

### 3. Installation (R410A)

#### Wiring diagram of power cable

When using ELB for 1 phase and 3 phase

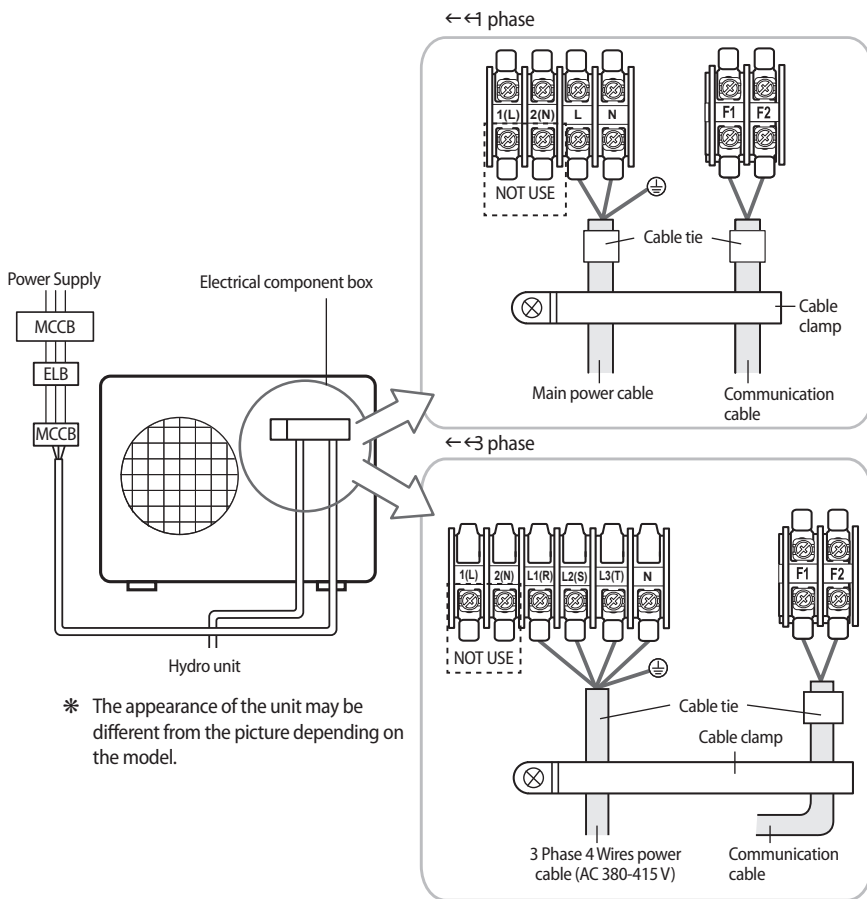


CAUTION


- You should connect the power cable into the power cable terminal and fasten it with a clamp.
- The unbalanced power must be maintained within 2 % of supply rating.
  - If the power is unbalanced greatly, it may shorten the life of the condenser. If the unbalanced power is exceeded over 4 % of supply rating, the indoor unit is protected, stopped and the error mode indicates.
- To protect the product from water and possible shock, you should keep the power cable and the connection cord of the indoor and outdoor units within ducts. (with appropriate IP rating and material selection for your application)
- Ensure that main supply connection is made through a switch that disconnects all poles, with contact gap of a least 3 mm.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Keep distances of 50 mm or more between power cable and communication cable.

### 3. Installation (R410A)

#### 1 phase 2 wires

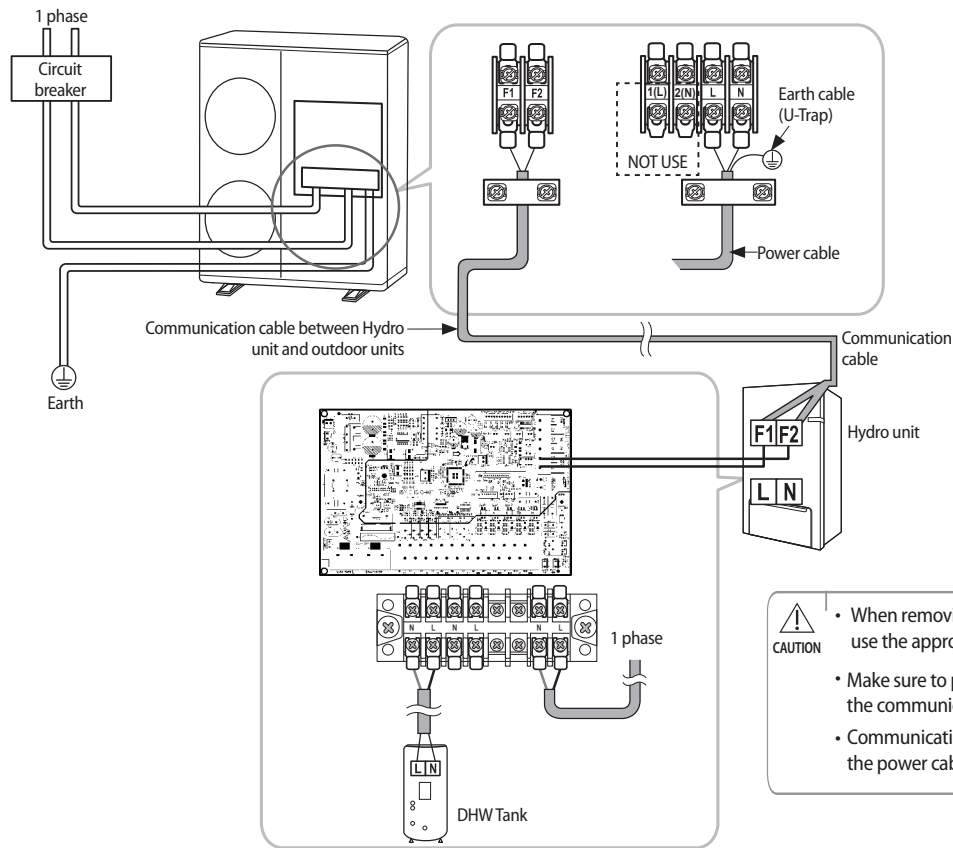

#### 3 phase 4 wires

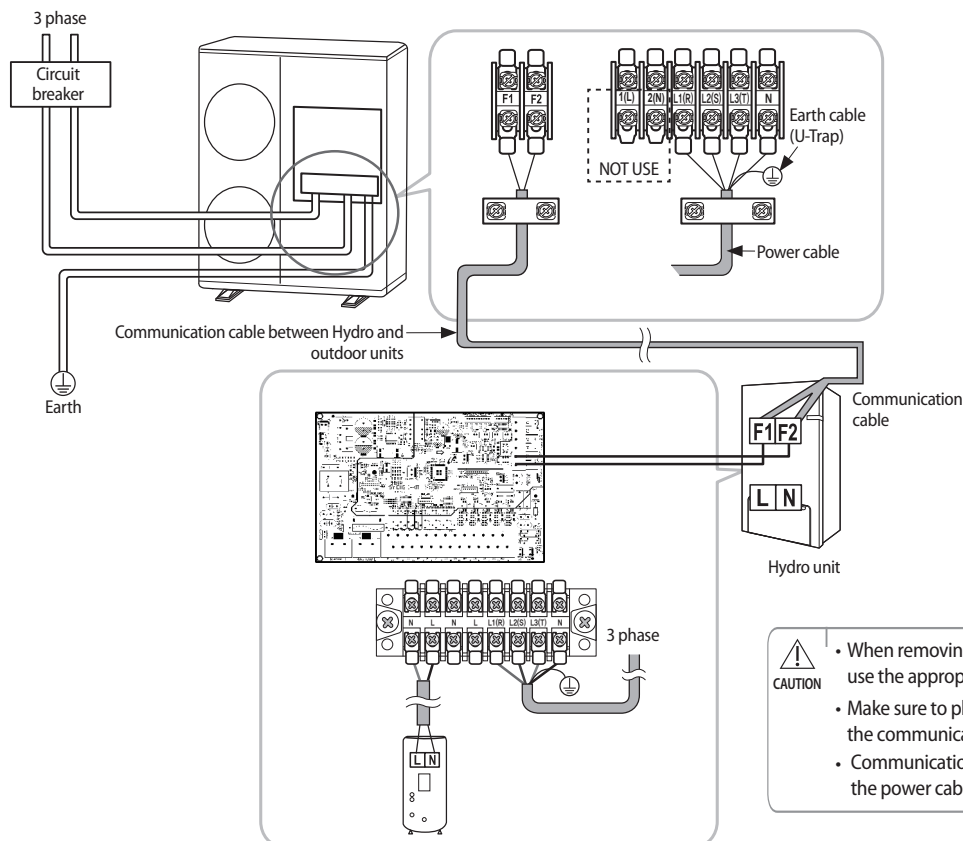

### 3. Installation (R410A)

#### Connecting the power terminal

- ← Connect the cables to the terminal board using the compressed ring terminal.
- ← Connect the rated cables only.
- ← Connect using a wrench which is able to apply the rated torque to the screws.
- ← If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.

Tightening Torque (kgf.cm)	
M4	12~18
M5	20~30

#### Installing the earth wire

- ← Earthing must be done by your installation specialist for your safety.
- ← Use the earth wire by referring to the specification of the electric cable for the outdoor unit.

#### Earthing the power cable


- ← The standard of earthing may vary according to the rated voltage and installation place of the Air to Water Heat Pump.
- ← Earth the power cable according to the following.

Power condition	Installation place		
	High humidity	Average humidity	Low humidity
Electrical potential of lower than 150 V		Perform the earthing work 3. <sup>Note 1)</sup>	Perform the earthing work 3 if possible for your safety. <sup>Note 1)</sup>
Electrical potential of higher than 150 V	Must perform the earthing work 3. <sup>Note 1)</sup> (In case of installing circuit breaker)		


**\* Note 1) Earthing work 3**

- Earthing must be done by your installation specialist.
- Check if the earthing resistance is lower than 100Ω. When installing a circuit breaker that can cut the electric circuit in case of a short circuit, the allowable earthing resistance can be 30~500Ω.

← When using the terminal for earthing only

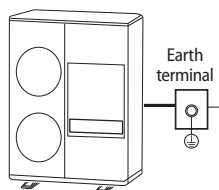

← When using earthing of the switchboard

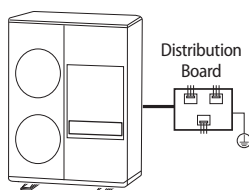



### 3. Installation (R410A)

#### Refrigerant piping work


- ← Install the refrigerant pipe within the maximum allowable length, difference in height and length of after the first branch pipe.
- ← The pressure of the R-410A is high.  
Use only rated refrigerant pipe and follow the installation method.
- ← Use clean refrigerant pipe Where there is no harmful ion, oxide, dust, iron content or moisture.
- ← Use adequate tools and accessories for R-410A.

<b>Manifold gauge</b>	• Use manifold gauge only for R-410A to prevent the inflow of foreign substances.
<b>Vacuum pump</b>	• Use vacuum pump with check valve to prevent pump oil from flowing backward while the vacuum pump is stopped. • Use the vacuum pump that the vacuum induction is available up to 5Torr. (-100.7kPa)
<b>Flare nut</b>	• Use only flare nut supplied with the product.

#### Allowable length of the refrigerant pipe and the installation examples

← AE040JXEDEH, AE060JXEDEH

Outdoor unit

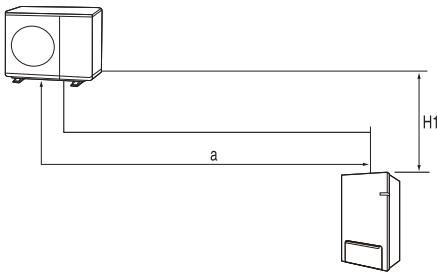


Item		Example		Remarks
Maximum allowable length of pipe	Outdoor unit ~ Hydro unit	Total length	Less than 30m	a ≤ 30m
Maximum allowable height	Outdoor unit ~ Hydro unit	Less than 20m		H1
Additional refrigerant calculation		R=Basic charge + additional charge by the piping length		

\* Contact the manufacturer if the length should exceed.

#### Allowable length of the refrigerant pipe and the installation examples

← AE090JXEDEH, AE120JXEDEH, AE140JXEDEH, AE160JXEDEH, AE090JXEDGH, AE120JXEDGH, AE140JXEDGH, AE160JXEDGH

Outdoor unit

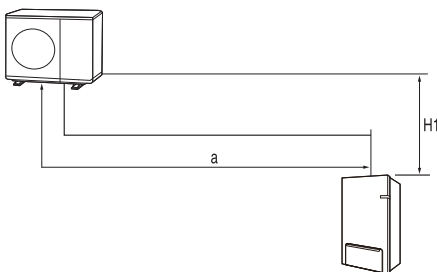

Item		Example		Remarks
Maximum allowable length of pipe	Outdoor unit ~ Hydro unit	Total length	Less than 50 m	a ≤ 50 m
Maximum allowable height	Outdoor unit ~ Hydro unit	Less than 30 m		H1 If outdoor unit is located lower position H1 ≤ 15 m
Additional refrigerant calculation		R=Basic charge + additional charge by the piping length		

Contact the manufacturer if the length should exceed.

### 3. Installation (R410A)

#### Selecting the refrigerant pipe

Outdoor unit capacity (kW)	Liquid side (mm)	Gas side (mm)
AE040XEDEH	ø6.35	ø15.88
AE060XEDEH		
AE090XEDEH	ø6.35	ø15.88
AE120XEDEH	ø9.52	ø15.88
AE140XEDEH	ø9.52	ø15.88
AE160XEDEH	ø9.52	ø15.88
AE090XEDGH	ø6.35	ø15.88
AE120XEDGH	ø9.52	ø15.88
AE140XEDGH	ø9.52	ø15.88
AE160XEDGH	ø9.52	ø15.88

Outer diameter (mm)	Minimum thickness (mm)	Temper grade
ø 6.35	0.7	C1220T-0
ø 9.52	0.7	
ø12.70	0.8	
ø15.88	1.0	
ø15.88	0.8	C1220T-1/2H OR C1220T-H
ø19.05	0.9	
ø22.23	0.9	

\* Temper grade and minimum thickness of the refrigerant pipe

← Install refrigerant pipe depending on the outdoor unit capacity.

← Make sure to use C1220T-1/2H (Semi-hard) pipe for more than ø19.05 mm. In case of using C1220T-0 (Soft) pipe for ø19.05 mm, pipe may be broken, which can result in an injury.

#### Keeping refrigerant pipe clean and dry


← To prevent foreign materials or water from entering the pipe, pipes shall be sealed by caps.

### 3. Installation (R410A)

#### Refrigerant piping work

##### Vacuumping a pipe and an indoor unit

- ← Use the tools for R-410A only to prevent the inflow of foreign substances and resist against the internal pressure.
- ← Use the vacuum pump with the check valve to prevent pump oil from flowing backward while the vacuum pump is stopped suddenly.
- ← Use the vacuum pump that can be vacuumed up to 666.6Pa(5mmHg).
- ← Close the service valve of the liquid side pipe, gas side pipe completely when performing air tightening test or vacuum drying.

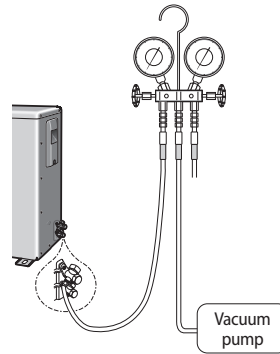

Connect the manifold gauge to the liquid pipe and gas pipe.

Vacuum the liquid pipe and gas pipe using the vacuum pump.

Make sure to install check valve to prevent pump oil from flowing into the pipe.


Vacuum those pipes for more than 2 hours and 30 minutes.

The time of vacuum drying may differ depending on the length of the pipe or outdoor temperature. Perform vacuum drying for at least 2 hours and 30 minutes.

Close the valve after checking the vacuum gauge pressure has reached at -100.7 kPa (gauge pressure).

Check the vacuum pressure using the vacuum gauge.

Check whether the pressure is maintained as -100.7 kPa (gauge pressure), 5 torr, for an hour.

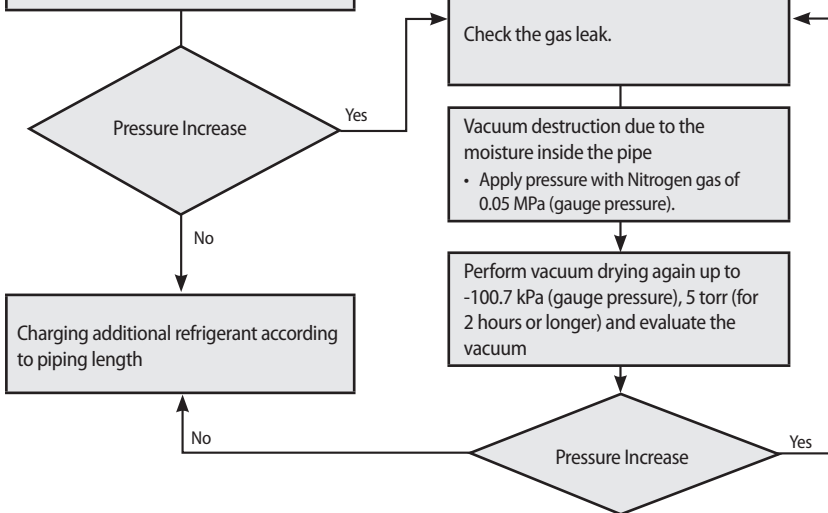

**CAUTION** • If pressure rises in an hour, moisture remains in the pipe work or there is a leak.

### 3. Installation (R410A)

#### Selecting additional refrigerant charge

\* Basic charge

The basic amount of refrigerant for outdoor unit charged in factory is:

Outdoor unit (Series)	Factory charge(kg)
AE040JXEDEH AE060JXEDEH	1.4
AE090JXEDEH	1.7
AE120JXEDEH	2.98
AE140JXEDEH	2.98
AE160JXEDEH	2.98
AE090JXEDGH	1.9
AE120JXEDGH	2.98
AE140JXEDGH	2.98
AE160JXEDGH	2.98

\* Charge additional refrigerant according to the total length of the pipe.

Each factory charging values are determined according to basic pipe length 15 m.

When extra pipe length are required, additional charging works must be implemented as describes below.

#### Refrigerant Charging

\* Additional charging amount is determined based on liquid pipe specifications.

Outdoor unit of liquid	ø6.35	ø9.52
Additional charging (g)	20 g/m	50 g/m

$$\text{Additional Charge(g)} = (L1-15) \times 20$$

$$\text{Additional Charge(g)} = (L2-15) \times 50$$



- L1: Total length of liquid pipe Ø 6.35(m)\_Model : \*\*090\*\*
- L2: Total length of liquid pipe Ø 9.52(m)\_Model : \*\*120/140/160\*\*

Ex) Total length of liquid pipe =20 m

$$\Phi 6.35 = (20\text{m}-15\text{m}) \times 20\text{g/m} = 100 \text{ g (Model : **090**)}$$

$$\Phi 9.52 = (20\text{m}-15\text{m}) \times 50\text{g/m} = 250 \text{ g (Model : **120/140/160**)}$$

### 3. Installation (R410A)

#### Charging refrigerant

- ▶ The R-410A refrigerant is blended refrigerant. Add only liquid refrigerant.
- ▶ Measure the quantity of the refrigerant according to the length of the liquid side pipe. Add quantity of the refrigerant using a scale.

#### Important information regulation regarding the refrigerant used

This product contains fluorinated greenhouse gases. Do not vent gases into the atmosphere.



- Inform user if system contains 5 tCO<sub>2</sub>e or more of fluorinated greenhouse gases. In this case, it has to be checked for leakage at least once every 12 months, according to regulation n°517/2014. This activity has to be covered by qualified personnel only.
- In case situation above (5 tCO<sub>2</sub>e or more of R-410A), installer (or recognized person which has responsibility for final check) has to provide a maintenance book, with all the information recorded according to REGULATION (EU) No 517/2014 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on fluorinated greenhouse gases.


Please fill in the following indelible ink on the refrigerant charge label supplied with this product on and on this manual.

- ▶ ① The factory refrigerant charge of the product.
- ▶ ② The additional refrigerant amount charged in the field.
- ▶ ①+② The total refrigerant charge.



- a Factory refrigerant charge of the product: See unit name plate.
- b Additional refrigerant amount charged in the field. (Refer to the above information for the quantity of refrigerant replenishment.)
- c Total refrigerant charge.
- d Refrigerant cylinder and manifold for charging.

Refrigerant type	GWP value
R-410A	2088
• GWP=Global Warming Potential	
• Calculating tCO <sub>2</sub> e : kg x GWP / 1000	

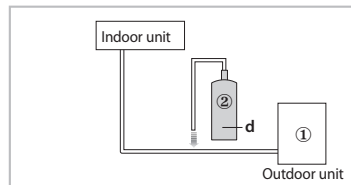


Unit	kg	tCO <sub>2</sub> e
①, a		
②, b		
①+②, c		

- ▶ Before charging, check whether the refrigerant cylinder has a siphon attached or not and position the cylinder accordingly.


#### Charging using a cylinder with a siphon attached

Charge the liquid refrigerant with the cylinder in upright position.

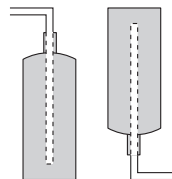

#### Charging using a cylinder without a siphon attached

Charge the liquid refrigerant with the cylinder in up-side-down position.




### 3. Installation (R410A)


#### Adding refrigerant

- ▶ The R-410A refrigerant is blended refrigerant. Add only liquid refrigerant.
- ▶ Measure the quantity of the refrigerant depending on the length of the liquid side pipe. Add fixed quantity of the refrigerant using a scale.

#### \* Adding refrigerants in cooling conditions

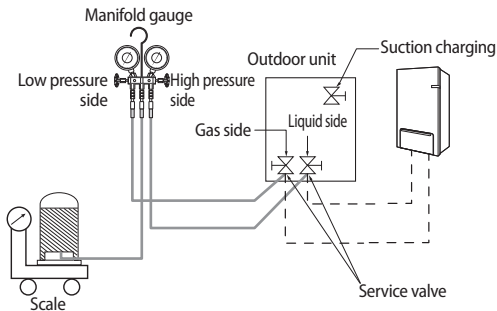

#### \* Adding refrigerants in heating conditions

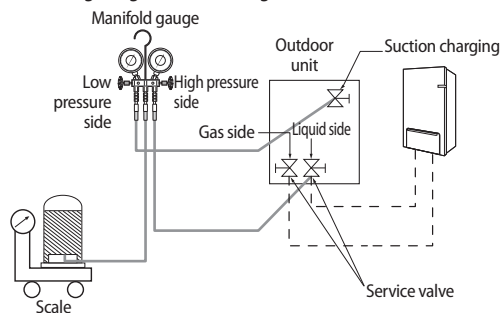

- ▶ Connect the manifold gauge and purge the manifold gauge.
- ▶ Open the manifold gauge valve of the liquid side service valve and add the liquid refrigerant.
- ▶ If you cannot fully recharge the additional refrigerant while the outdoor unit is stopped, use the key on the outdoor unit PCB to recharge the remaining refrigerant.
- ▶ Adding the cooling refrigerant
  - 1) Press the function key for adding refrigerant in cooling mode.
  - 2) After 20 minutes of operation, open the valve on gas side.
  - 3) Open the valve for low pressure side on the manifold gauge to recharge the remaining refrigerant.
- ▶ Adding the heating refrigerant
  - 1) When recharging the heating refrigerant, connect the low pressure pipe from manifold gage to the suction charging port.
  - 2) Press the function key for adding refrigerant in heating mode.
  - 3) After 20 minutes of operation, open the valve on suction charge port.
  - 4) Open the valve for low pressure side on the manifold gage to recharge the remaining refrigerant.


- CAUTION** • Open the gas side and liquid side service valve completely after charging the refrigerant. (If you operate the Air to Water Heat Pump with the service valve closed, the important parts may be damaged.)

### 3. Installation (R32)

#### Electrical connections


##### Overall system configuration

##### Connection of the power cable (1 phase 2 wires)

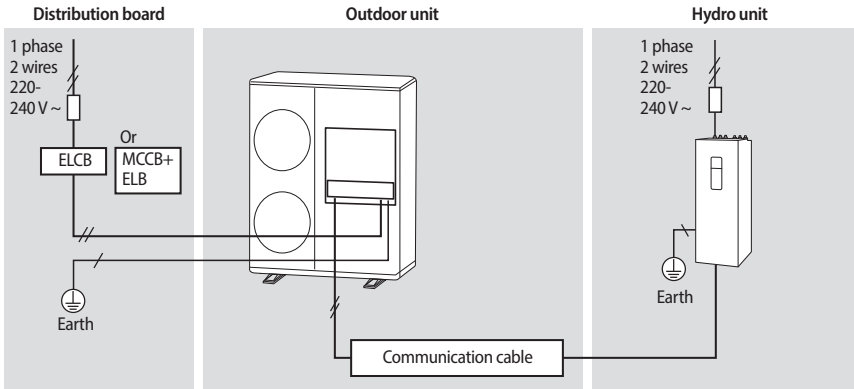

- CAUTION**
- Install cabinet panel near the outdoor unit for the convenience of service and emergency operation off.
  - Make sure to install the circuit breaker with the over-current and electric leakage protection.

##### Connection of the power cable (3 phase 4 wires)

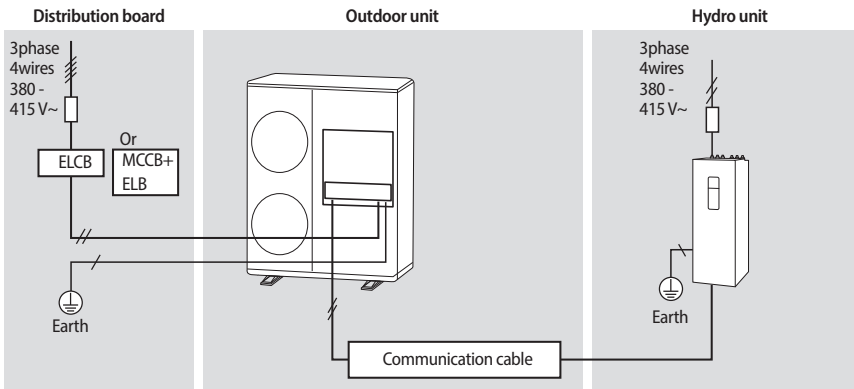

- CAUTION**
- Install cabinet panel near the outdoor unit for the convenience of service and emergency operation off.
  - Make sure to install the circuit breaker with the over-current and electric leakage protection.

### Connecting the cable

#### Power cable specifications

##### 1 phase

Outdoor unit	Rated		Voltage Range		MCA		MFA	
	Hz	Volts	Min	Max	Min. Circuit Amps.	Max. Fuse Amps.		
AE040RXEDEG	50	220-240	198	264	16.0 A	20.0 A		
AE060RXEDEG	50	220-240	198	264	16.0 A	20.0 A		
AE090RXEDEG	50	220-240	198	264	22 A	27.5 A		

- ←The power cable is not supplied with Air to Water Heat pump.
- ←Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 57 / CENELEC:H05RN-F)
- ←This Equipment complies with IEC 61000-3-12.

##### 3 Phase

Outdoor unit	Rated		Voltage Range		MCA		MFA	
	Hz	Volts	Min	Max	Min. Circuit Amps.	Max. Fuse Amps.		
AE090RXEDGG	50	380-415	342	457	10 A	16.1 A		


- ←The power cable is not supplied with Air to Water Heat pump.
- ←Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 66 / CENELEC:H07RN-F)
- ←This equipment complies with IEC 61000-3-12 provided that the short-circuit power  $S_{sc}$  is greater than or equal to 3.3[MVA] at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power  $S_{sc}$  greater than or equal to 3.3[MVA].

### 3. Installation (R32)

#### Specification of connection cables (common in use)

Power supply	Max/Min(V)	Commuation cable
1Φ, 220-240 V, 50 Hz	±10 %	0.75~1.5 mm <sup>2</sup> , 2 wires
3Φ, 380-415 V, 50 Hz		

←←For Power Cable, use the grade H07RN-F or H05RN-F materials.

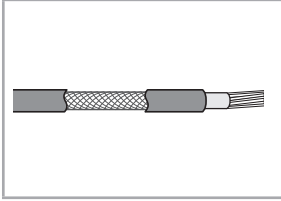


←←Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F or IEC:60245 IEC 66 / CENELEC: H07RN-F)


←←When installing the outdoor unit in a computer room or net work room, server room or in the presence of risk of disturbance to the communication cable, use the double shielded (tape aluminium / polyester braid + copper ) cable of FROHH2R type.

#### 1-phase terminal block spec

AC power : M5 screw

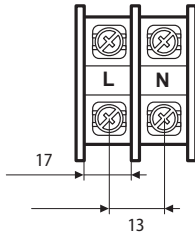


Communication : M4 screw

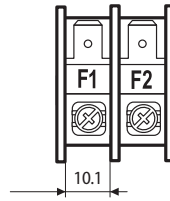


#### 3-phase terminal block spec

AC power : M4 screw

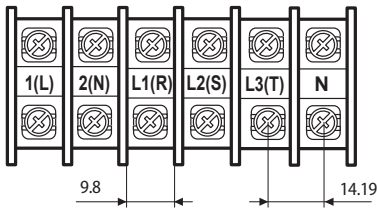

Communication : M4 screw

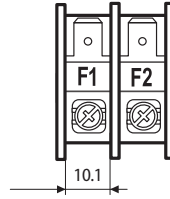




### 3. Installation (R32)

#### Connecting the cable

##### Wiring diagram of power cable

When using ELB for 1 phase and 3 phase

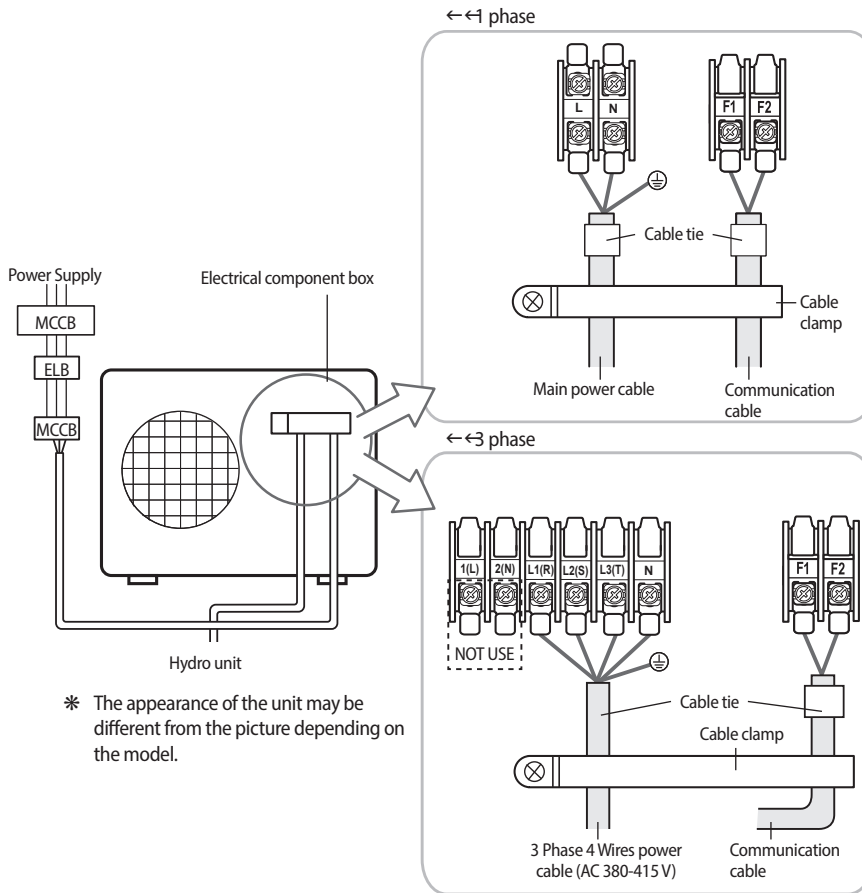


CAUTION

- You should connect the power cable into the power cable terminal and fasten it with a clamp.
- The unbalanced power must be maintained within 2 % of supply rating.
  - If the power is unbalanced greatly, it may shorten the life of the condenser. If the unbalanced power is exceeded over 4 % of supply rating, the indoor unit is protected, stopped and the error mode indicates.
- To protect the product from water and possible shock, you should keep the power cable and the connection cord of the indoor and outdoor units within ducts. (with appropriate IP rating and material selection for your application)
- Ensure that main supply connection is made through a switch that disconnects all poles, with contact gap of a least 3 mm.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Keep distances of 50 mm or more between power cable and communication cable.


### 3. Installation (R32)

#### 1 phase 2 wires

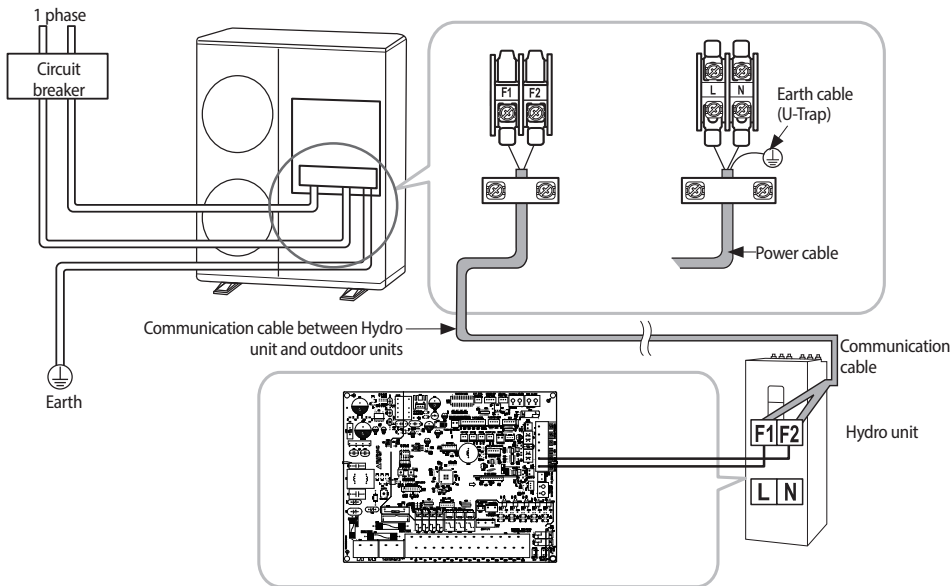

- When removing the outer cover of the power cable, use the appropriate tools to prevent damaging the inner cover.
- Make sure to place the outer cover of the power cable and the communication cable, at least 20 mm into the electrical parts.
- Communication wiring should be done separately from the power cable and other communication cables.

#### 3 phase 4 wires

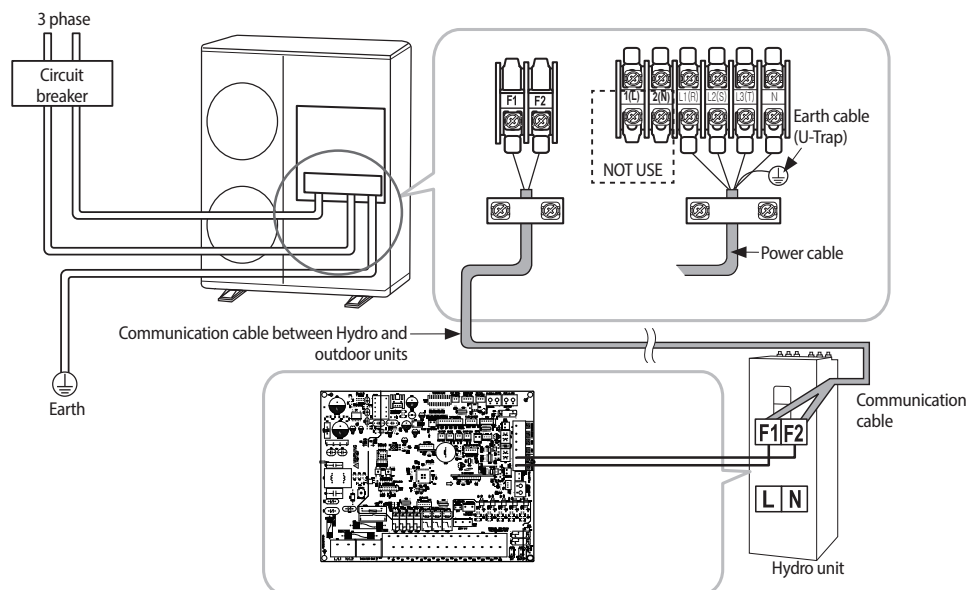

- When removing the outer cover of the power cable, use the appropriate tools to prevent damaging the inner cover.
- Make sure to place the outer cover of the power cable and the communication cable, at least 20 mm into the electrical parts.
- Communication wiring should be done separately from the power cable and other communication cables.

### 3. Installation (R32)

#### Connecting the power terminal

- ←←Connect the cables to the terminal board using the compressed ring terminal.
- ←←Connect the rated cables only.
- ←←Connect using a wrench which is able to apply the rated torque to the screws.
- ←←If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.

Tightening Torque (kgf.cm)	
M4	12~18
M5	20~30



- For the product that uses the R-32 refrigerant, be cautious not to generate a spark by keeping the following requirements:
  - Do not remove the fuses with power on.
  - Do not disconnect the power plug from the wall outlet with power on.
  - It is recommended to locate the outlet in a high position. Place the cords so that they are not tangled.

#### Installing the earth wire

- ←←Earthing must be done by your installation specialist for your safety.
- ←←Use the earth wire by referring to the specification of the electric cable for the outdoor unit.

#### Earthing the power cable


- ←←The standard of earthing may vary according to the rated voltage and installation place of the Air to Water Heat Pump.
- ←←Earth the power cable according to the following.

Power condition	Installation place		
	High humidity	Average humidity	Low humidity
Electrical potential of lower than 150 V		Perform the earthing work 3. <small>Note 1)</small>	Perform the earthing work 3 if possible for your safety. <small>Note 1)</small>
Electrical potential of higher than 150 V		Must perform the earthing work 3. <small>Note 1)</small> (In case of installing circuit breaker)	


**\* Note 1) Earthing work 3**

- Earthing must be done by your installation specialist.
- Check if the earthing resistance is lower than 100Ω. When installing a circuit breaker that can cut the electric circuit in case of a short circuit, the allowable earthing resistance can be 30~500Ω.

←←When using the terminal for earthing only

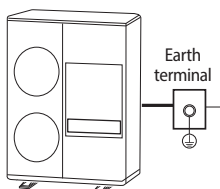

←←When using earthing of the switchboard

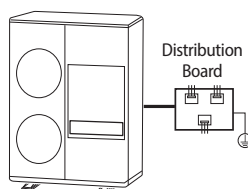


### 3. Installation (R32)

#### Refrigerant piping work

- ← Install the refrigerant pipe within the maximum allowable length, difference in height and length of after the first branch pipe.
- ← The pressure of the R-32 is high.
  - Use only rated refrigerant pipe and follow the installation method.
- ← Use clean refrigerant pipe Where there is no harmful ion, oxide, dust, iron content or moisture.
- ← Use adequate tools and accessories for R-32.

<b>Manifold gauge</b>	• Use manifold gauge only for R-32 to prevent the inflow of foreign substances.
<b>Vacuum pump</b>	• Use vacuum pump with check valve to prevent pump oil from flowing backward while the vacuum pump is stopped. • Use the vacuum pump that the vacuum induction is available up to 5Torr. (-100.7kPa)
<b>Flare nut</b>	• Use only flare nut supplied with the product.

#### Allowable length of the refrigerant pipe and the installation examples

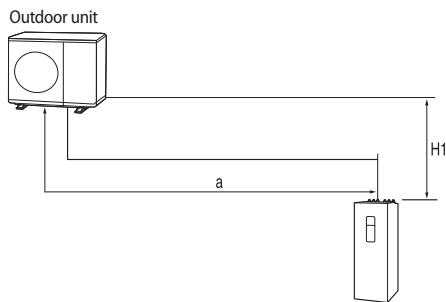

#### AE040/060RXEDEG

Item				Example	Remarks
Maximum allowable length of pipe	Outdoor unit ~ Hydro unit	Total length	Less than 30 m	a ≤ 30 m	
Maximum allowable height	Outdoor unit ~ Hydro unit	Less than 20 m		H1	If outdoor unit is located lower position H1 ≤ 15 m
Additional refrigerant calculation		R=Basic charge + additional charge by the piping length			

Contact the manufacturer if the length should exceed.

#### AE090RXED\*G

Item				Example	Remarks
Maximum allowable length of pipe	Outdoor unit ~ Hydro unit	Total length	Less than 35 m	a ≤ 35 m	
Maximum allowable height	Outdoor unit ~ Hydro unit	Less than 20 m		H1	If outdoor unit is located lower position H1 ≤ 15 m
Additional refrigerant calculation		R=Basic charge + additional charge by the piping length			

Contact the manufacturer if the length should exceed.

#### Selecting the refrigerant pipe

Outdoor unit capacity (kW)	Liquid side (mm)	Gas side (mm)
AE040RXEDEG	ø6.35	ø15.88
AE060RXEDEG	ø6.35	ø15.88
AE090RXEDEG	ø6.35	ø15.88
AE090RXEDGG	ø6.35	ø15.88

Outer diameter (mm)	Minimum thickness (mm)	Temper grade
ø 6.35	0.7	C1220T-0
ø 9.52	0.7	
ø12.70	0.8	
ø15.88	1.0	
ø15.88	0.8	C1220T-1/2H OR C1220T-H
ø19.05	0.9	
ø22.23	0.9	

- ← Install refrigerant pipe depending on the outdoor unit capacity.
- ← Make sure to use C1220T-1/2H (Semi-hard) pipe for more than ø19.05 mm. In case of using C1220T-0 (Soft) pipe for ø19.05 mm, pipe may be broken, which can result in an injury.



\* Temper grade and minimum thickness of the refrigerant pipe

### 3. Installation (R32)

#### Refrigerant piping work

##### Vacuum drying


- ← Use the tools for R-32 only to prevent the inflow of foreign substances and resist against the internal pressure.
- ← Use the vacuum pump with the check valve to prevent pump oil from flowing backward while the vacuum pump is stopped suddenly.
- ← Use the vacuum pump that can be vacuumed up to 666.6Pa(5 mmHg).
- ← Close the service valve of the liquid side pipe, gas side pipe completely when performing air tightening test or vacuum drying.

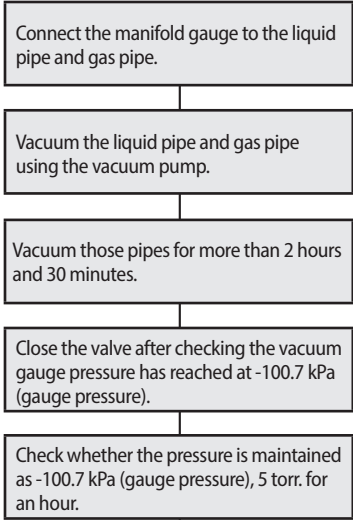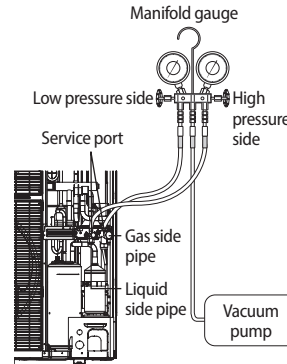

Make sure to install check valve to prevent pump oil from flowing into the pipe.

The time of vacuum drying may differ depending on the length of the pipe or outdoor temperature. Perform vacuum drying for at least 2 hours and 30 minutes.

Check the vacuum pressure using the vacuum gauge.

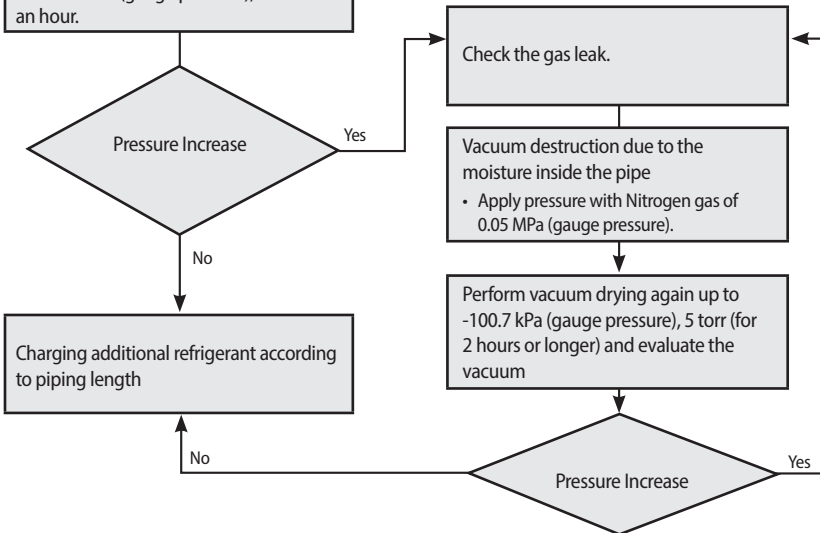

• If the pressure rises in an hour, either water remains inside the pipe, or there will be a leak.

### 3. Installation (R32)

#### Selecting additional refrigerant charge

##### \* Basic charge

The basic amount of refrigerant for outdoor unit charged in factory is:

Outdoor unit (Series)	Factory charge(kg)
AE040RXEDEG	1.2
AE060RXEDEG	
AE090RXEDEG	1.4
AE090RXEDGG	

- \* Charge additional refrigerant according to the total length of the pipe.  
Each factory charging values are determined according to basic pipe length 15 m.  
When extra pipe length are required, additional charging works must be implemented as describes below.

#### Refrigerant Charging

- \* Additional charging amount is determined based on liquid pipe specifications.

Outdoor unit of liquid	ø6.35
Additional charging (g)	20 g/m

$$\text{Additional Charge(g)} = (L1-15) \times 20$$



- L1: Total length of liquid pipe ø 6.35(m)

Ex) Total length of liquid pipe =20 m

$$\Phi 6.35 = (20\text{m}-15\text{m}) \times 20\text{g/m} = 100 \text{ g (Model : AE040/060RXEDEG)}$$

#### Precautions on adding the R-32 refrigerant

In addition to the conventional charging procedure, the following requirements shall be kept.

- ← Make sure that contamination by other refrigerants does not occur for charging.
- ← To minimize the amount of refrigerant, keep the hoses and lines as short as possible.
- ← The cylinders shall be kept upright.
- ← Make sure that the refrigeration system is earthed before charging.
- ← Label the system after charging, if necessary.
- ← Extreme care is required not to overcharge the system.
- ← Before recharging, the pressure shall be checked with nitrogen blowing.
- ← After charging, check for leakage before commissioning.
- ← Be sure to check for leakage before leaving the work area.

### 3. Installation (R32)

#### Charging refrigerant

← ← Measure the quantity of the refrigerant according to the length of the liquid side pipe. Add quantity of the refrigerant using a scale.

#### Important information: regulation regarding the refrigerant used

This product contains fluorinated greenhouse gases. Do not vent gases into the atmosphere.


**CAUTION**

- Inform user if the system contains 5 tCO<sub>2</sub>e or more of fluorinated greenhouse gases. In this case, it must be checked for leakage at least once every 12 months, according to regulation No. 517/2014. This activity must be covered by qualified personnel only. In the case of the situation above, the installer (or authorized person with responsibility for final check) must provide a maintenance book, with all the information recorded, according to REGULATION (EU) No. 517/2014 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on fluorinated greenhouse gases.

Please fill in the following indelible ink on the refrigerant charge label supplied with this product on and on this manual.

- ← ① The factory refrigerant charge of the product.
- ← ② The additional refrigerant amount charged in the field.
- ← ①+② The total refrigerant charge.

- NOTE**
- Factory refrigerant charge of the product: See unit name plate.
  - Additional refrigerant amount charged in the field. (Refer to the above information for the quantity of refrigerant replenishment.)
  - Total refrigerant charge.
  - Refrigerant cylinder and manifold for charging.

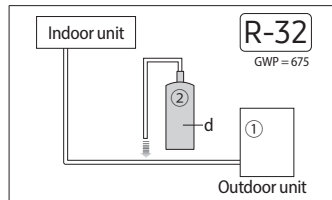

Unit	kg	tCO <sub>2</sub> e
①, a		
②, b		
① + ②, c		


Refrigerant type	GWP value
R-32	675

- \* GWP: Global Warming Potential
- \* Calculating tCO<sub>2</sub>e: kg x GWP/1000

← ← Before charging, check whether the refrigerant cylinder has a siphon attached or not and position the cylinder accordingly.

#### Charging using a cylinder with a siphon attached

Charge the liquid refrigerant with the cylinder in upright position.

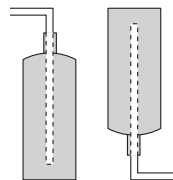

#### Charging using a cylinder without a siphon attached

Charge the liquid refrigerant with the cylinder in up-side-down position.

**CAUTION**

- The filled-out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the stop valve cover).
- Make sure that the total refrigerant charge does not exceed (A), the maximum refrigerant charge, which is calculated in the following formula: Maximum refrigerant charge (A) = factory refrigerant charge (B) + maximum additional refrigerant charge due to piping extension (C).
- Here below, the summary table with refrigerant charge limits for each products.

(Unit : g)


Model	A	B	C
AE040/060RXEDEG	1,500	1,200	300
AE090RXED**	1,800	1,400	400

### 3. Installation (R32)


#### Adding refrigerant

←←Measure the quantity of the refrigerant depending on the length of the liquid side pipe. Add fixed quantity of the refrigerant using a scale.

\* Adding refrigerants in cooling conditions

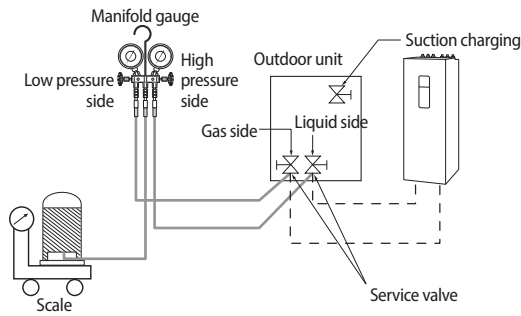

\* Adding refrigerants in heating conditions

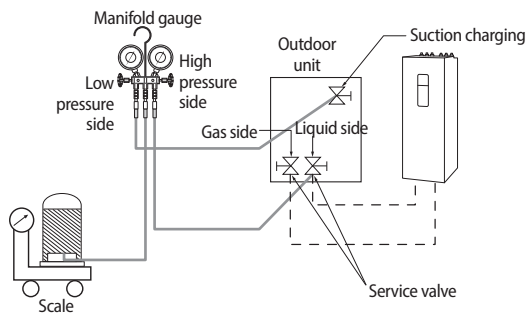

←←Connect the manifold gauge and purge the manifold gauge.

←←Open the manifold gauge valve of the liquid side service valve and add the liquid refrigerant.

←←If you cannot fully recharge the additional refrigerant while the outdoor unit is stopped, use the key on the outdoor unit PCB to recharge the remaining refrigerant.

←←Adding the cooling refrigerant

- 1) Press the function key for adding refrigerant in cooling mode.
- 2) After 20 minutes of operation, open the valve on gas side.
- 3) Open the valve for low pressure side on the manifold gauge to recharge the remaining refrigerant.



# SAMSUNG

**Samsung Electronics Co., LTD.**  
**B2B PM / SE**

Head Office (Suwon Korea) 129, Samsung-Ro, Yeongtong-Gu, Suwon City, Gyeonggi-Do, Korea 443-742  
Website : [www.samsung.com](http://www.samsung.com) Email : [airconditioner@samsung.com](mailto:airconditioner@samsung.com)  
Images and data in this book may subject to change without prior notice.

**SAMSUNG**